

Practical 2


Aim: Deploy Service Manager 2019 and install on 2 Computer Scenario and Setup SQL Server reporting Service using Service Manager 2019

Writeup:


[illegible]

Step 1: We have to establish a connection with a Domain Controller and a User (SQL Server).


- Domain Controller has already been created in the previous practical and we have to only create the new SQL Server.
- For this create a New VM.
- Click on **Create new Virtual Machine**

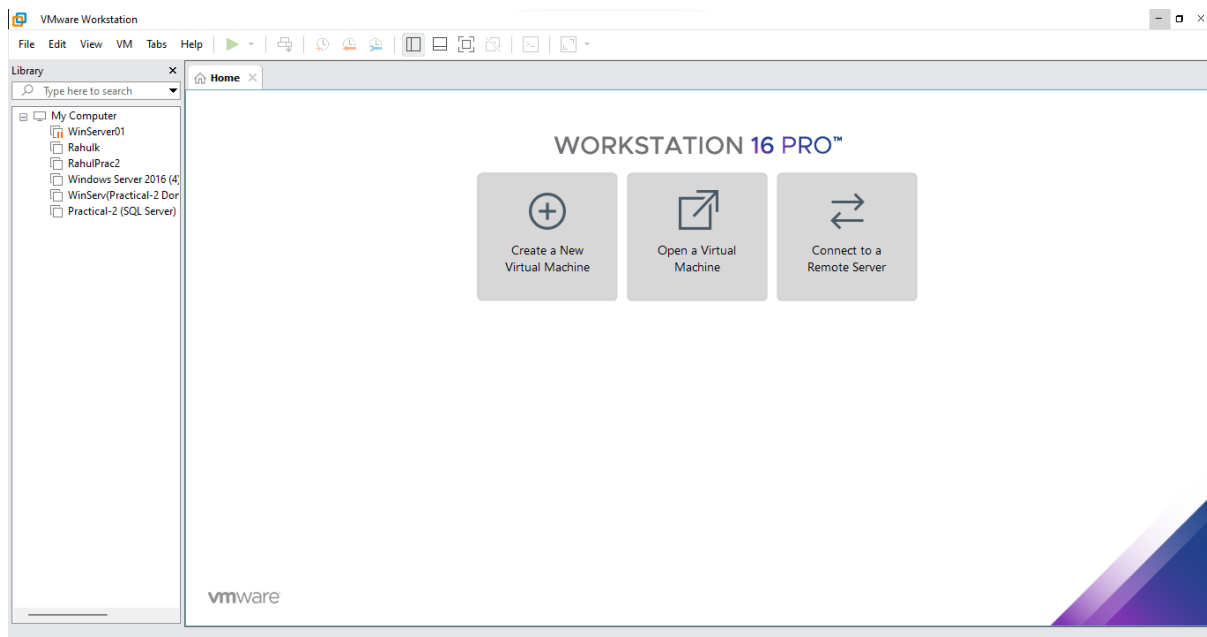


- Select Custom and Click **Next**

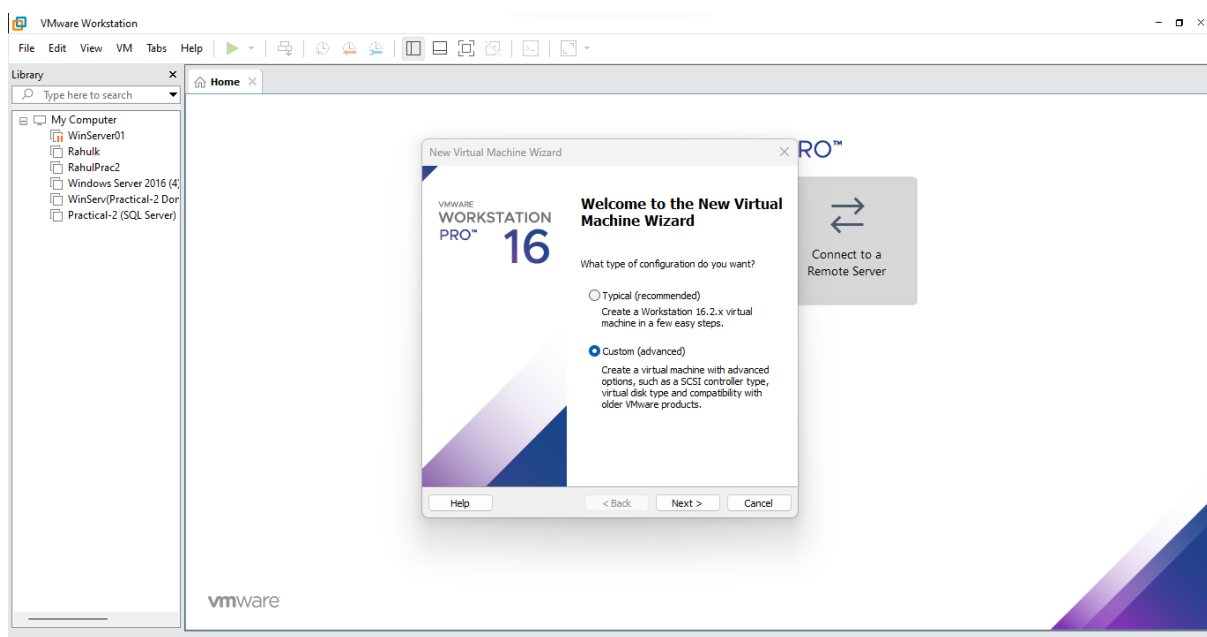


- Keep default values and Click **Next**

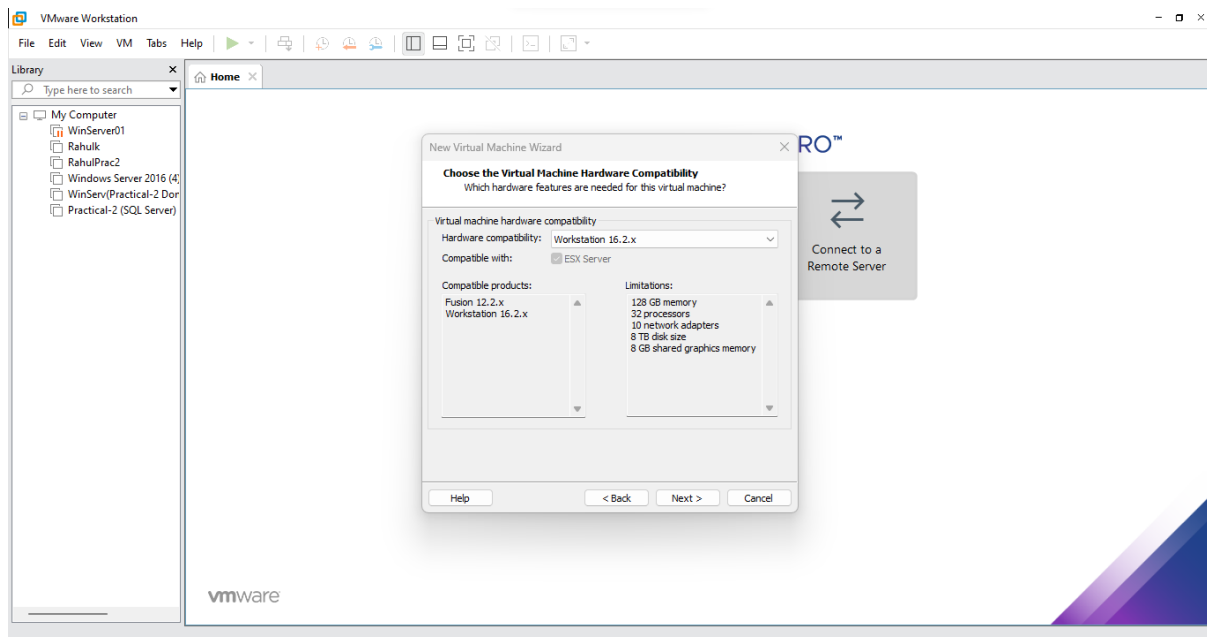


- Select **installer disc image file** and browse your Directory for the **Windows Server 2016 iso file**

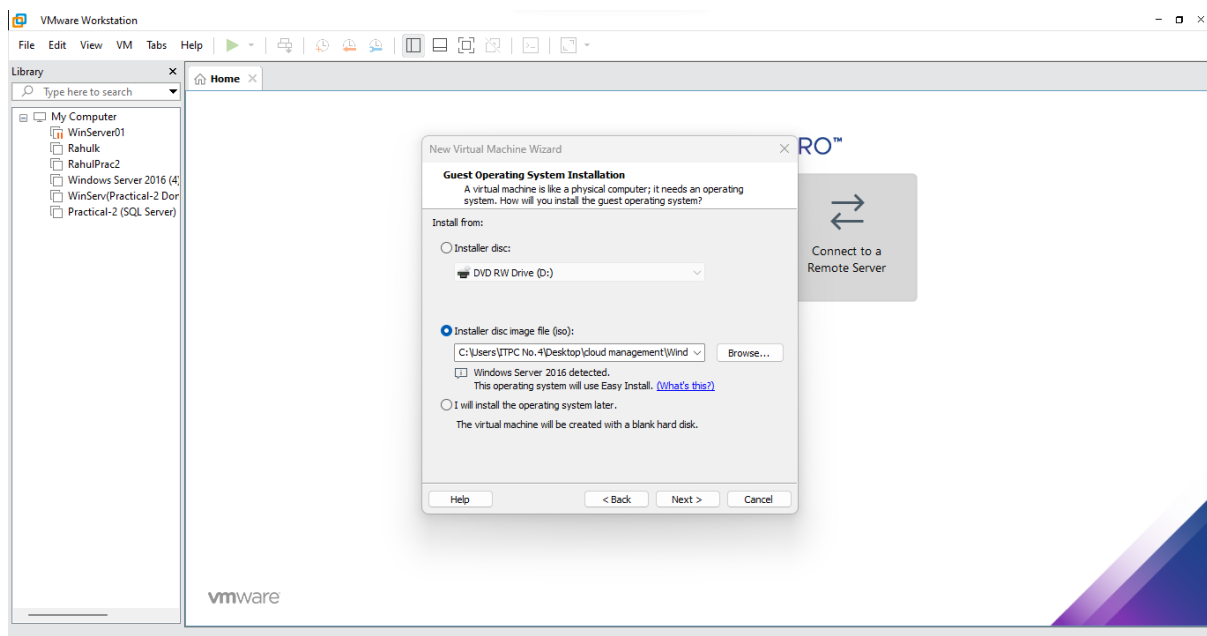


- Keep default values and Click **Next**

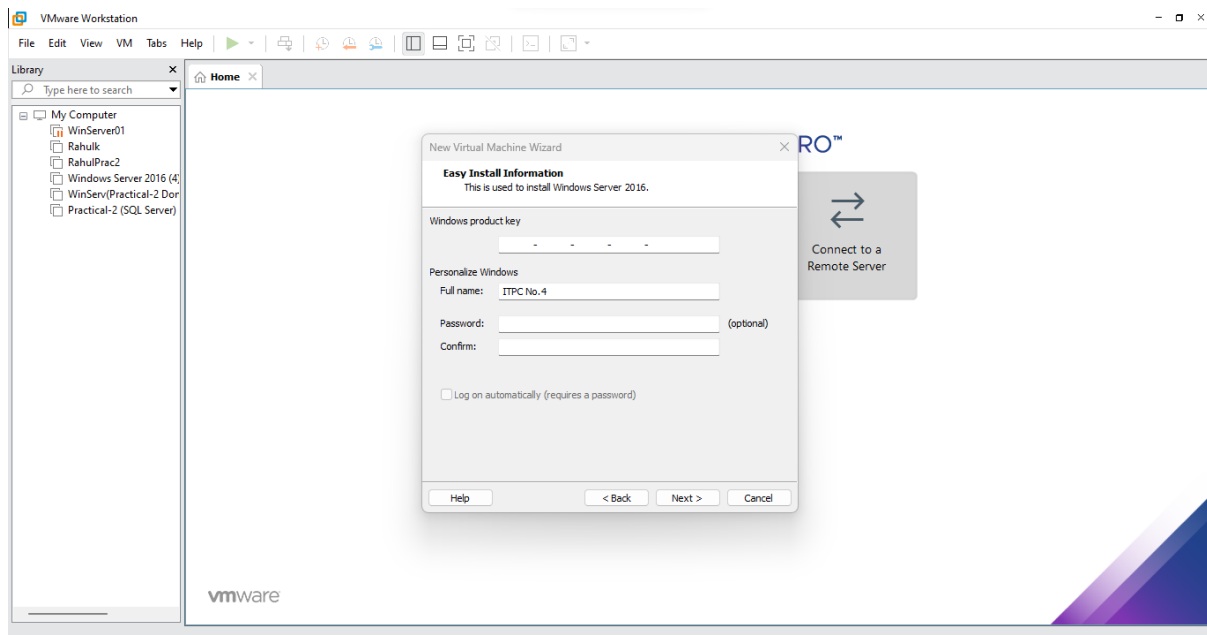


- Name your virtual machine (In this case it is **Ramanuj – SQL Server**) and Click **Next**

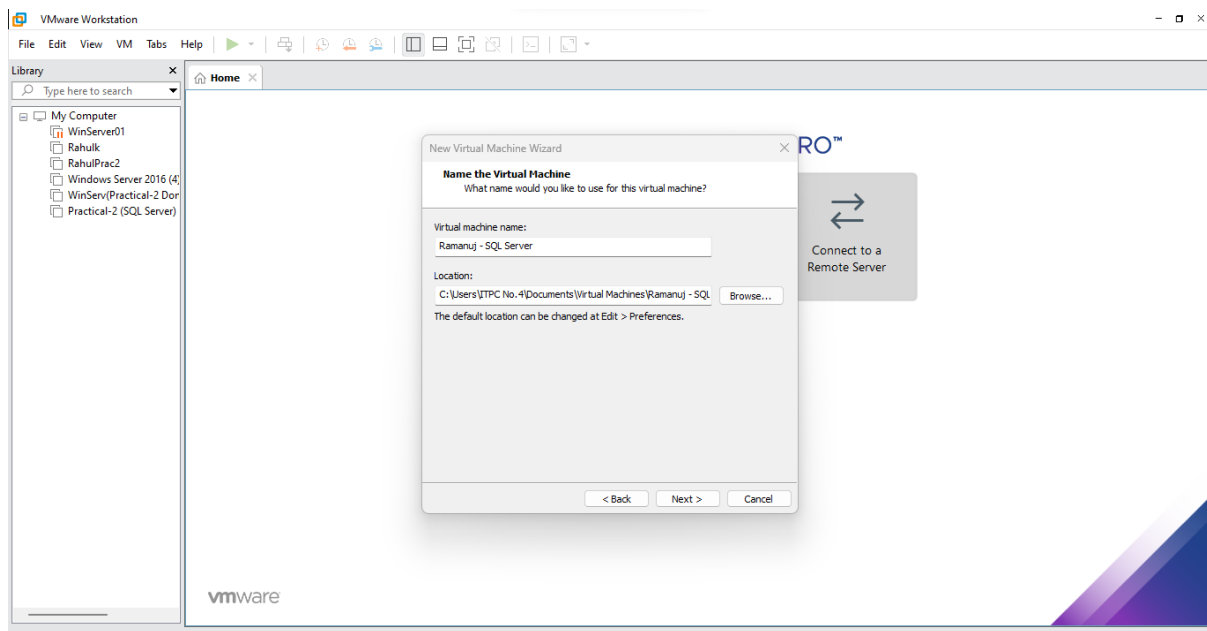


- Select **BIOS** and Click **Next**

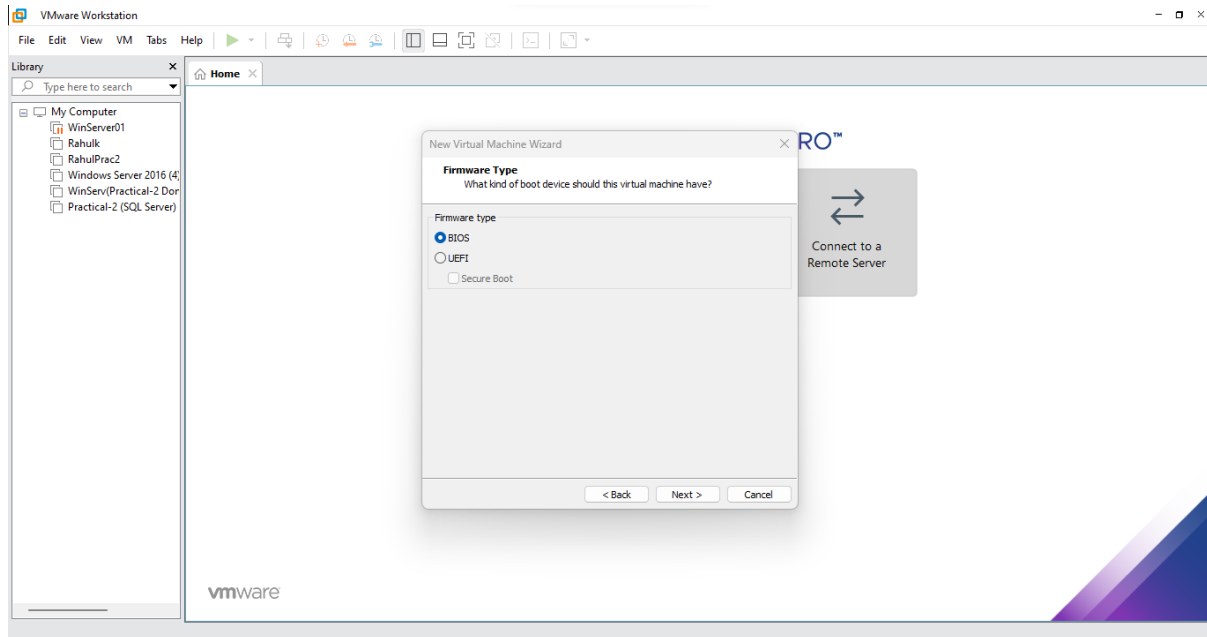


- Keep default values and Click **Next**

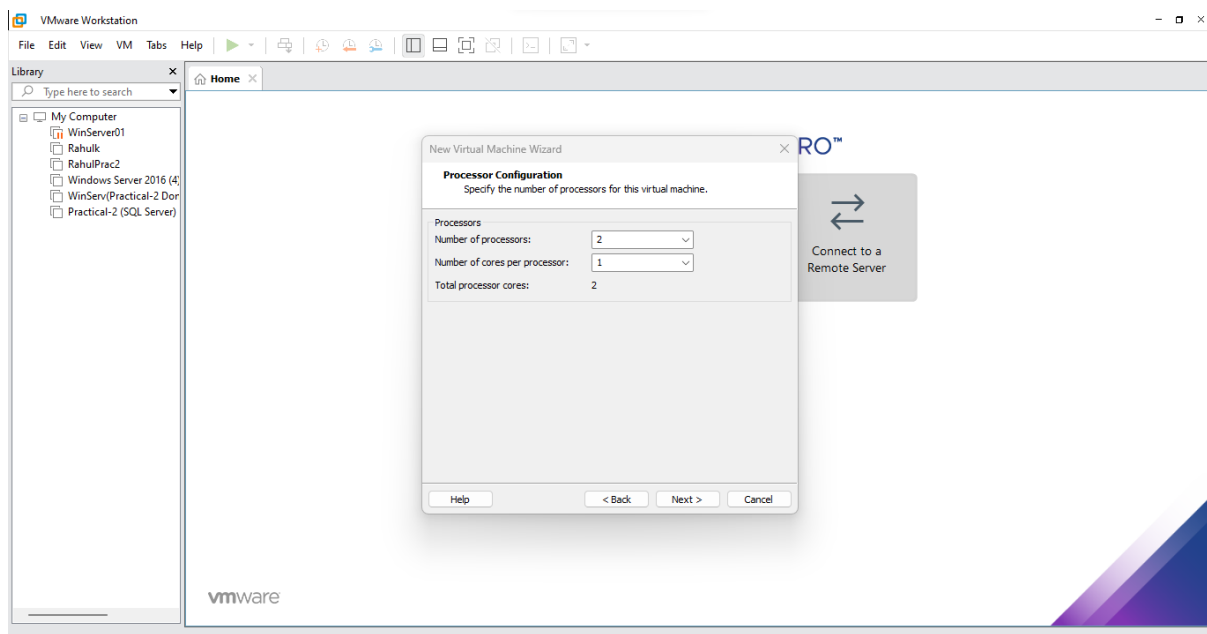


- Set the RAM to **4096 MB (4 GB)** and Click **Next**

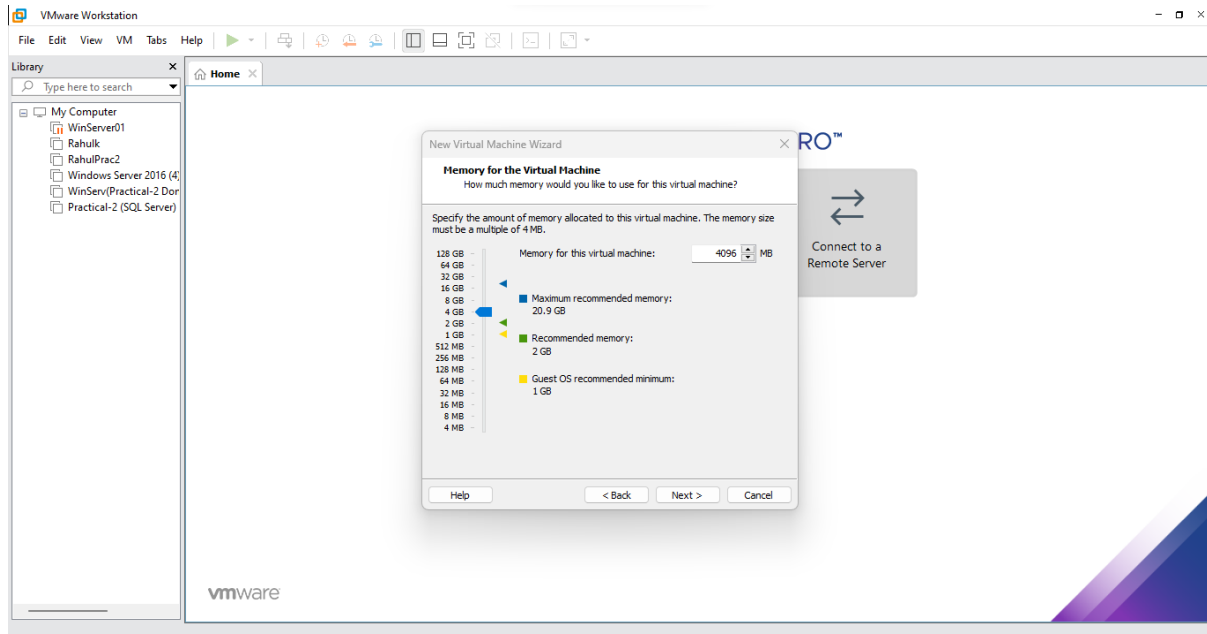


- Keep default values and Click **Next**

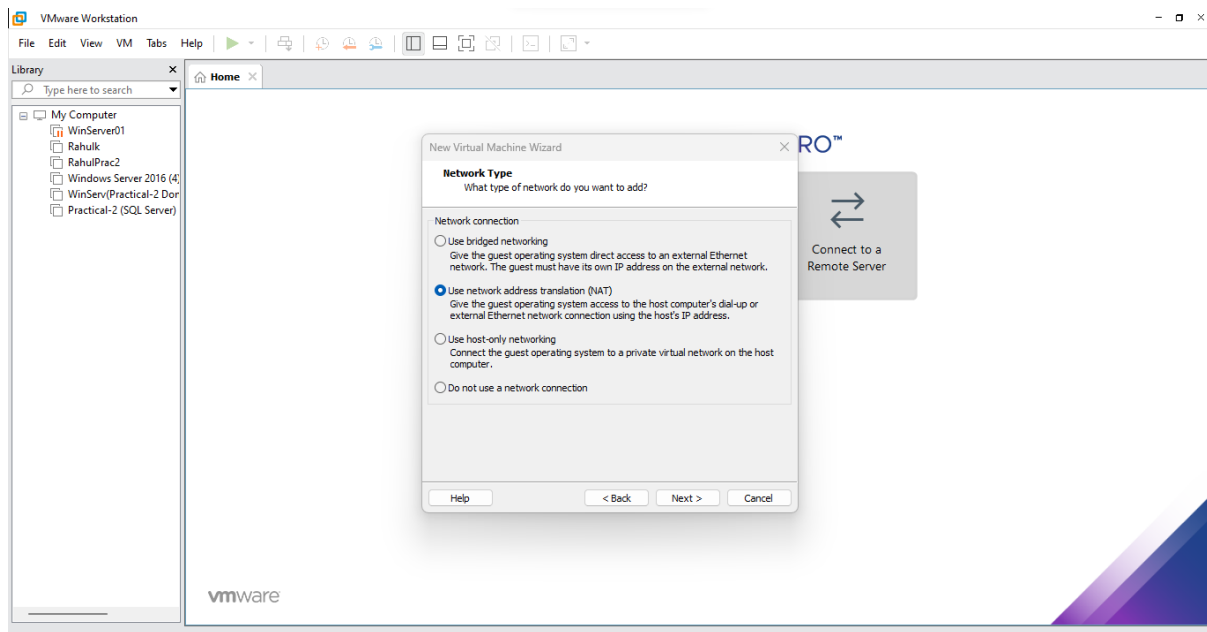


- Keep default values and Click **Next**

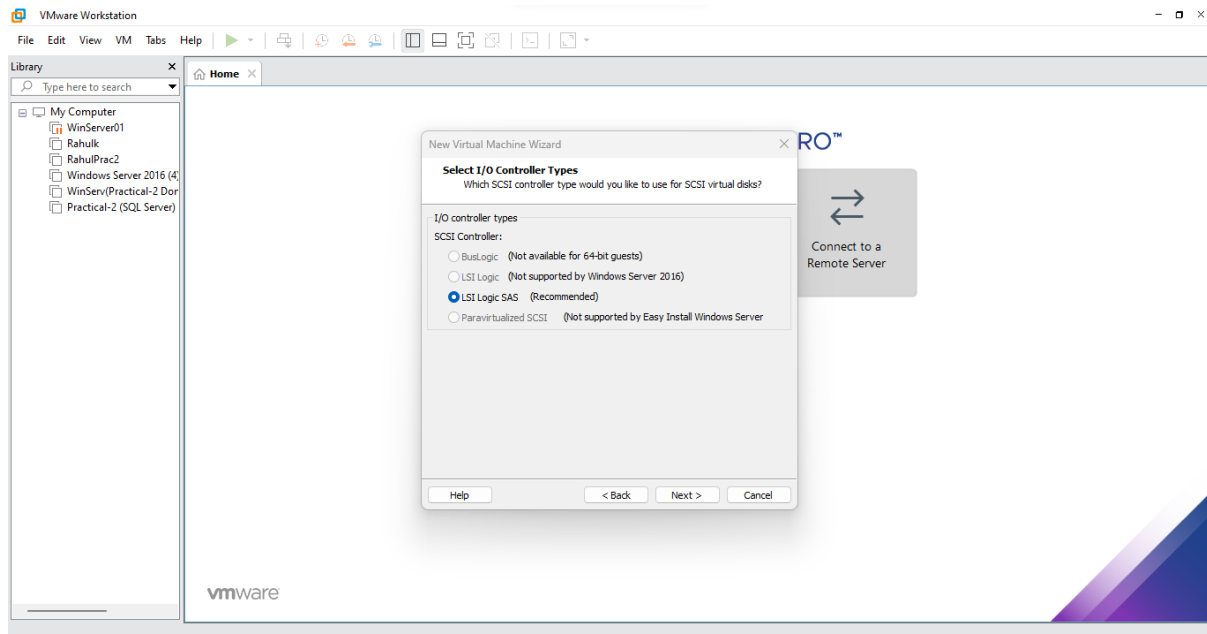


- Select **SCSI** and Click **Next**

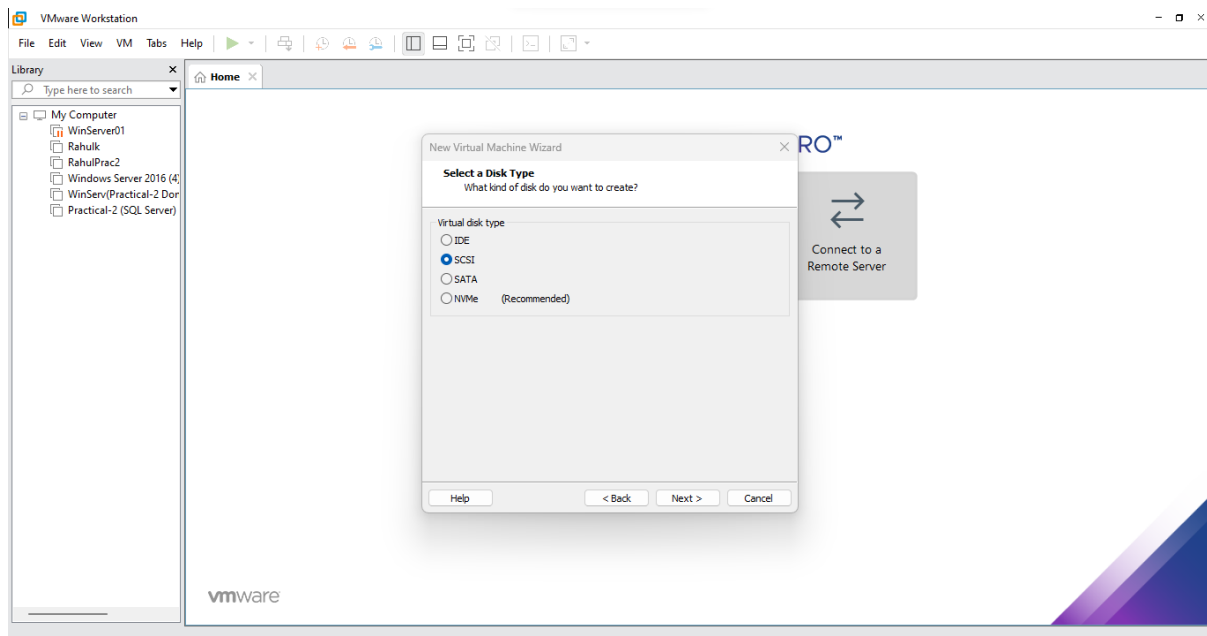


- Keep default values and Click **Next**

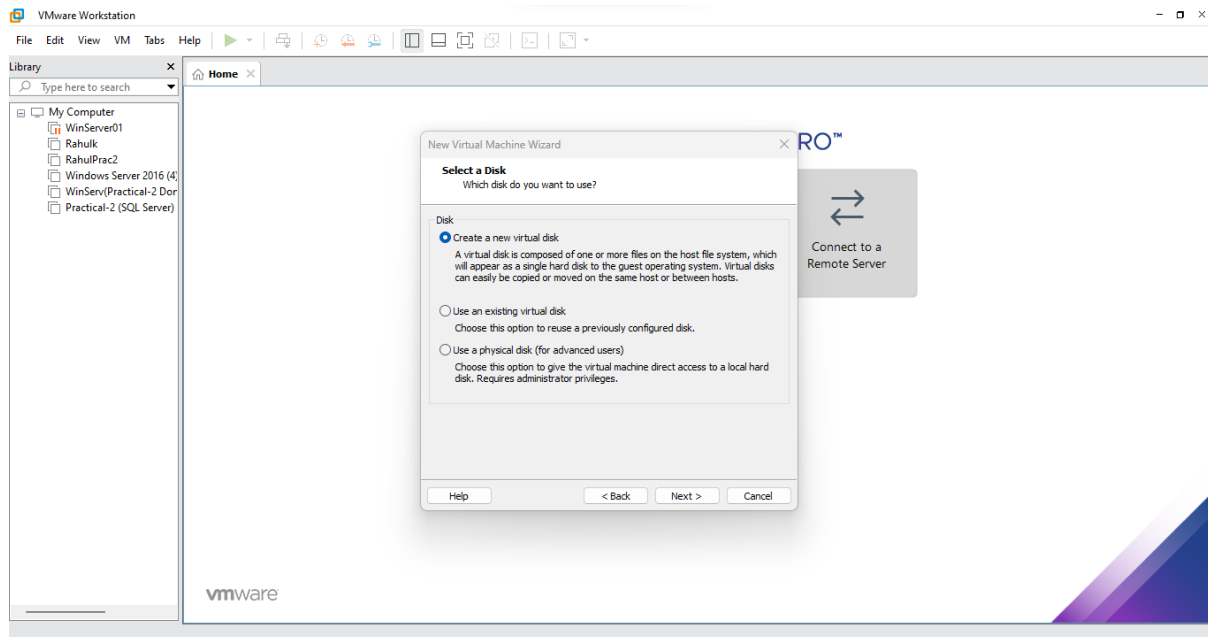


- Keep default values and Click **Next**

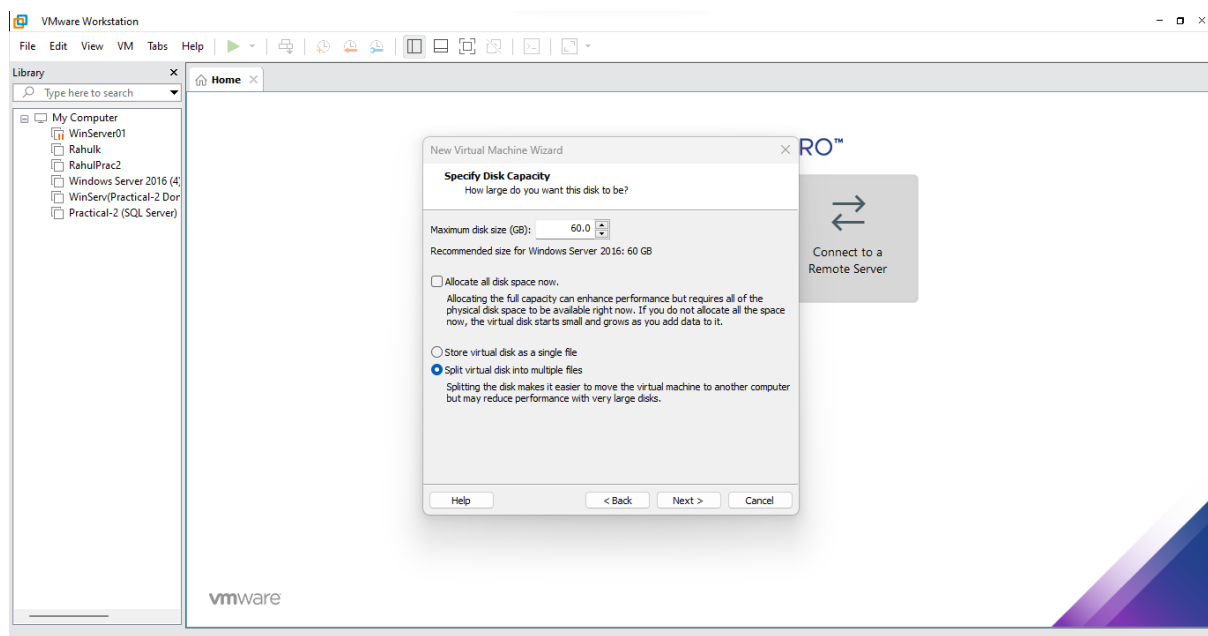


- Keep default values and Click **Next**

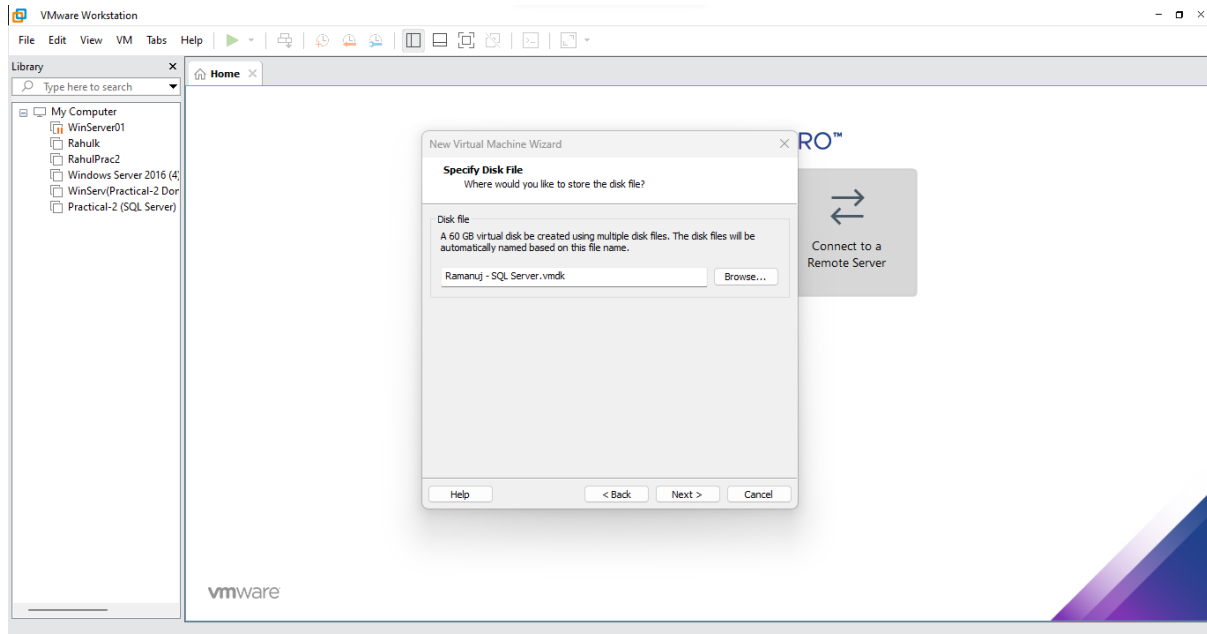


- Click on **Finish**

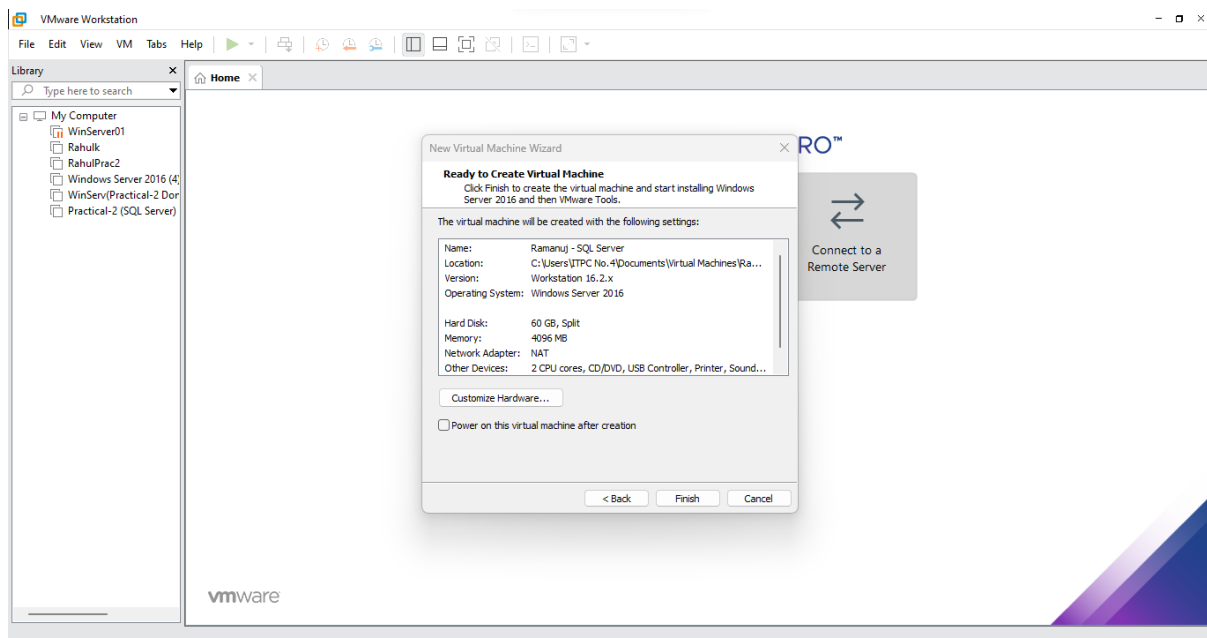


- Your Virtual Machine is created

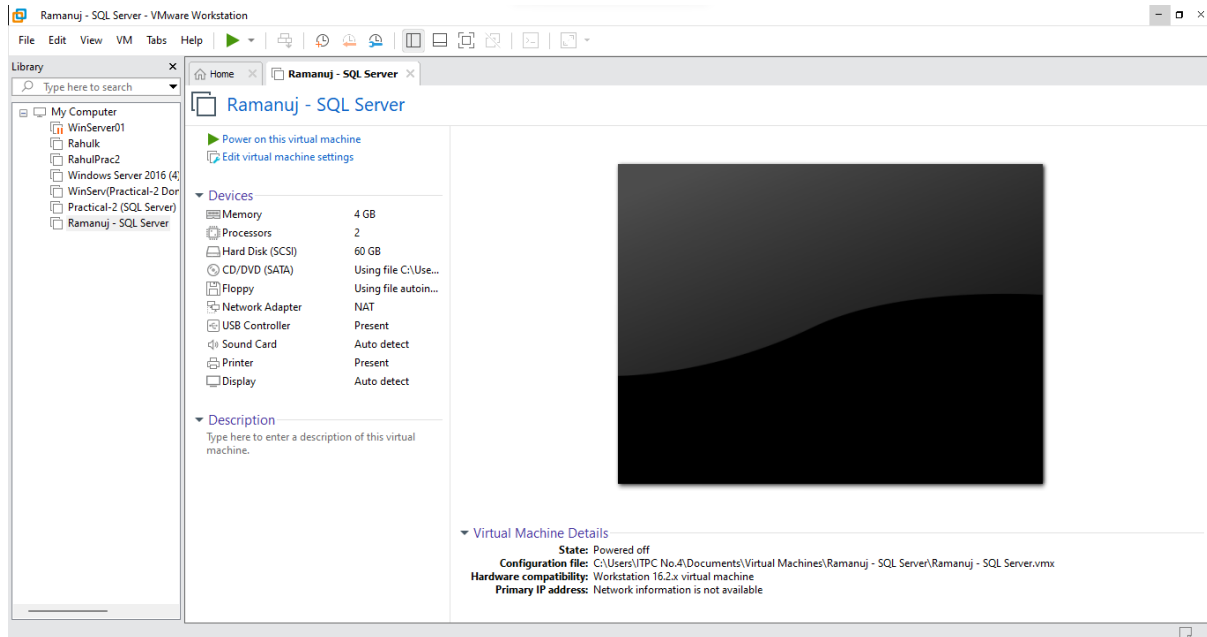


- Before powering on your virtual machine perform the following pre-requisites:
 - Click on **Edit Virtual Machine Settings**
 - Within Virtual Machine Settings Click on **Floppy** and UnClick **Connect on Power On**
 - Click **Ok**

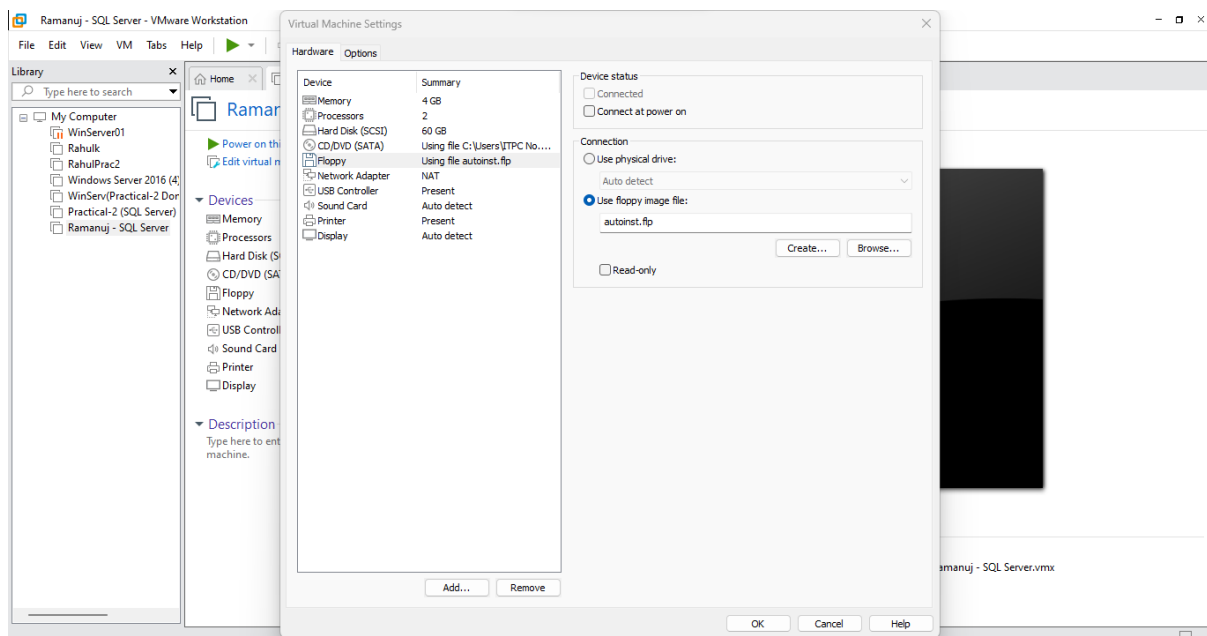


- Now Power On your VM

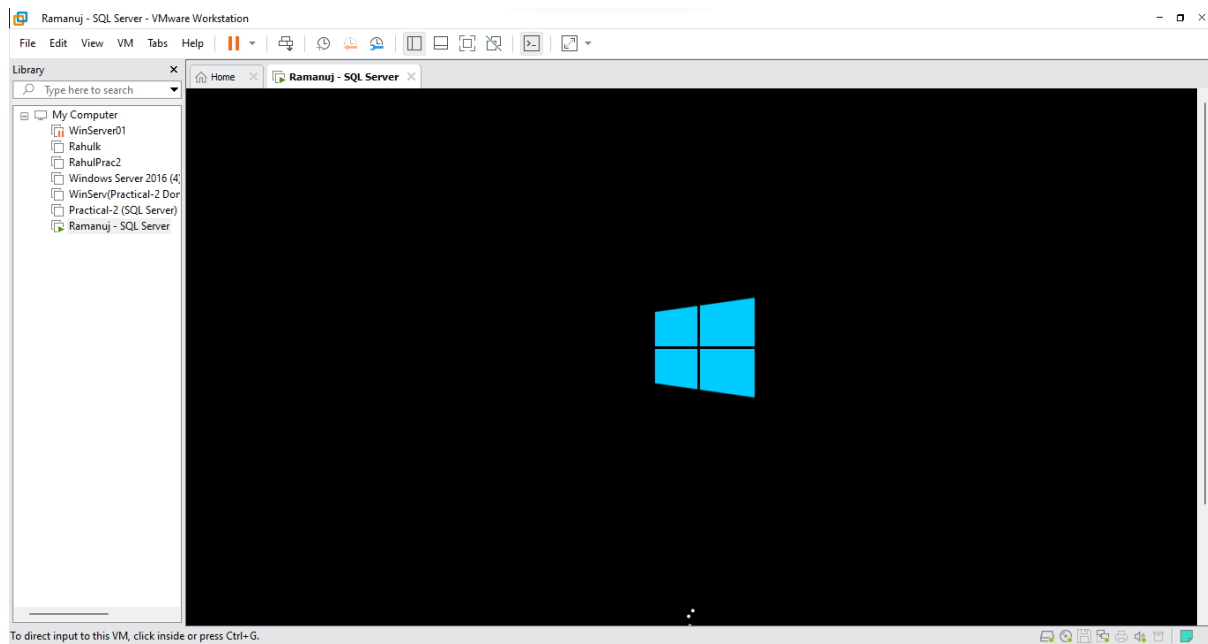


- Click Next

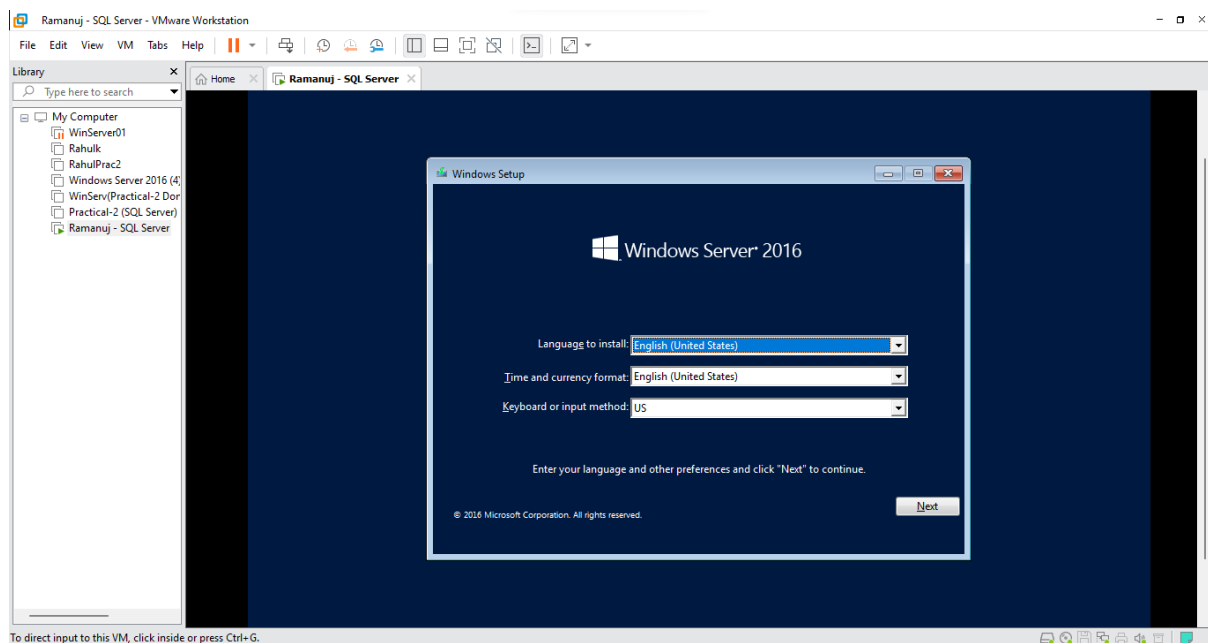


- Click on **Install Now**

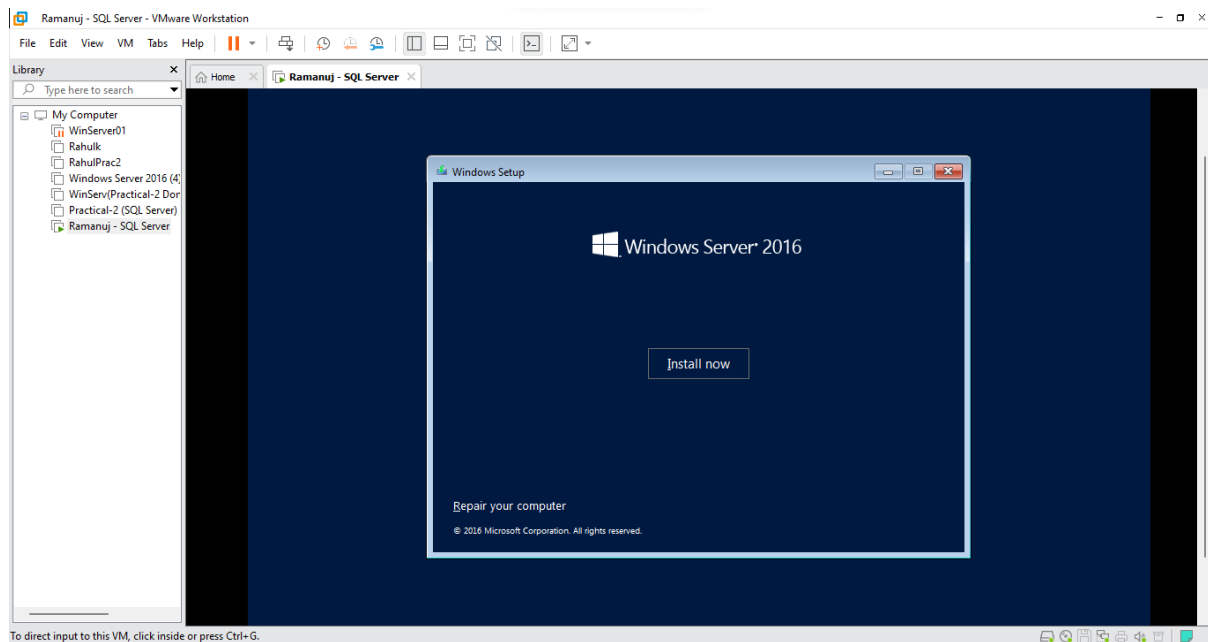


- Select **Windows Server 2016 Datacenter Evaluation (Desktop Experience)** and Click **Next**

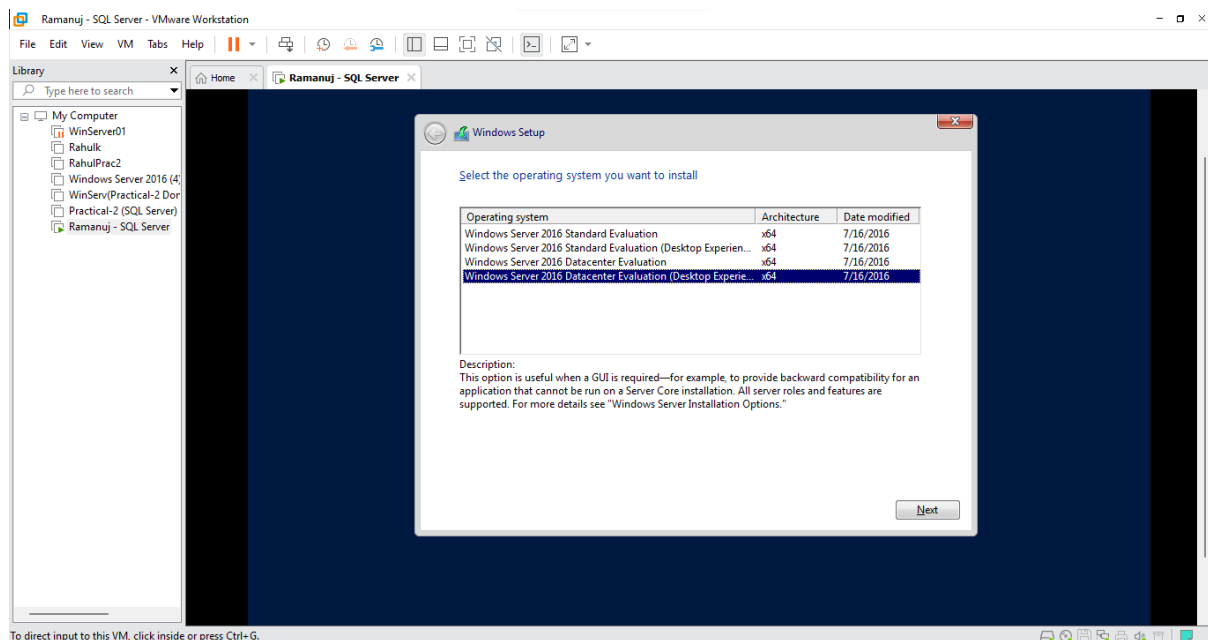


- Select **I accept license terms** and Click **Next**

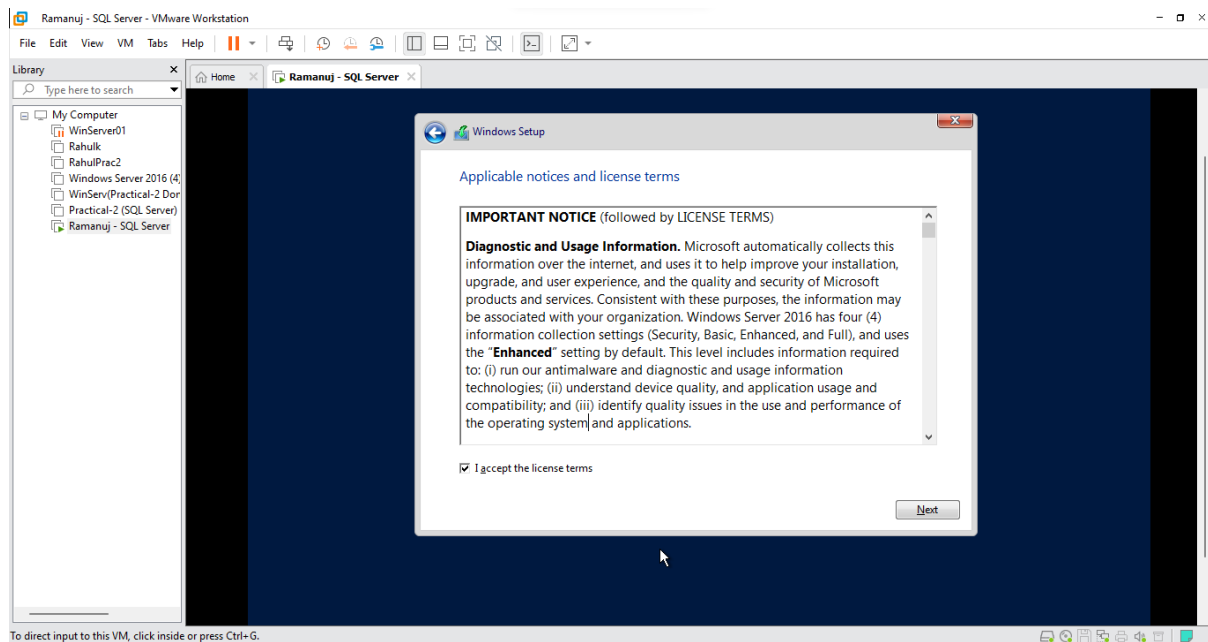


- Click on **Custom**

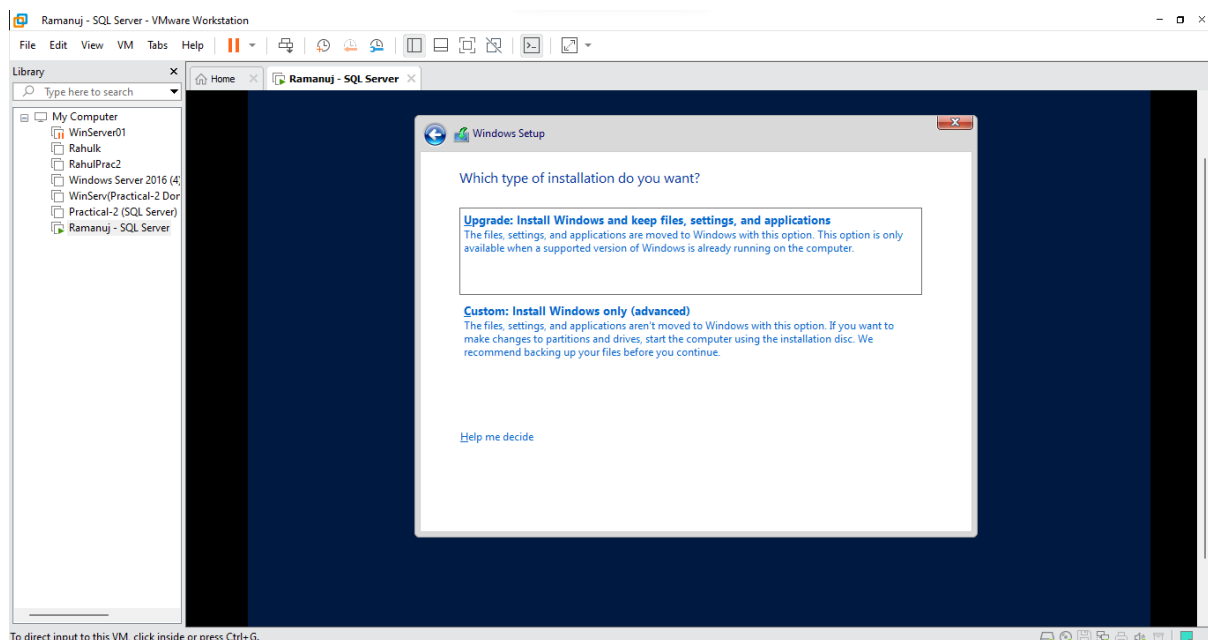


- Keep default values and Click **Next**

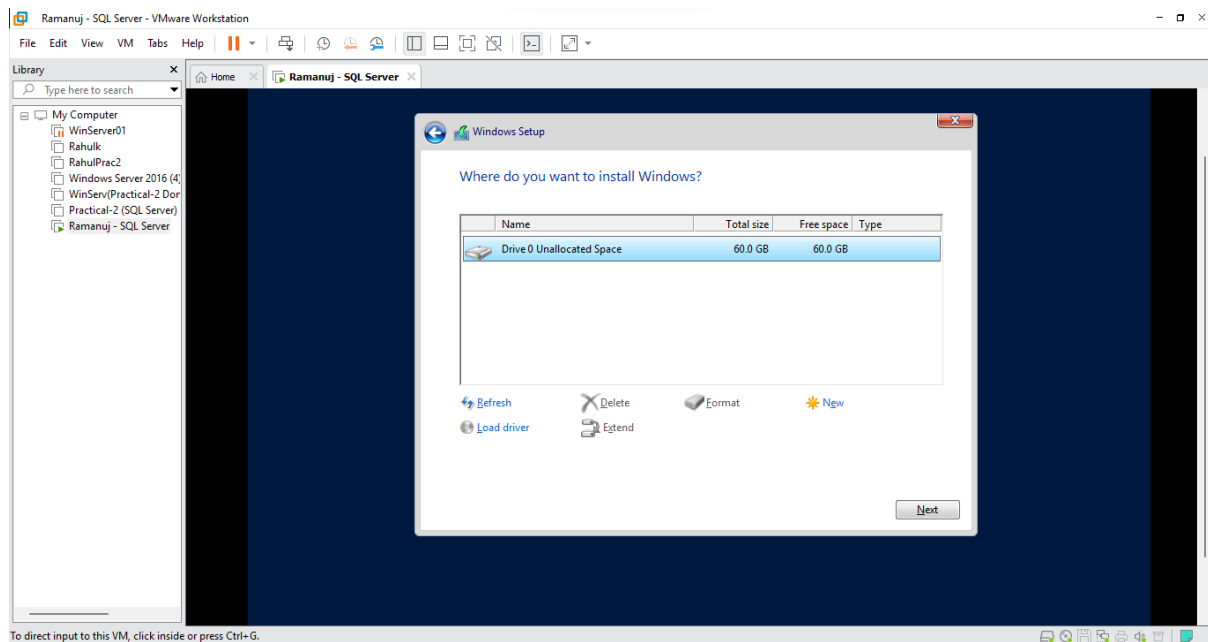


- Now it will start installing Windows onto the VM

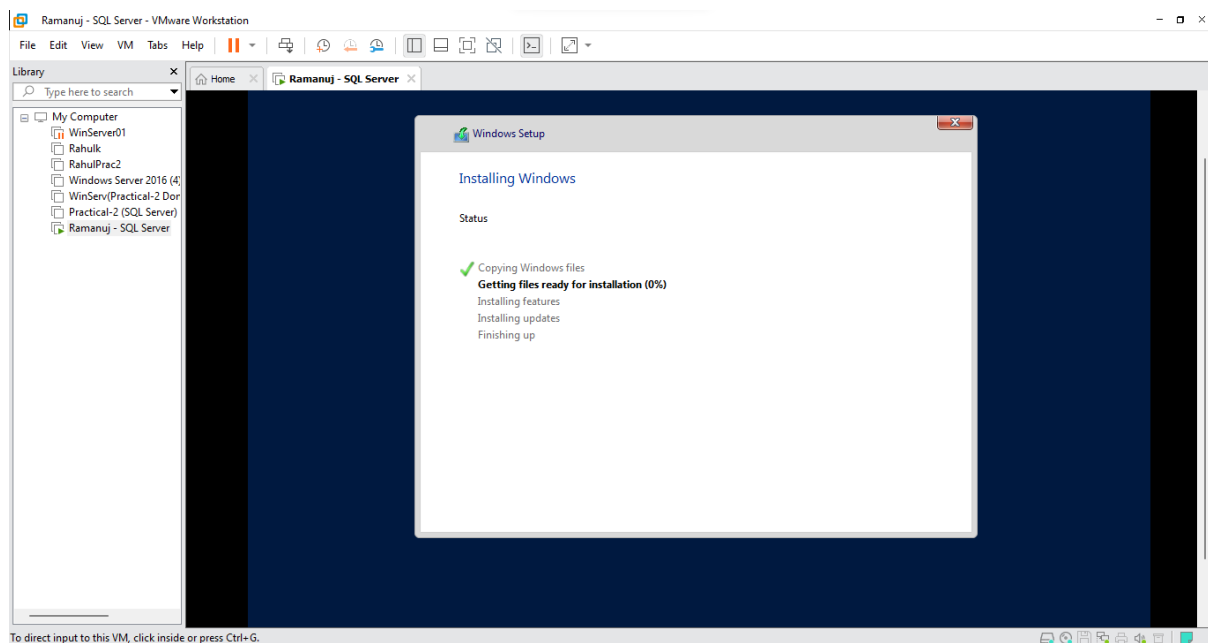


- Now enter a password for the system and login

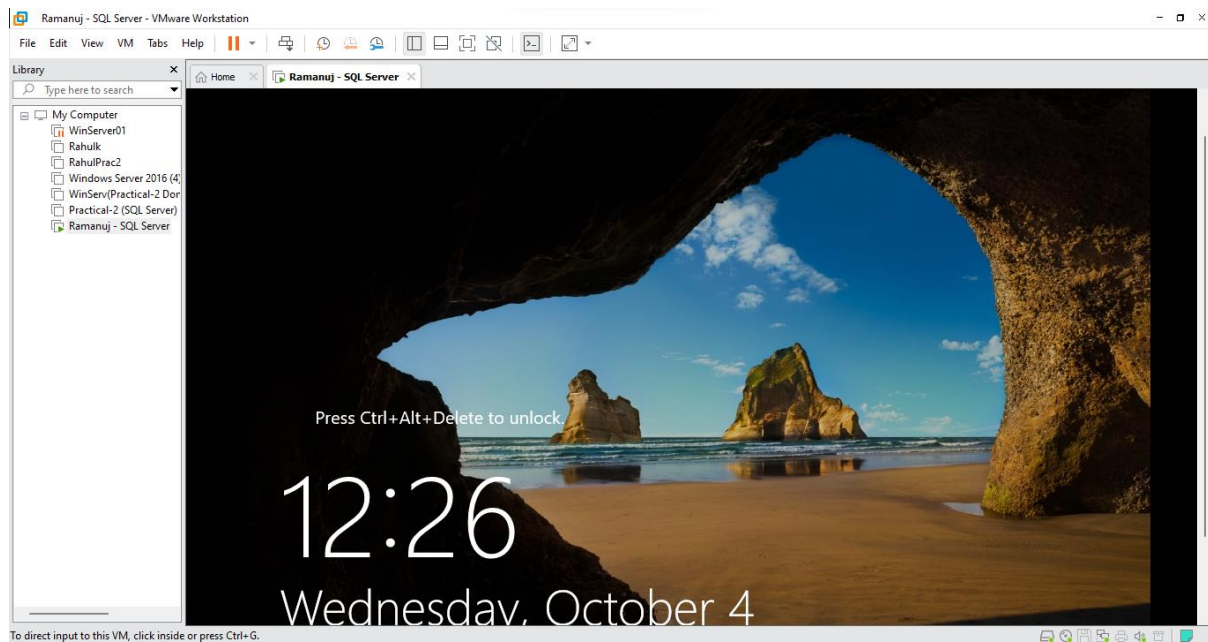


- Open **Server Manager** and Click on **Add Roles and Features**

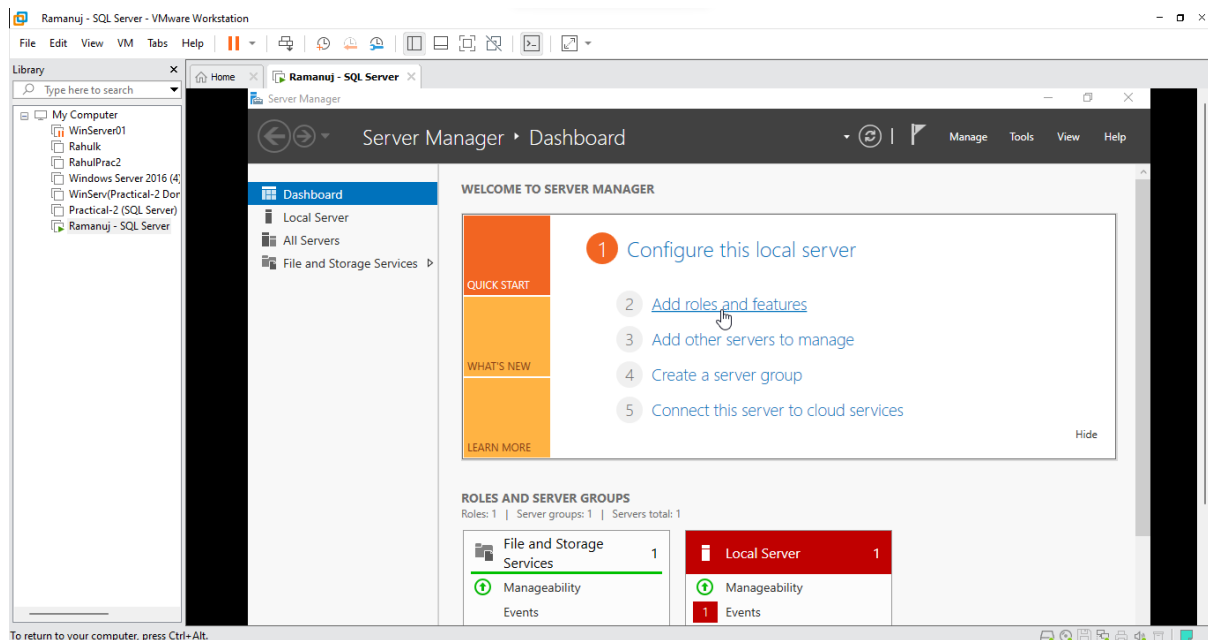


- Click on Next

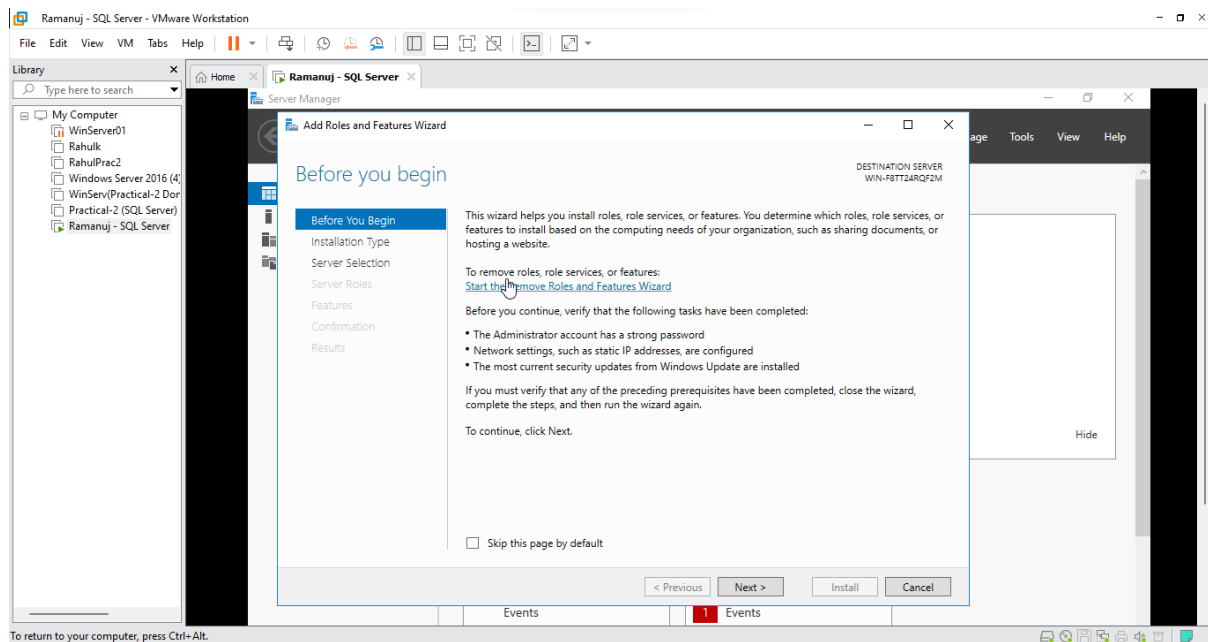


- Keep default values and Click Next

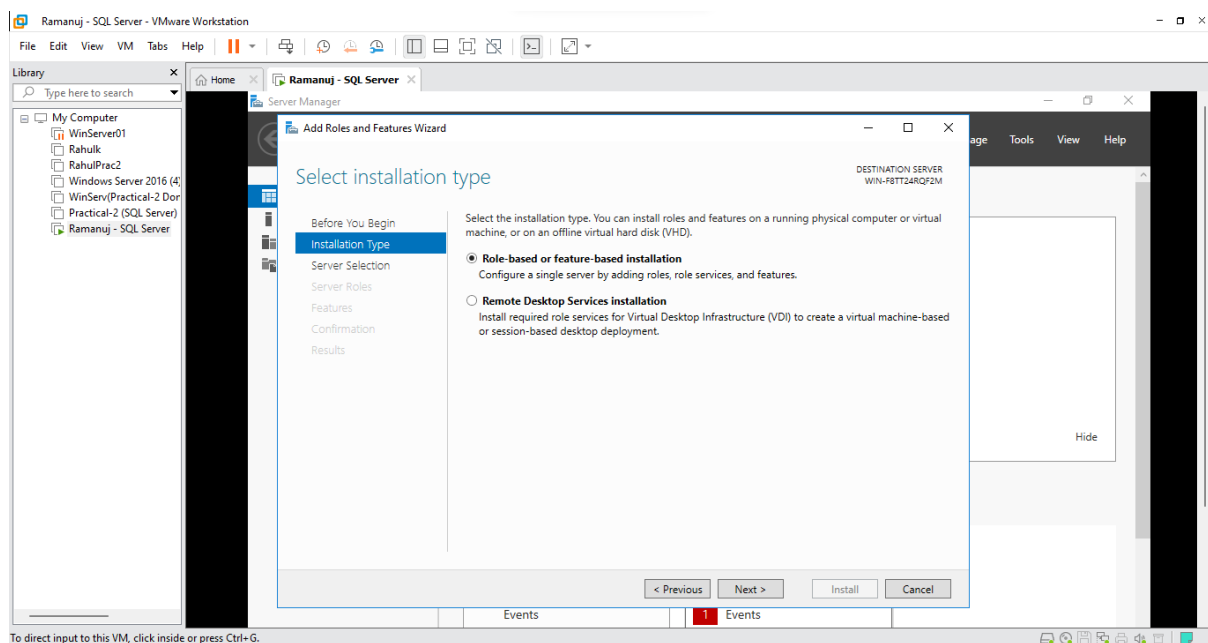


- Keep default values and Click **Next**

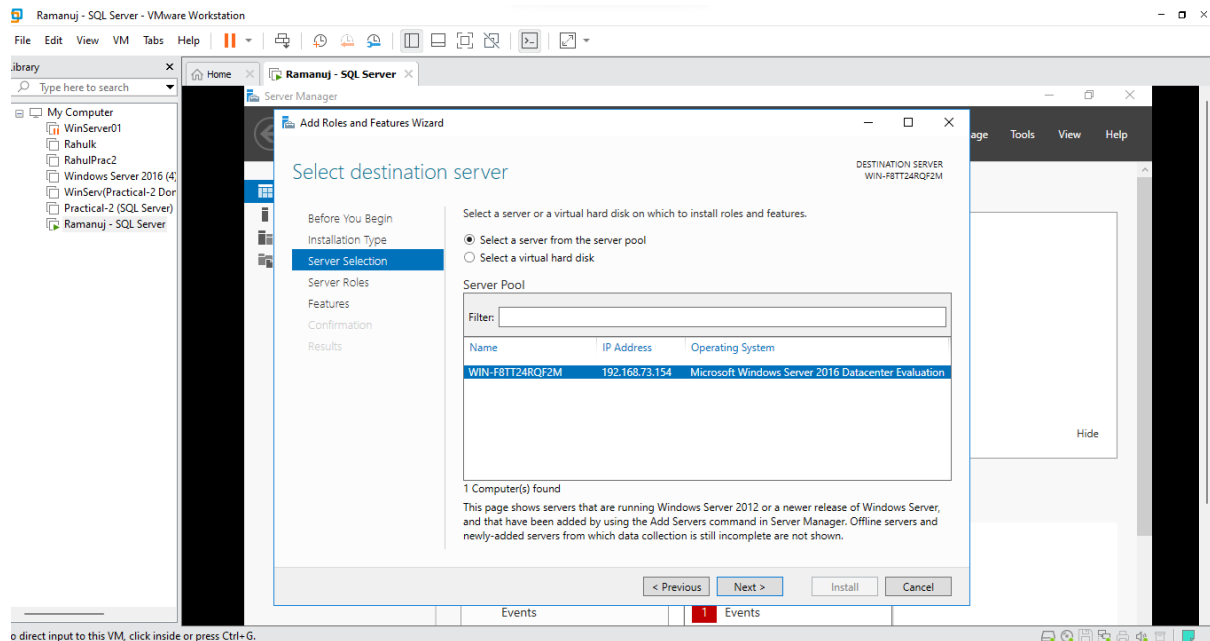


- Keep default values and Click **Next**

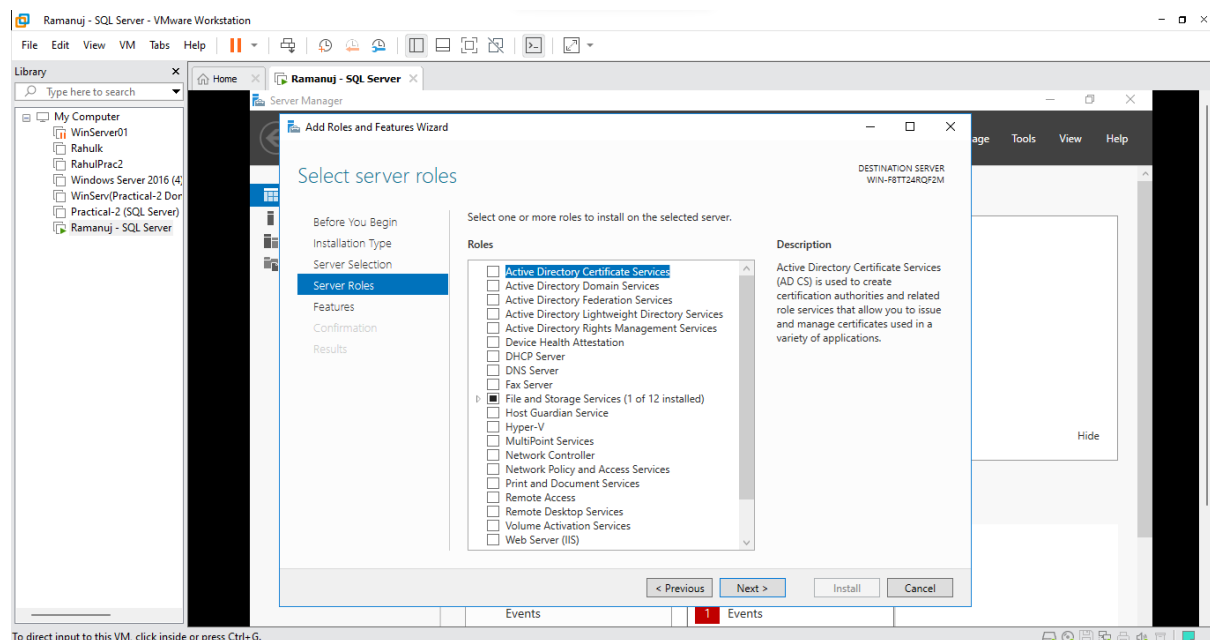

- Select **.NET Framework 3.5 Features** and within **.NET Framework 4.6 Features** Select **ASP .NET 4.6** and Click **Next**

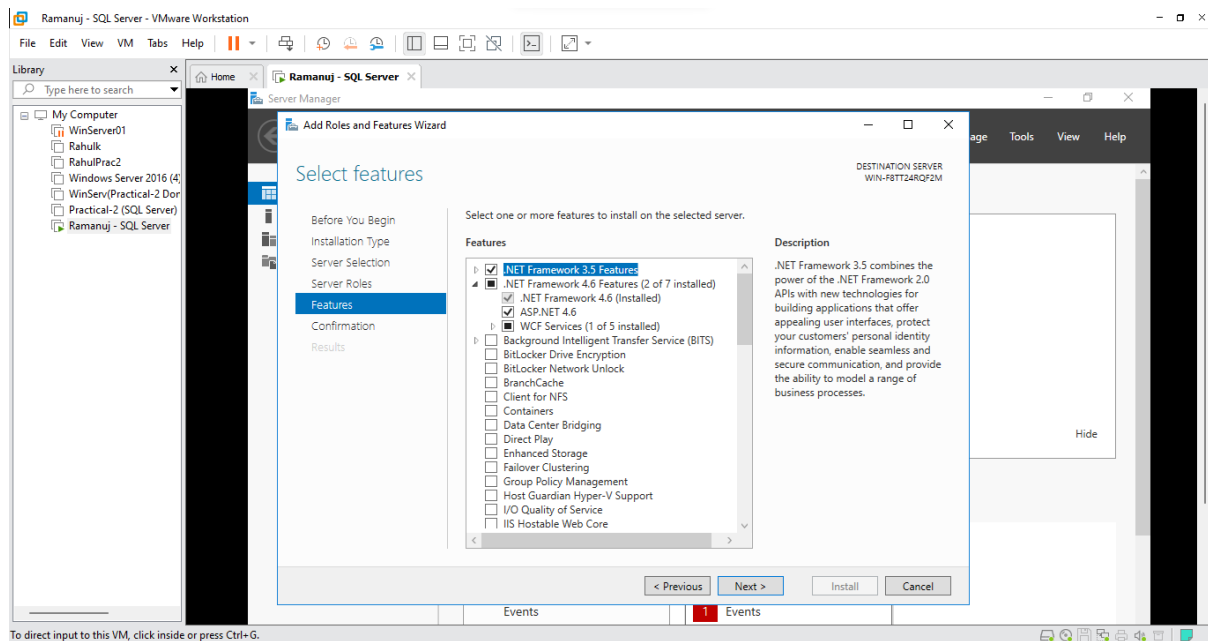


- Click on **Install**

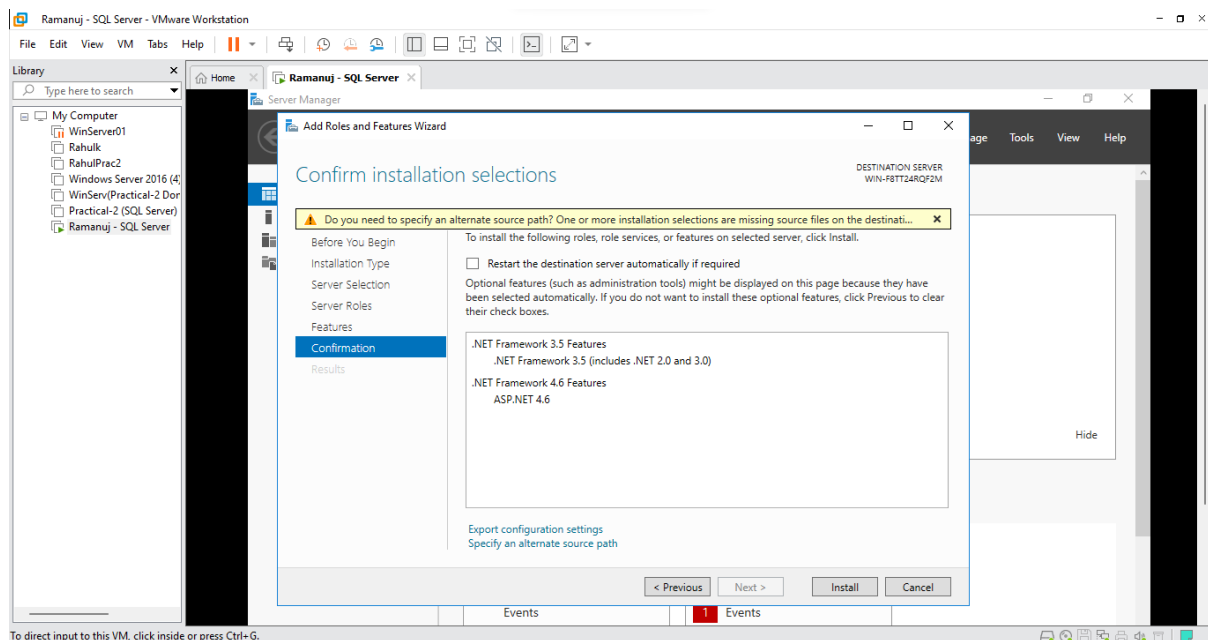


Step 2: Linking the SQL Server to the Domain Controller


- In the SQL Server, Go to **Network Adapter Settings**, Right Click on **Ethernet0** and Select **Properties**

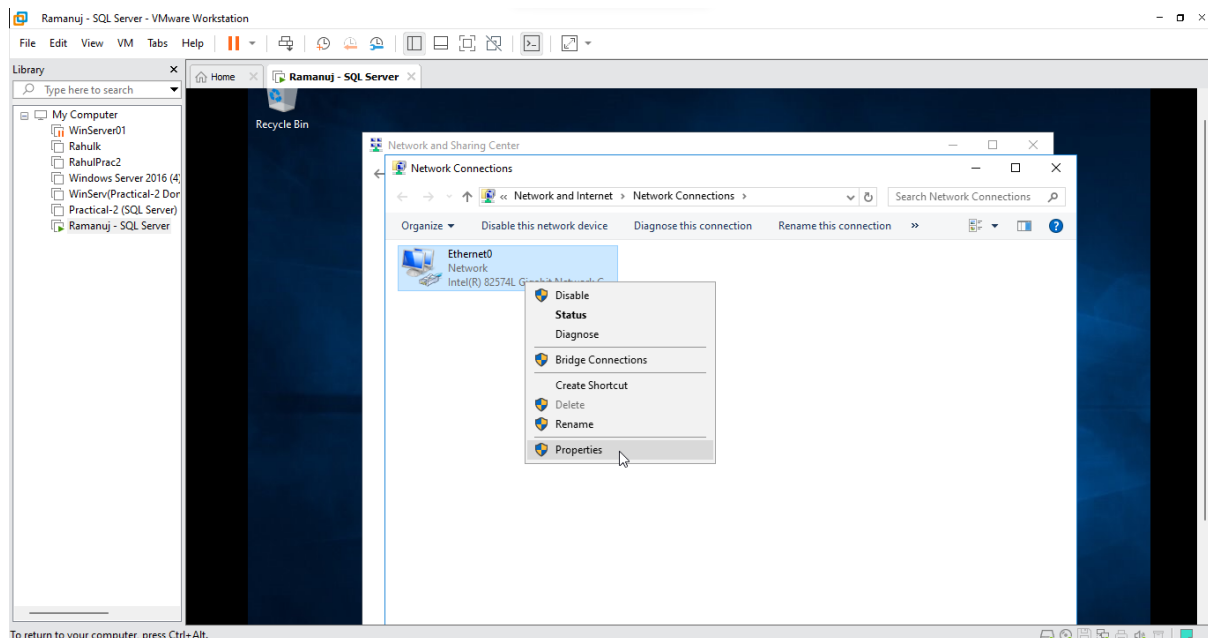


Double Click on **Internet Protocol Version 4**

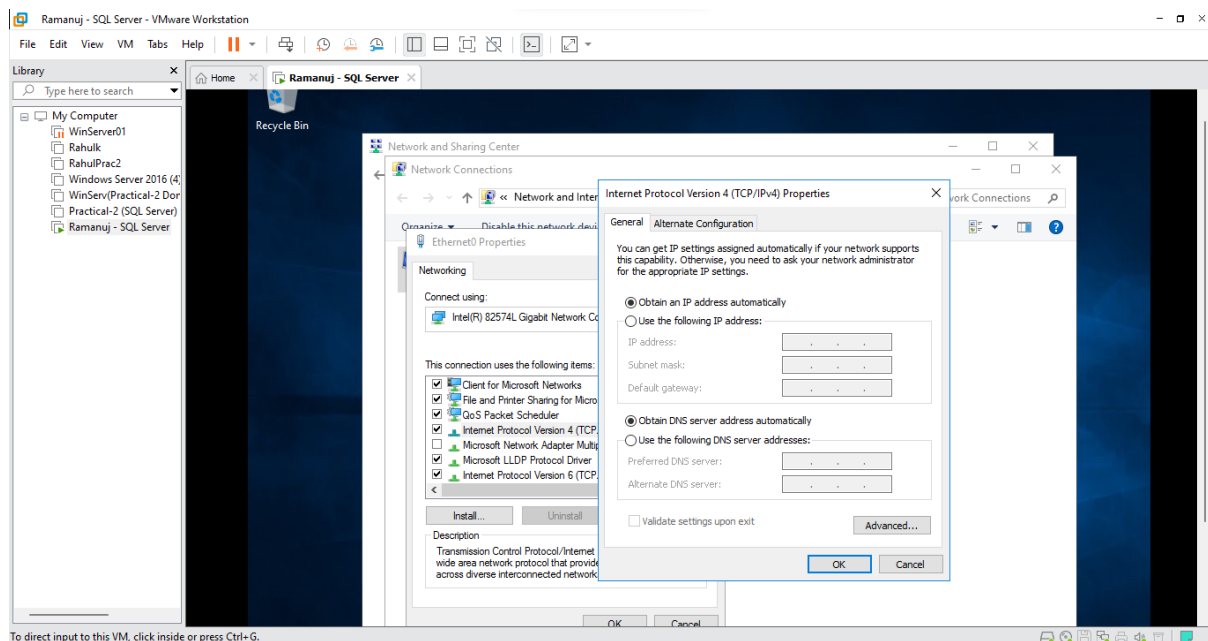


- Click on **Advanced** and Select **DNS**

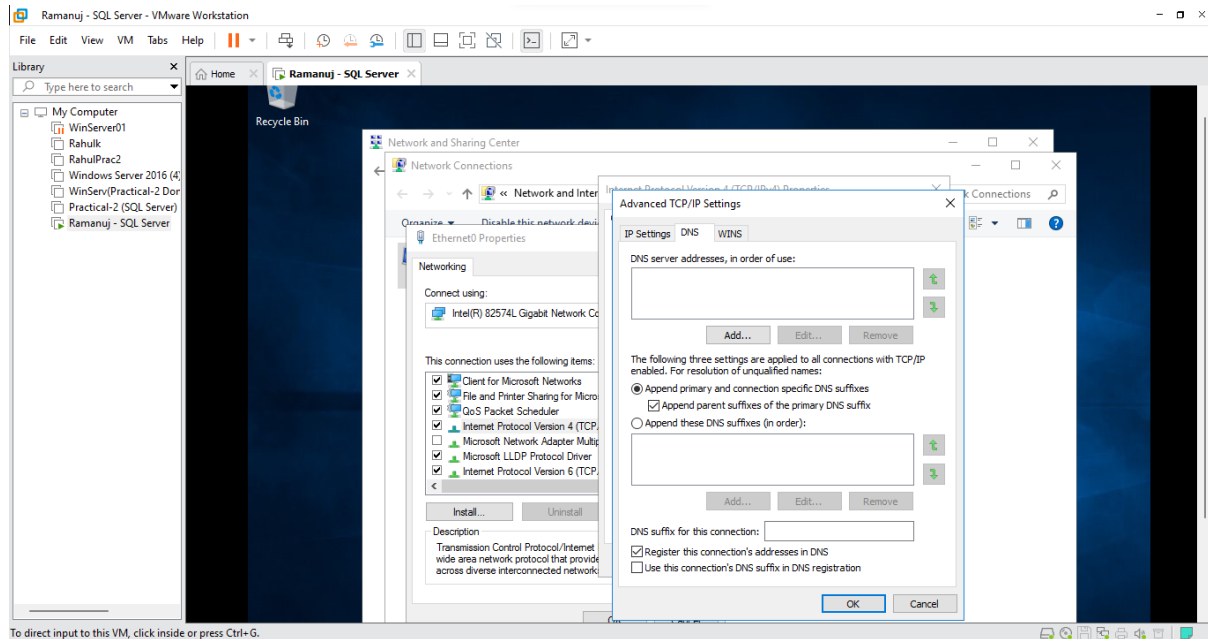


- Now start your previous VM that contains the **Domain Controller** and copy its **IP Address** and within DNS in the **SQL Server** Click on **Add** and Paste the copied IP Address and Click **Add**

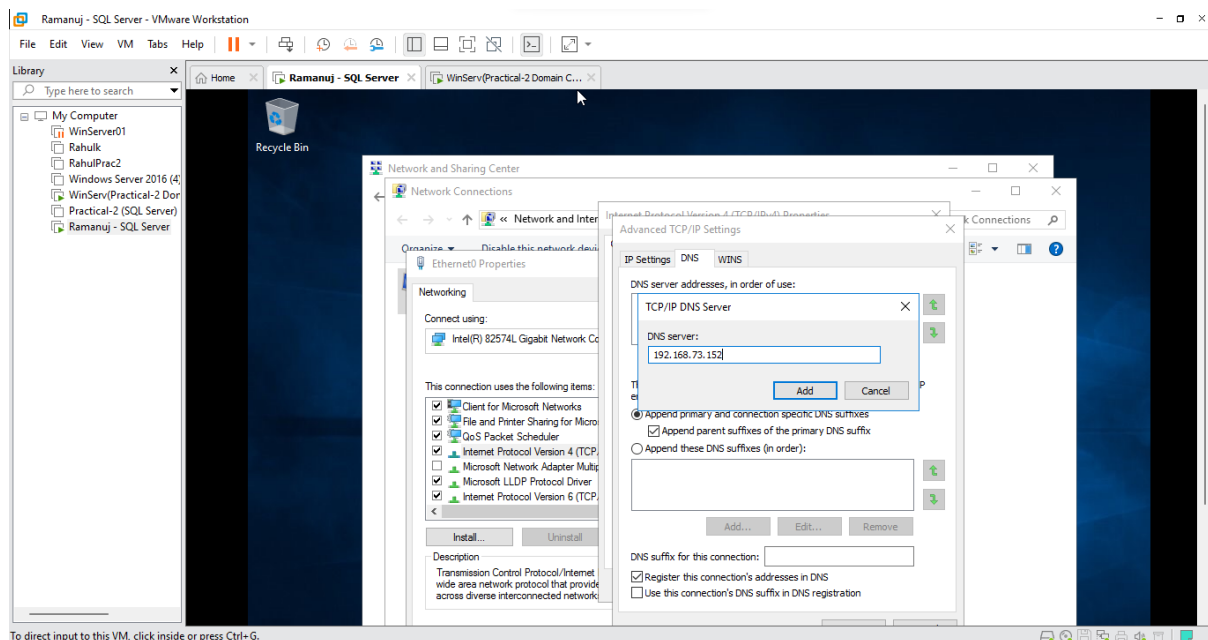


- Now this IP Address will be set as the Preferred DNS Address

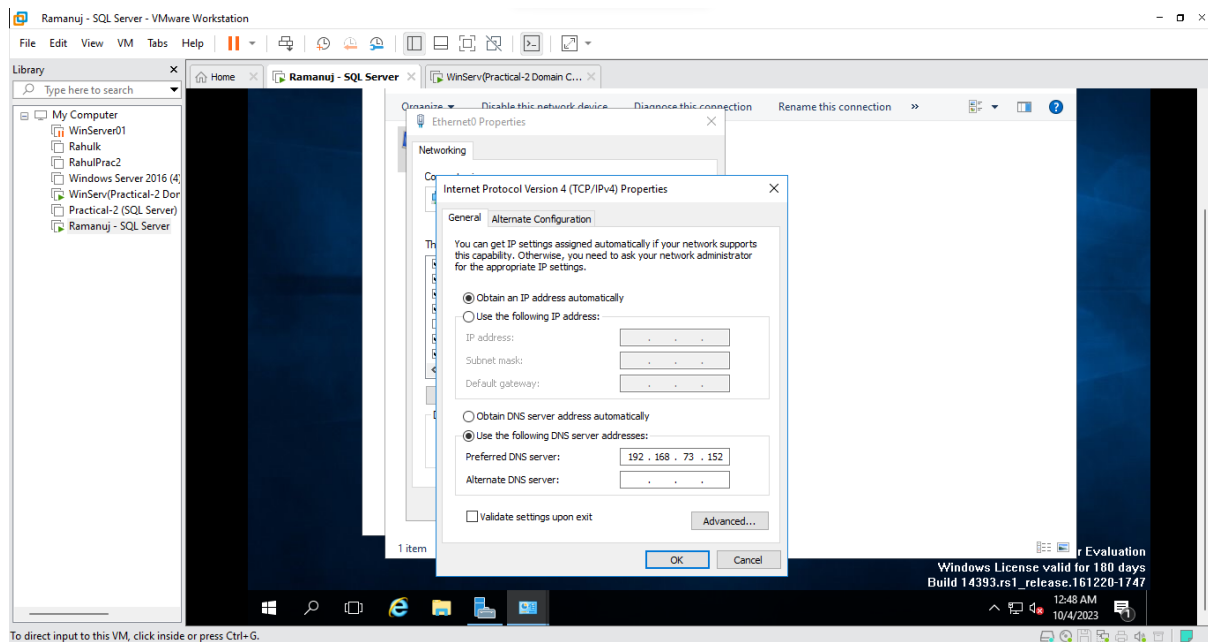


- Now Exit out of Network Settings and Open **Server Manager**

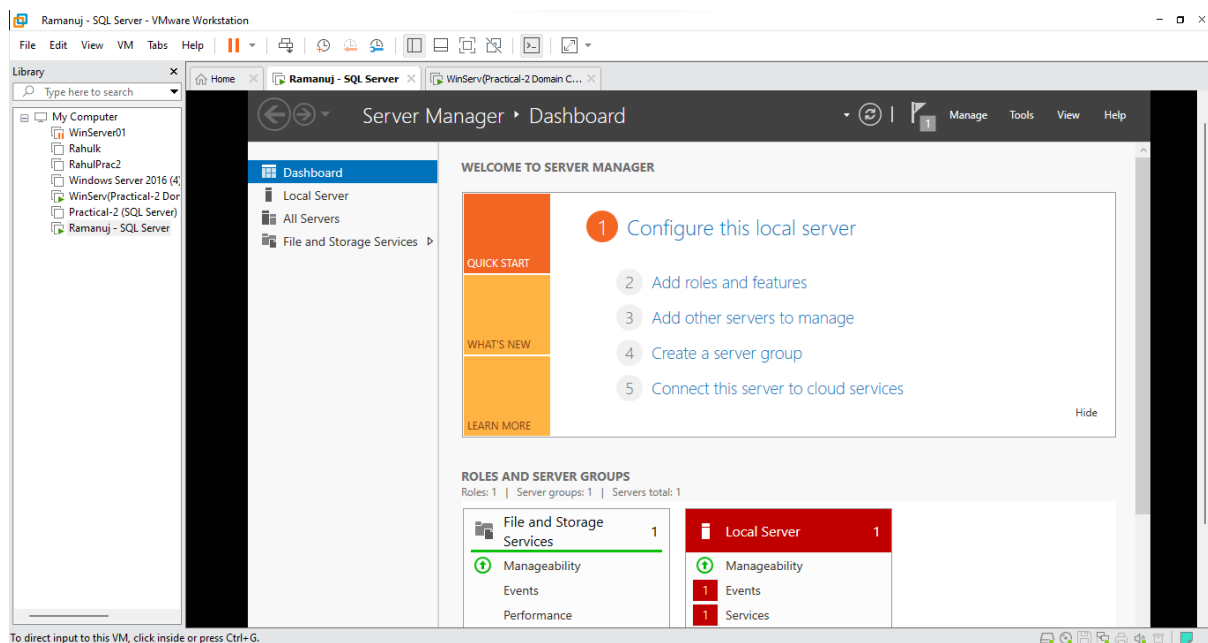


- Within Server Manager Click on **Local Server** and Click on **Workgroup**

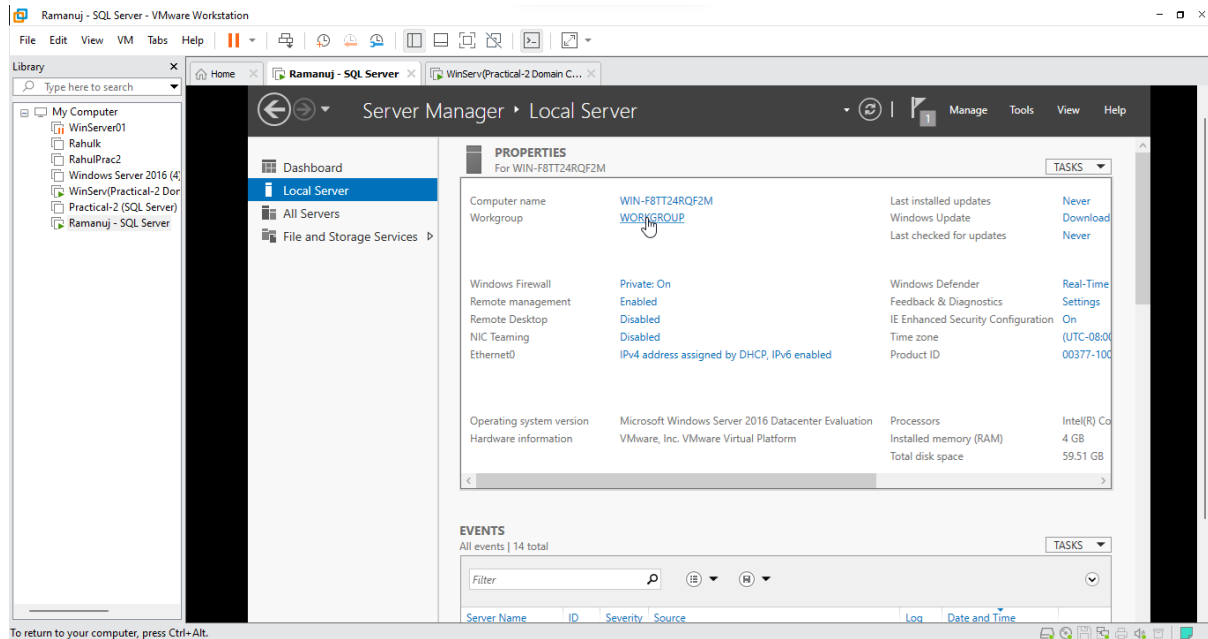


- Within Workgroup Click on **Change**

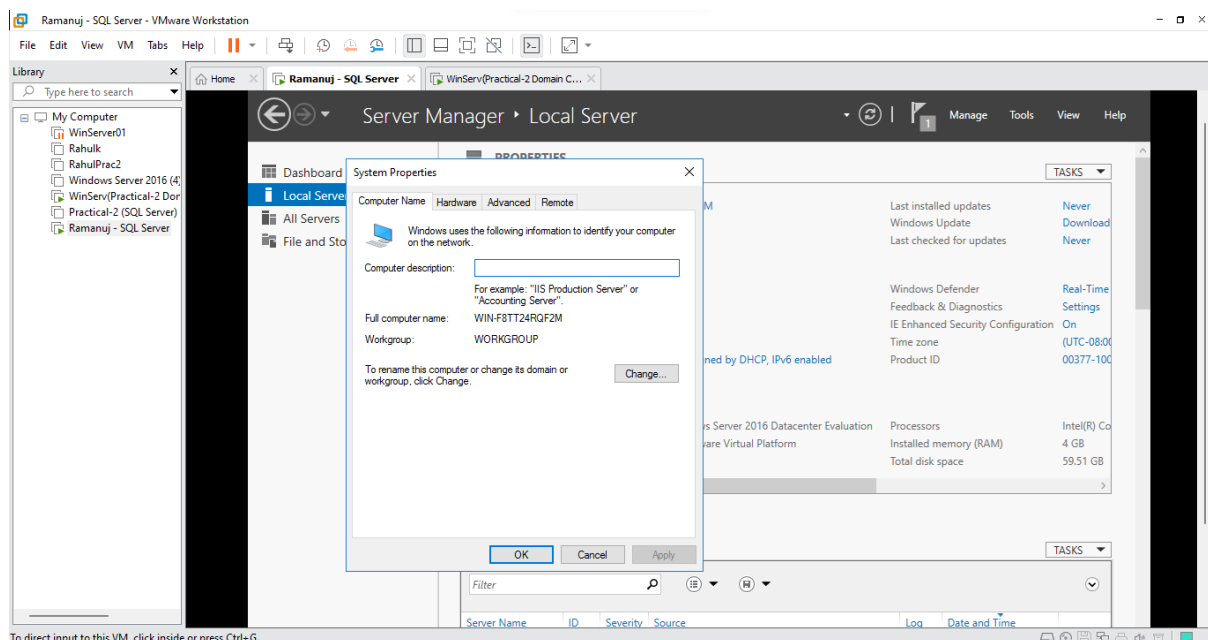


- Now in Member of Select Domain and Enter the Domain Name of the Domain Controller (In this case it is EDTECH.COM)

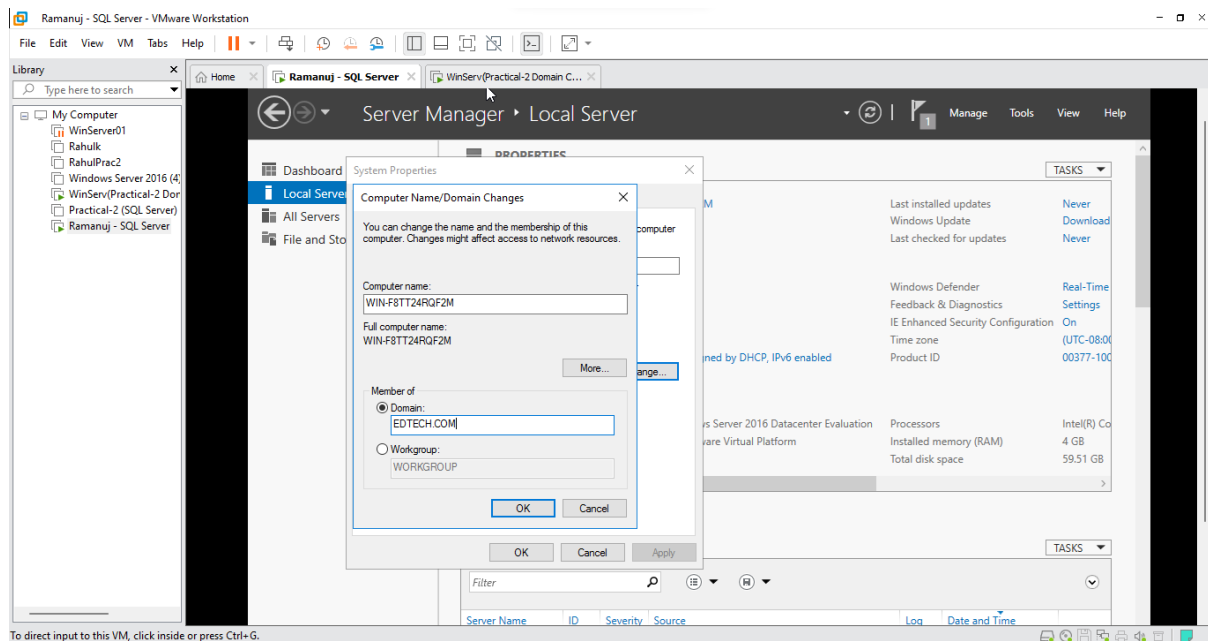


- Enter your **Domain Controllers** Username and Password for Access and Click **Ok**

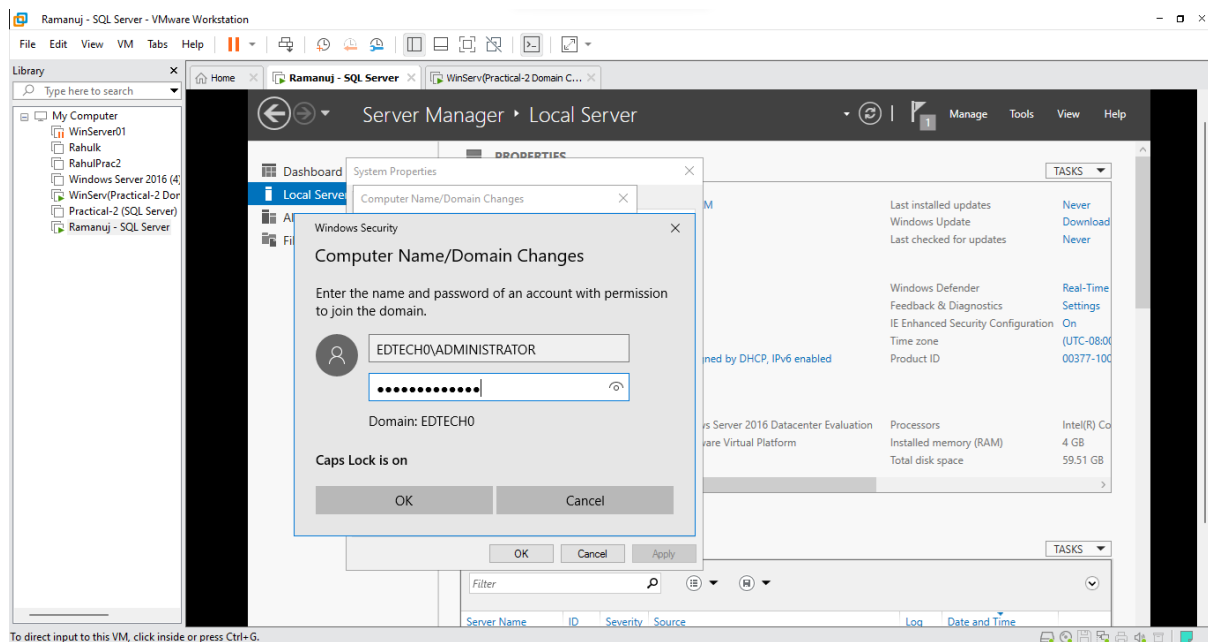


- You have now successfully linked your SQL Server to your Domain Controller. After this you have to restart for the system to update the changes.

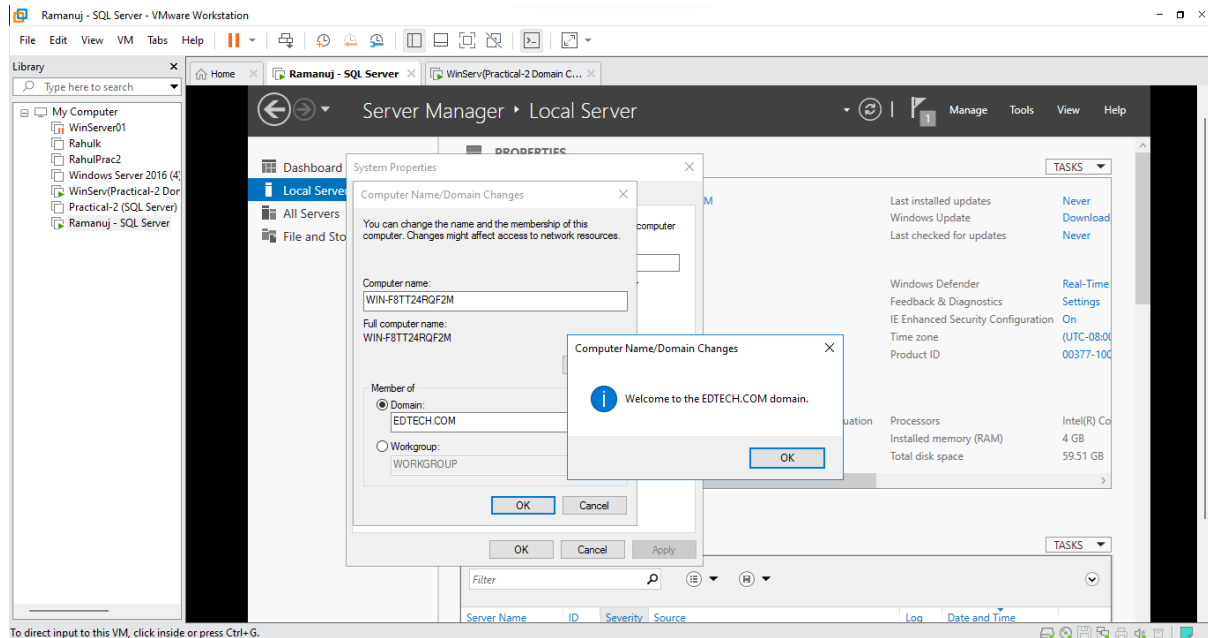

- The SQL Server VM will now restart

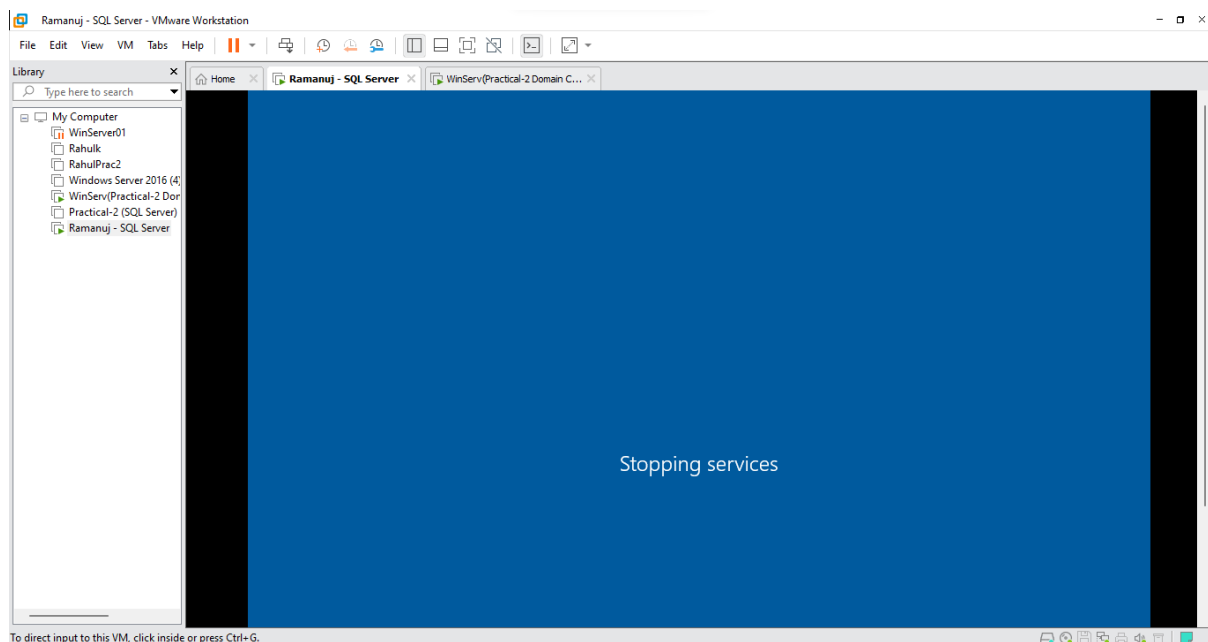


- To confirm the changes go to Local Server in Server Manager and Check the Domain Name

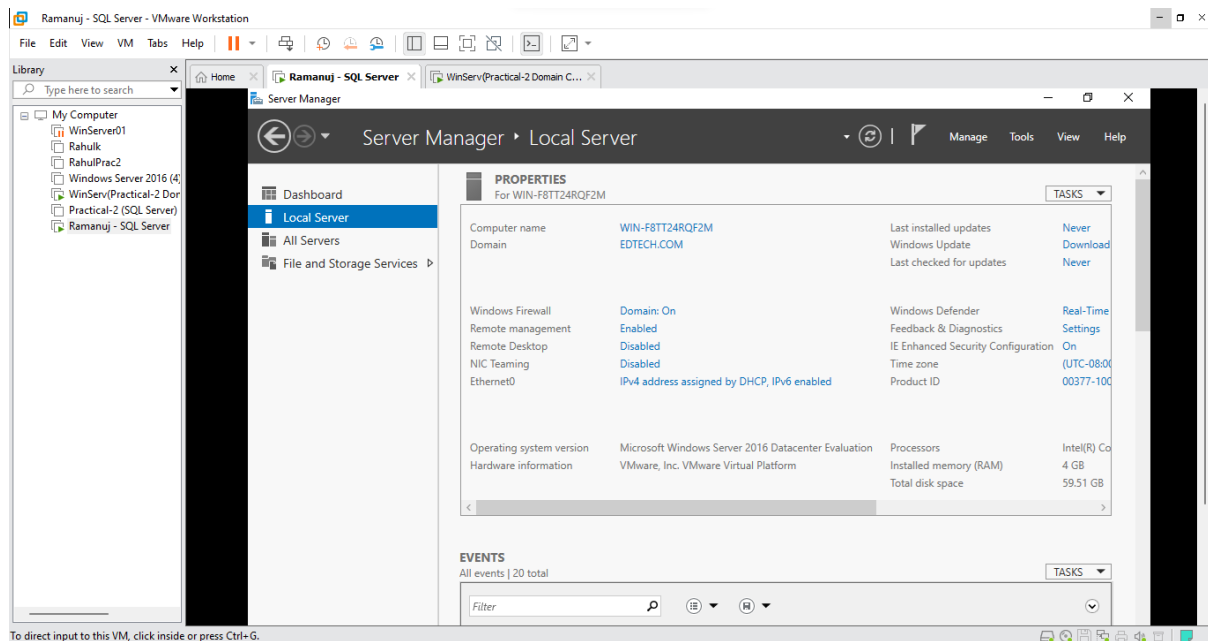


Step 3: Installing SQL Server 2016


Within your Cloud Management Server Click on SQL Server 2016 iso.

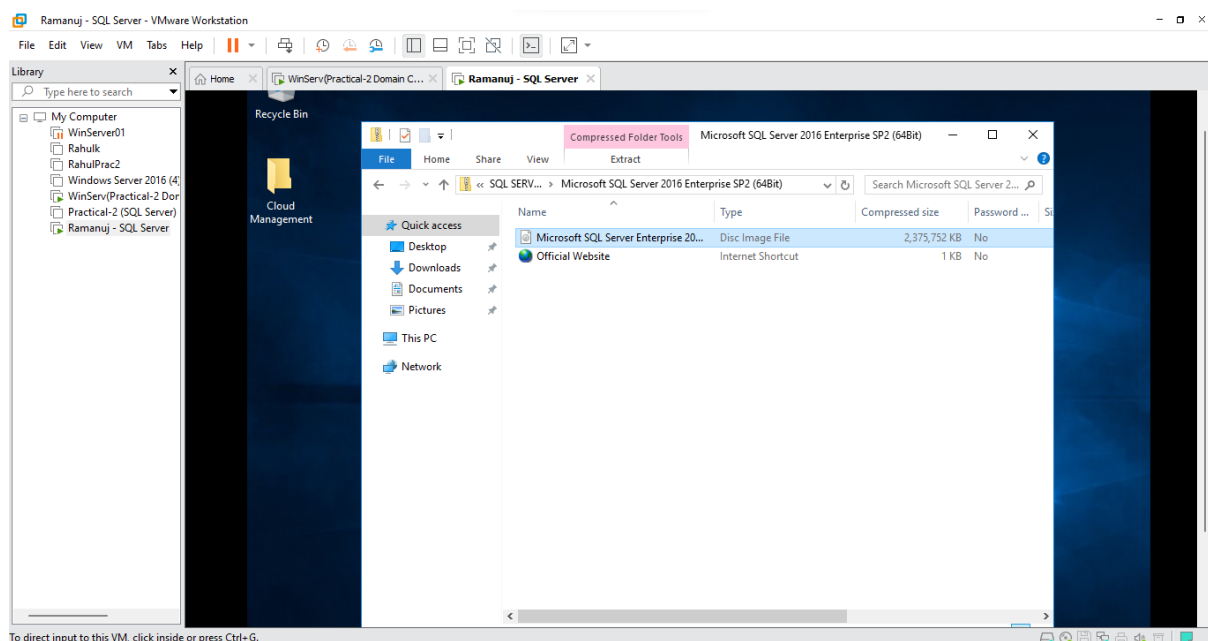


- Double Click Setup to start the installer

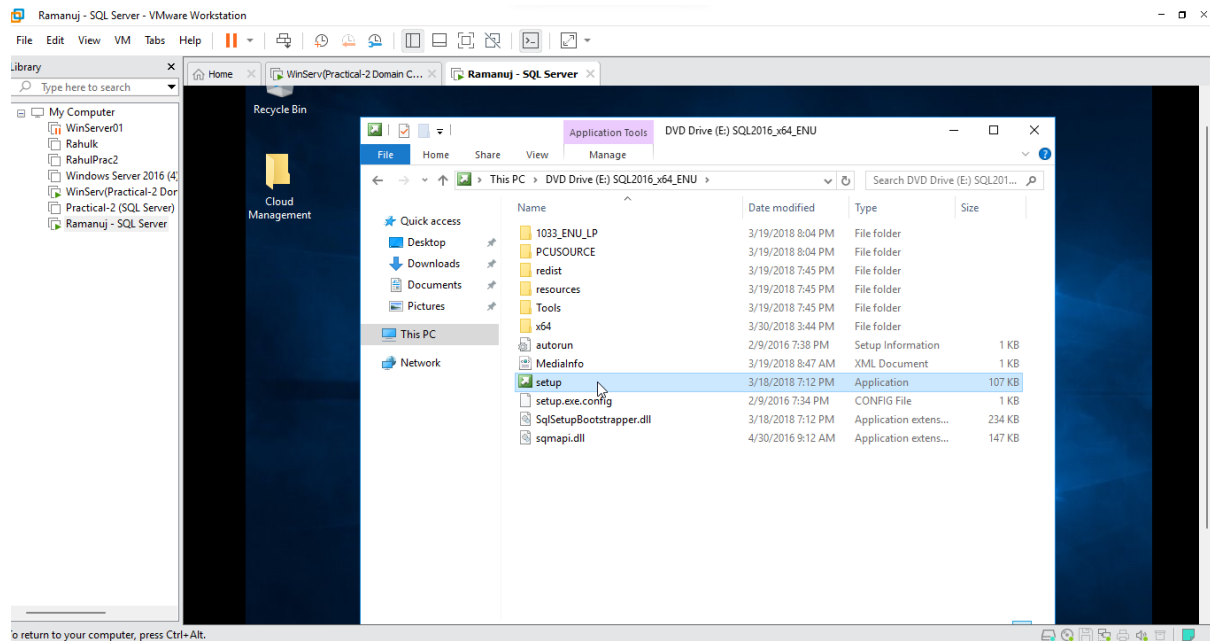


- Click on **Installation** and Click on **New SQL Server stand alone installation**

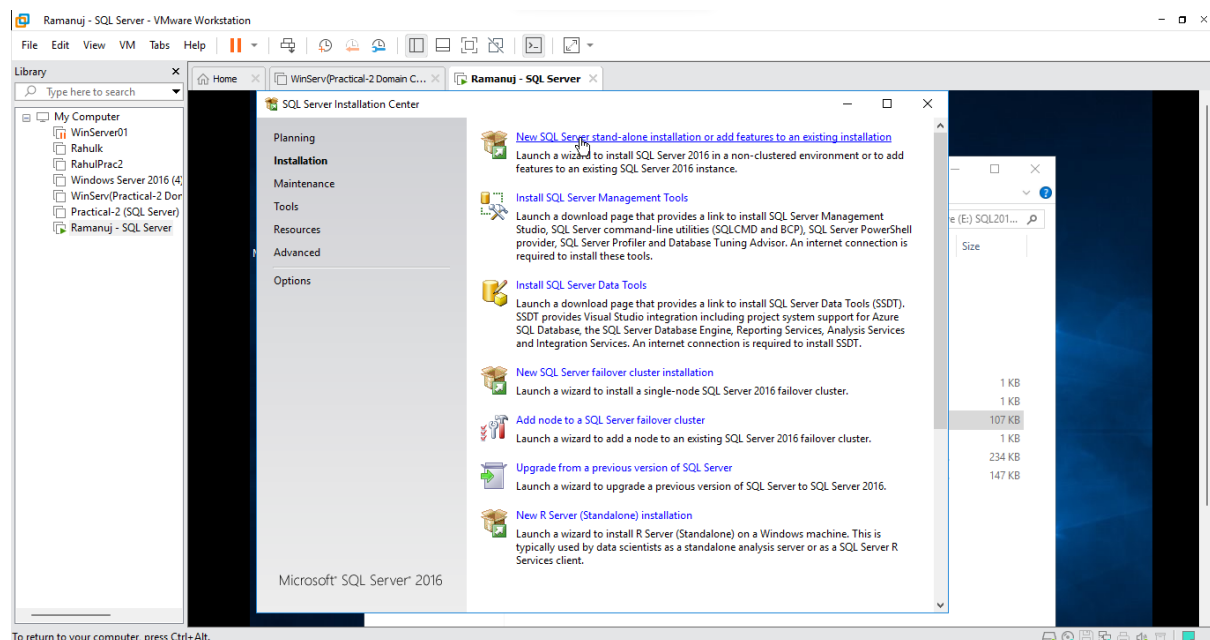


- Keep default values and Click **Next**

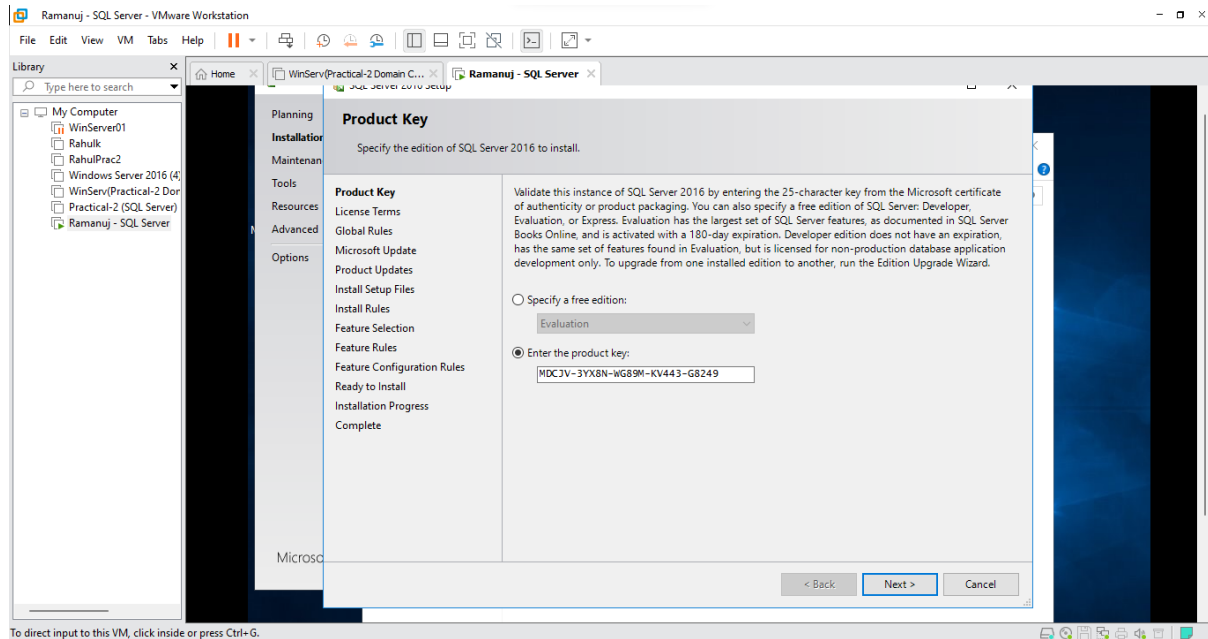


- Select **I accept the license terms** and Click **Next**

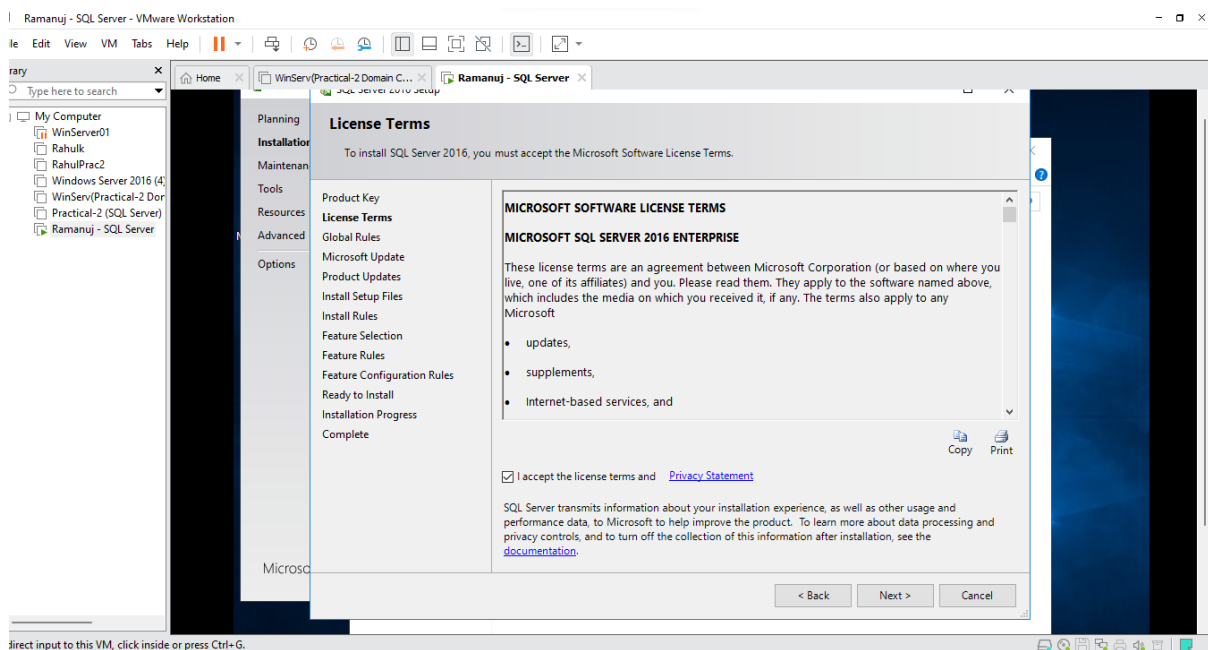


- Keep default values and Click **Next**

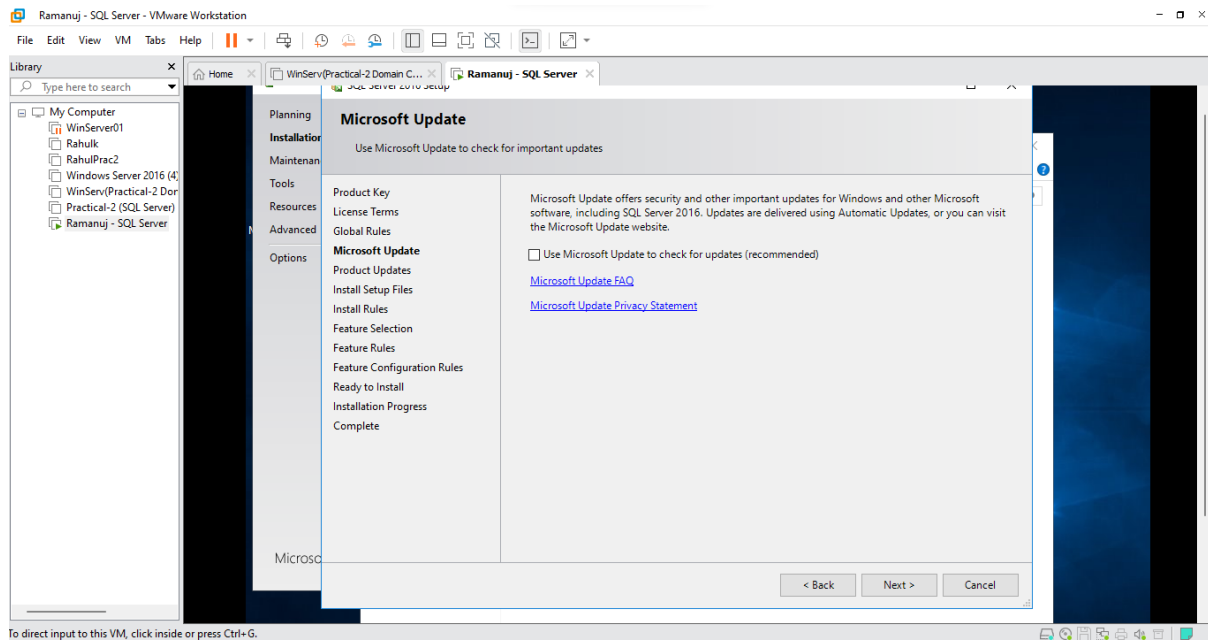


- Click **Next**

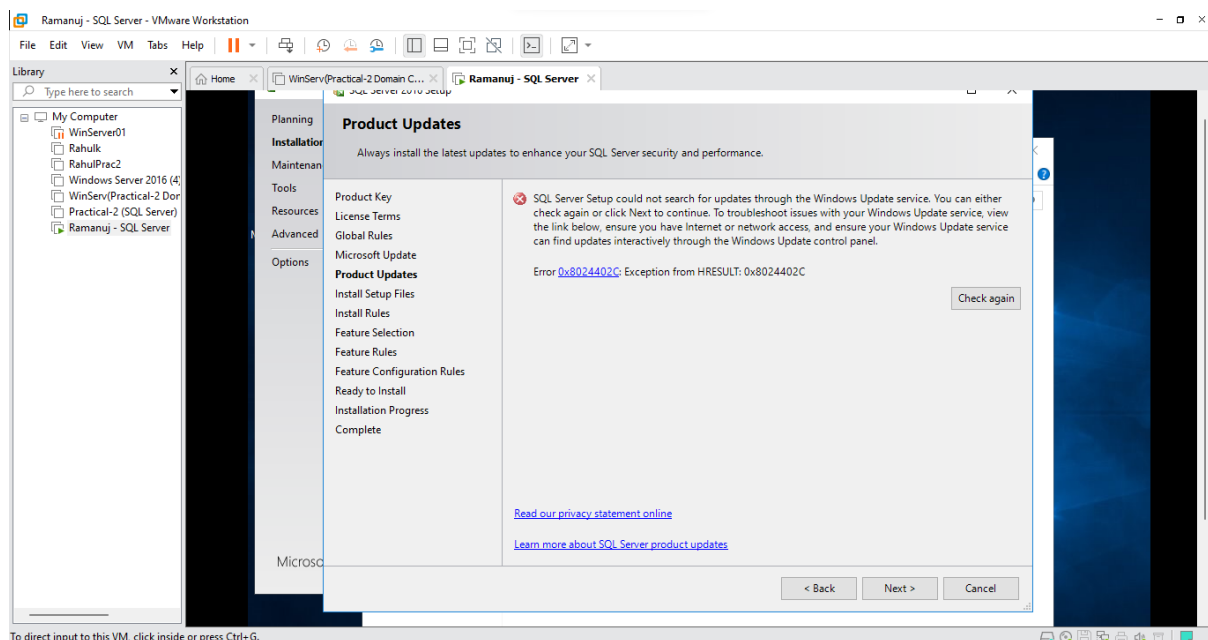


- Click Next

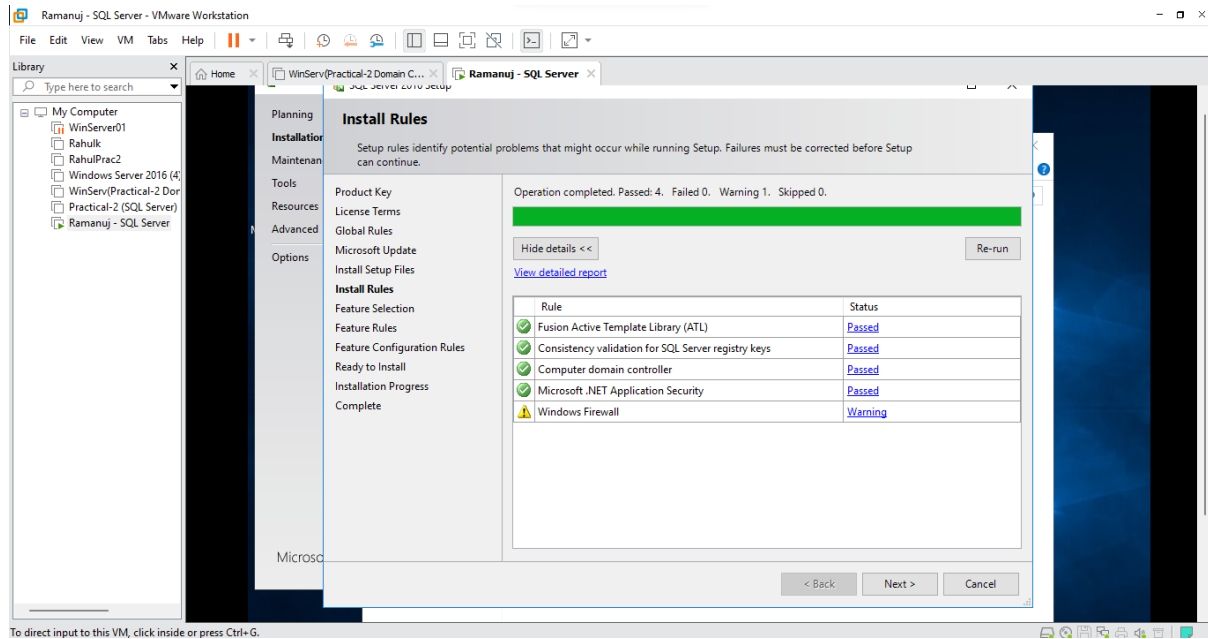


- Select the features given below:
SQL Server Replication
Full Text and Semantic Extractions for Search
Analysis Service
Reporting Service –Native
Reporting Service –Sharepoint
Reporting Service add-in for Sharepoint Products
 And Click Next

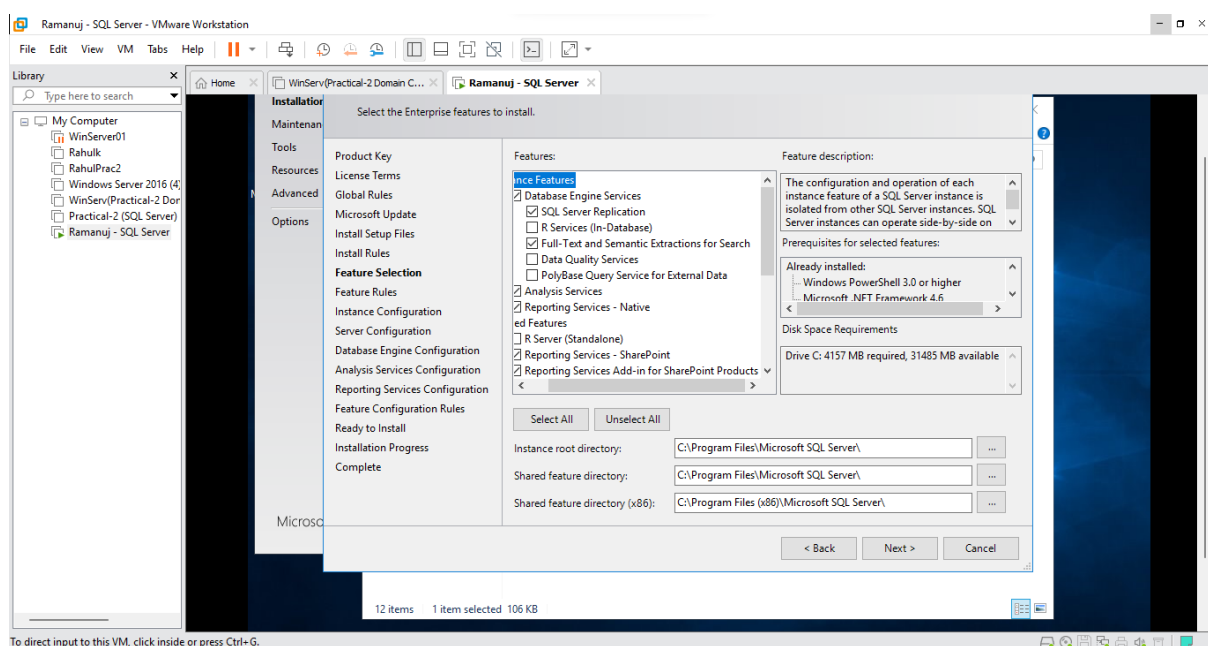


- Select **Named Instance** and type **MSSQLSERVER** and Click **Next**

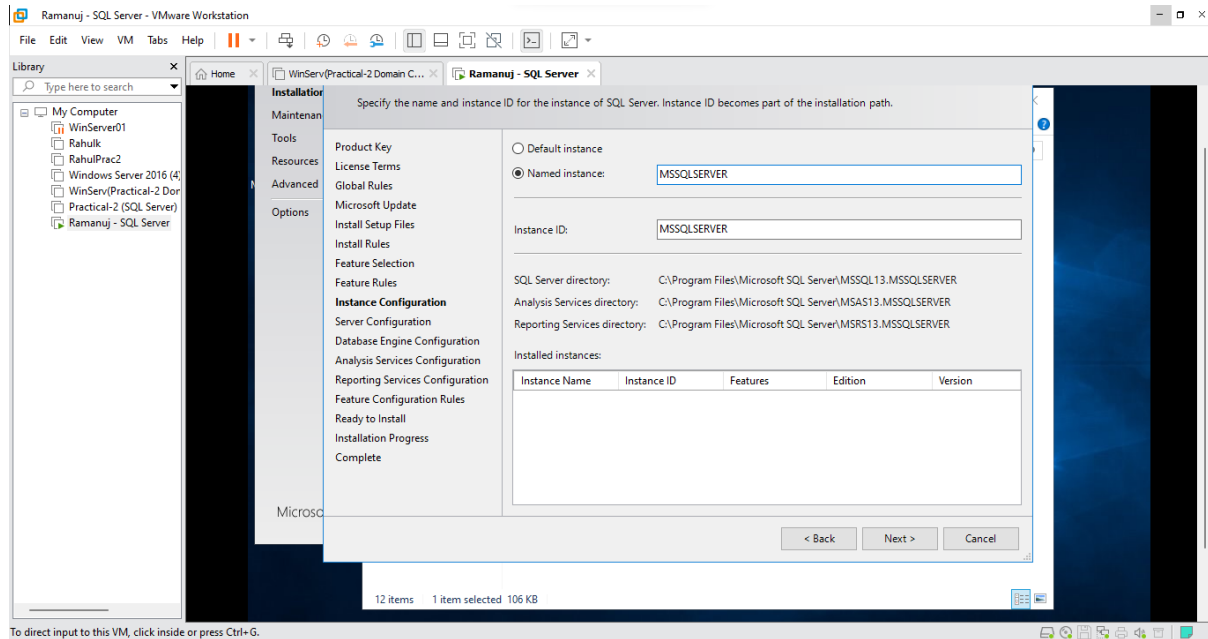


- Keep default values and Click **Next**

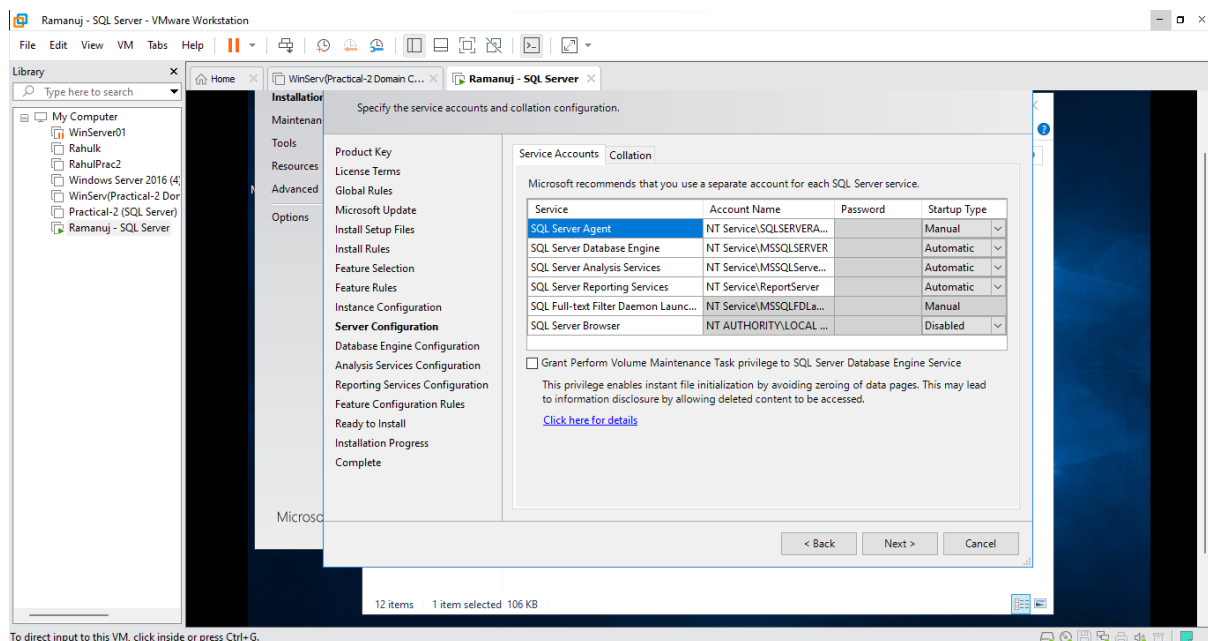


- Select **Mixed Mode** and Set a password (Here it is ADMIN@123) and Click on **Add Current User** and Click **Next**

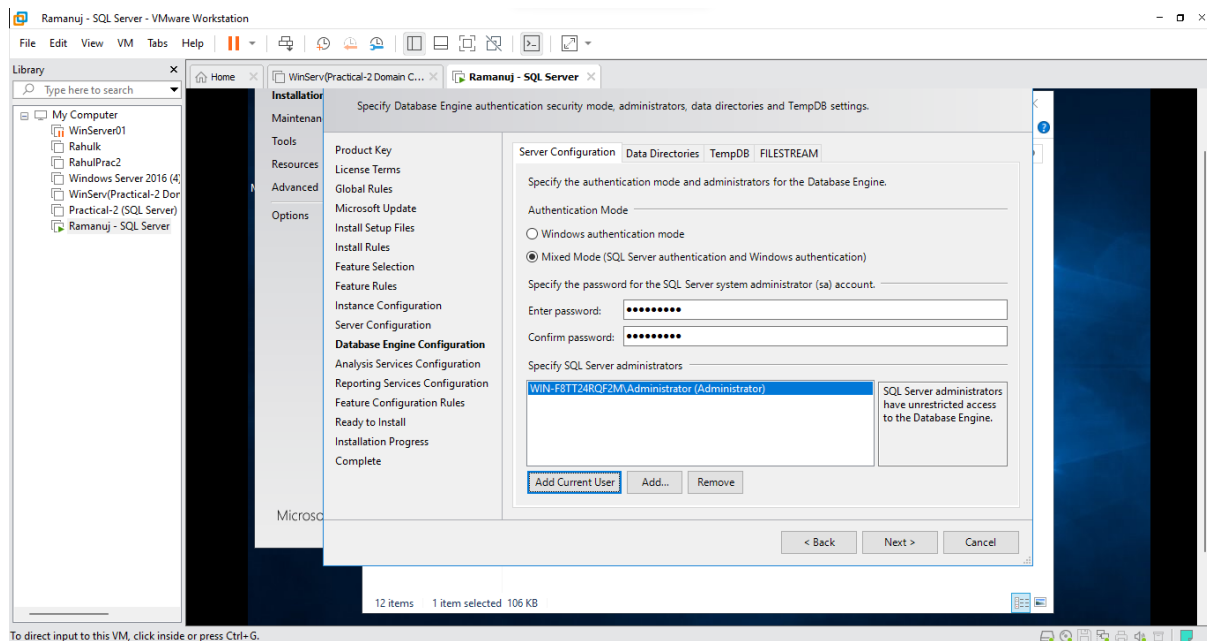


- Click on **Add Current User** and Click **Next**

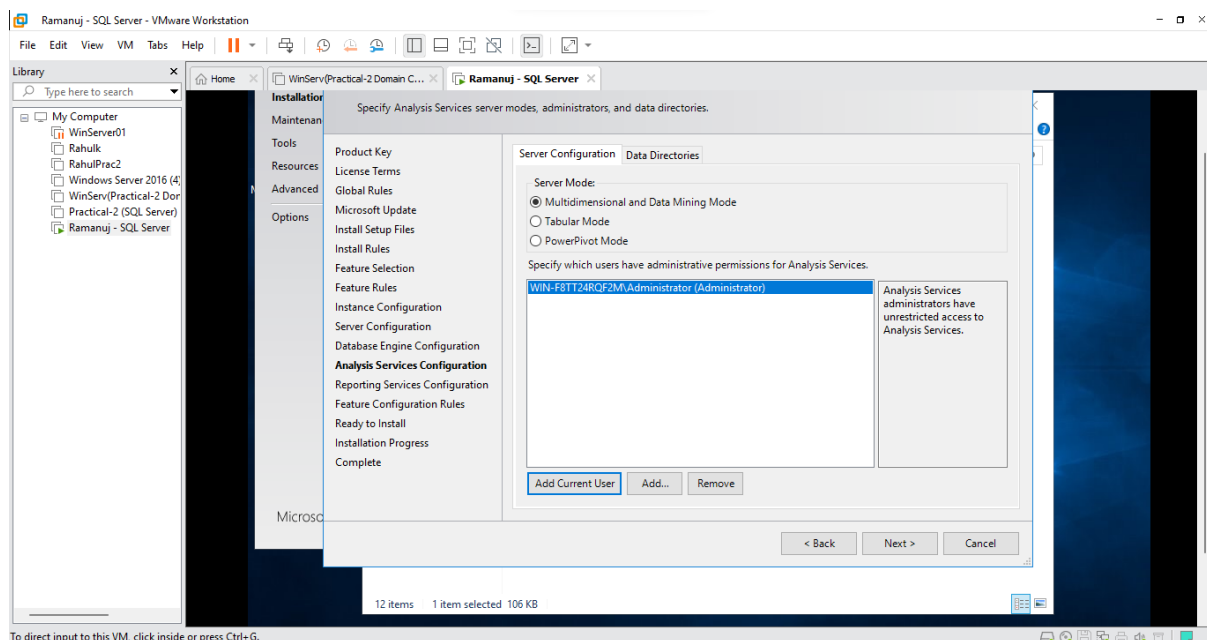


- Keep default values and Click **Next**

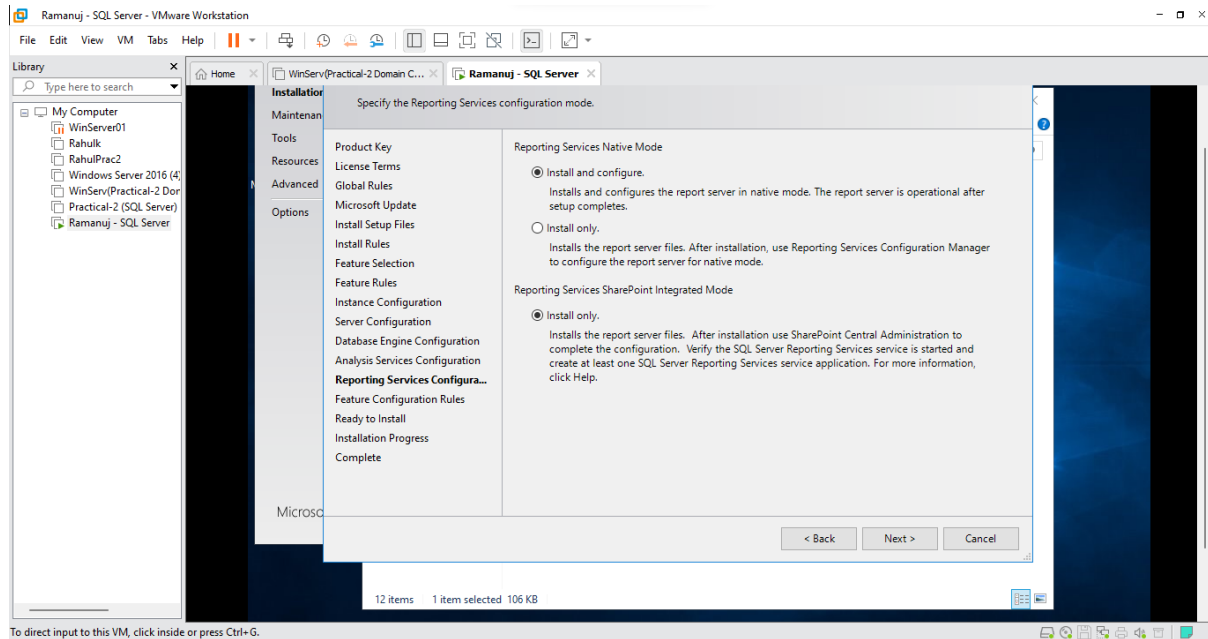


- Click on **Install**

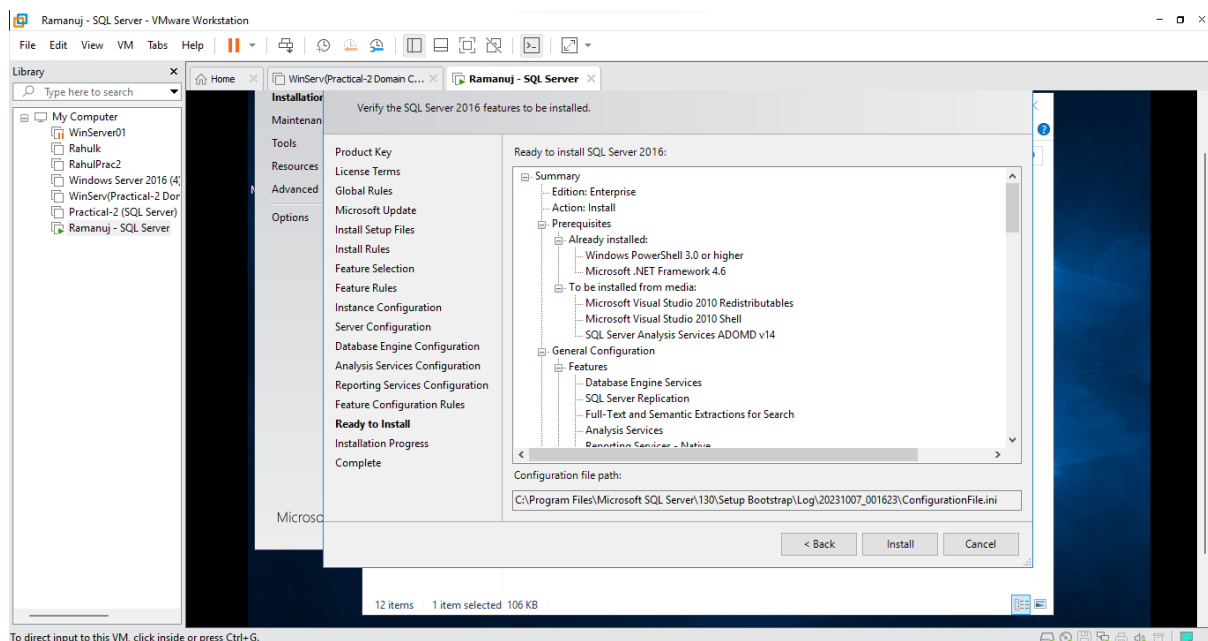

- SQL Files will start installing

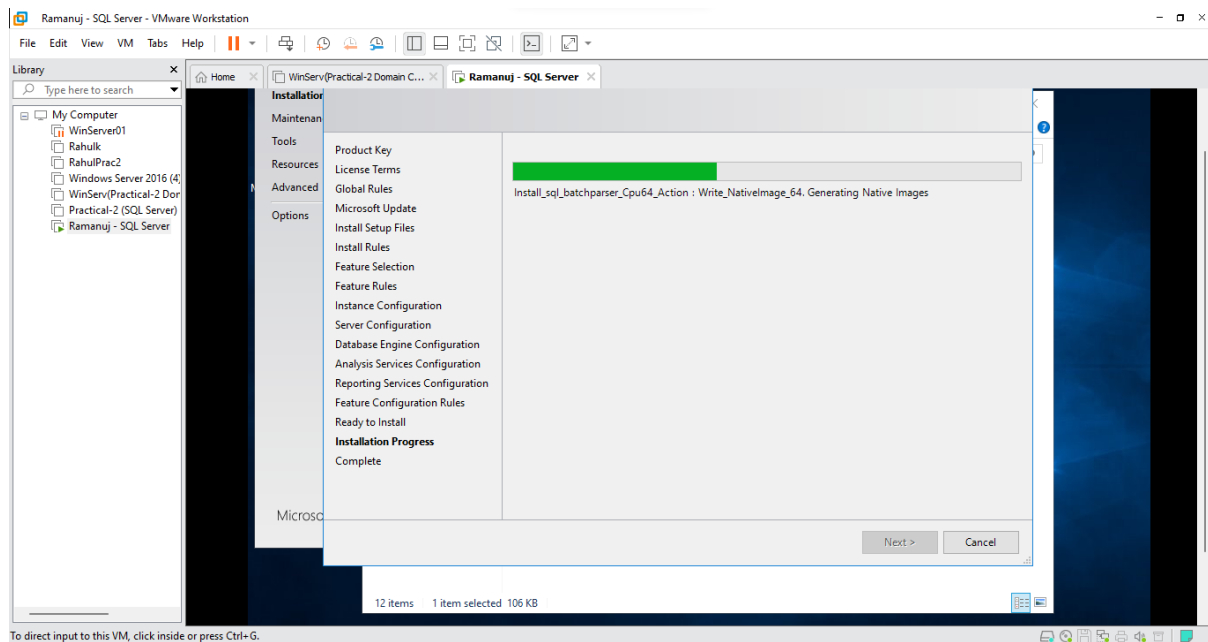


- SQL Server has finished installing and Click Close

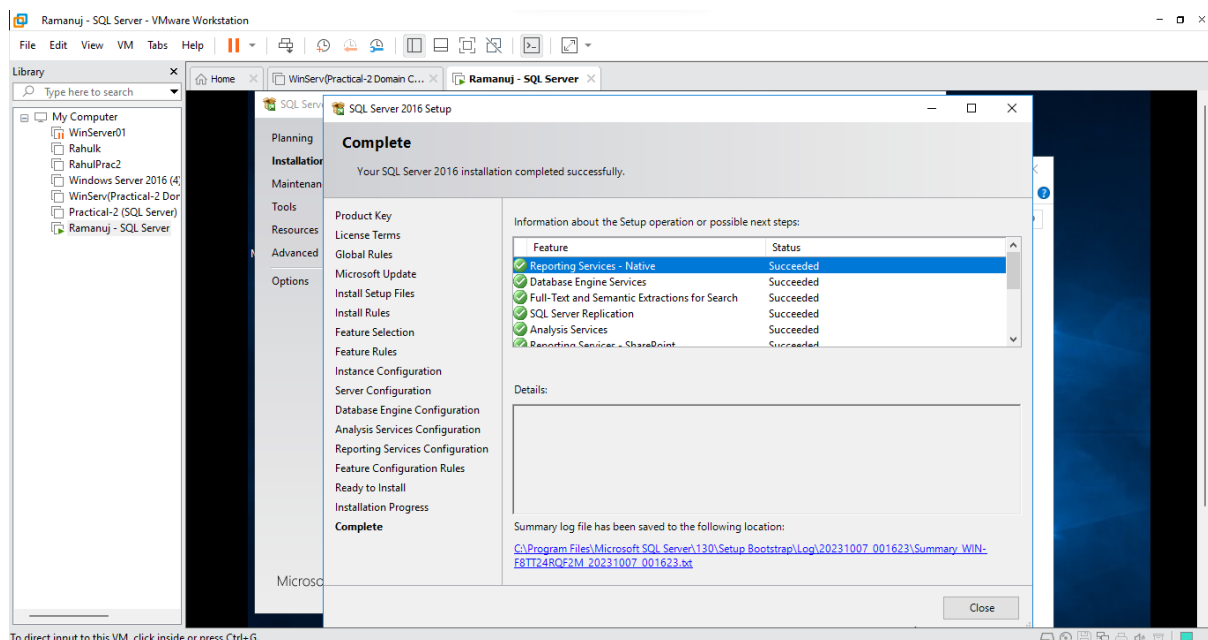


Step 4: Installing SSMS (SQL Server Management Studio)


- Click on the **SSMS** setup

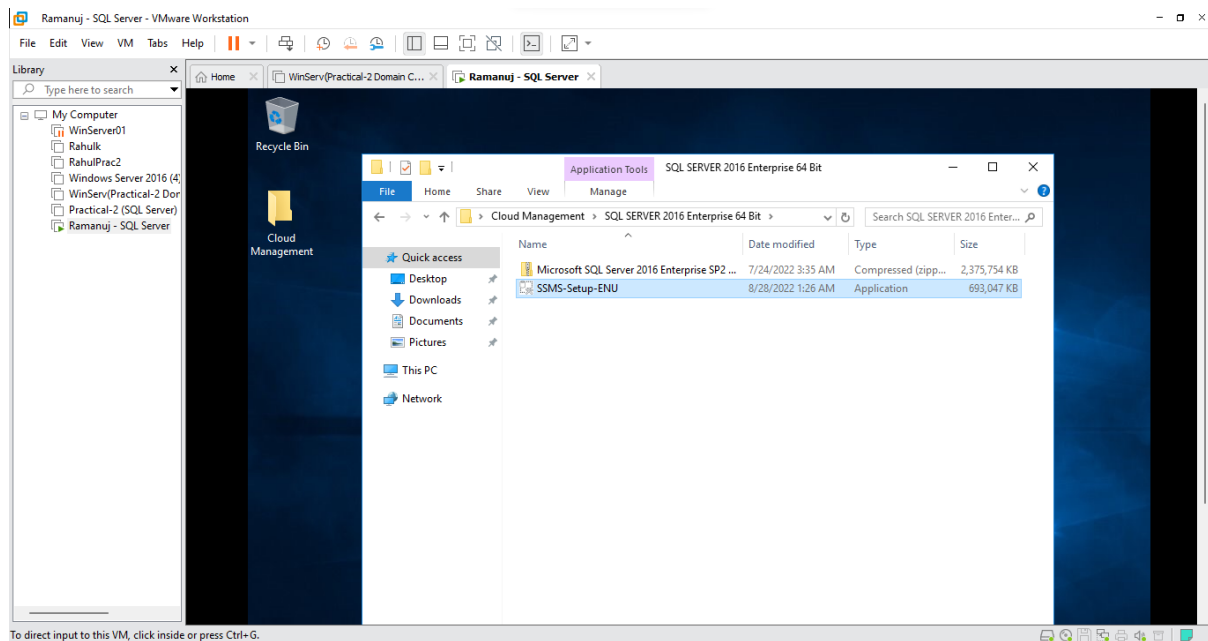


- Click **Install**

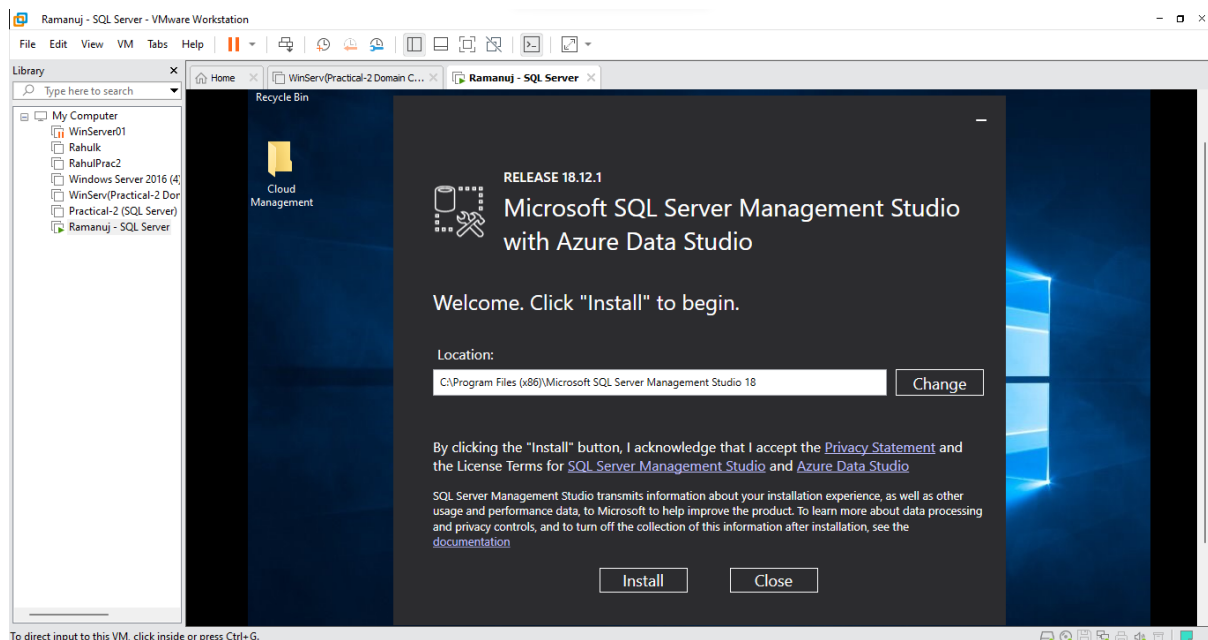

- SSMS will start installing

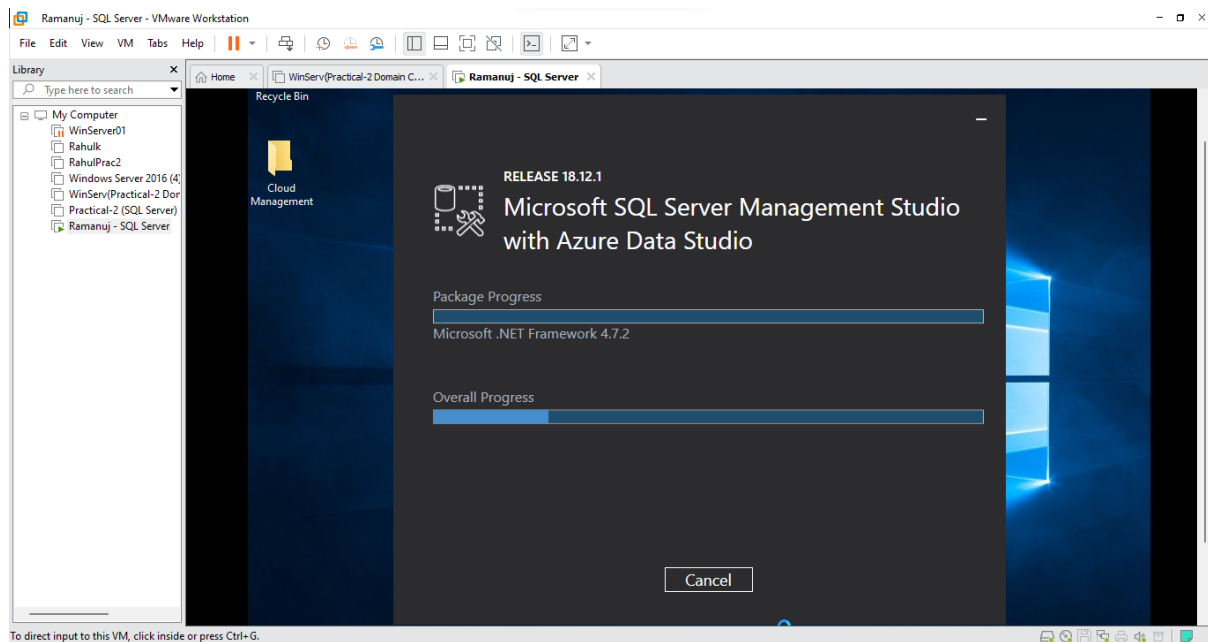


- After the components are installed you will have to restart your VM.
Click on **Restart**

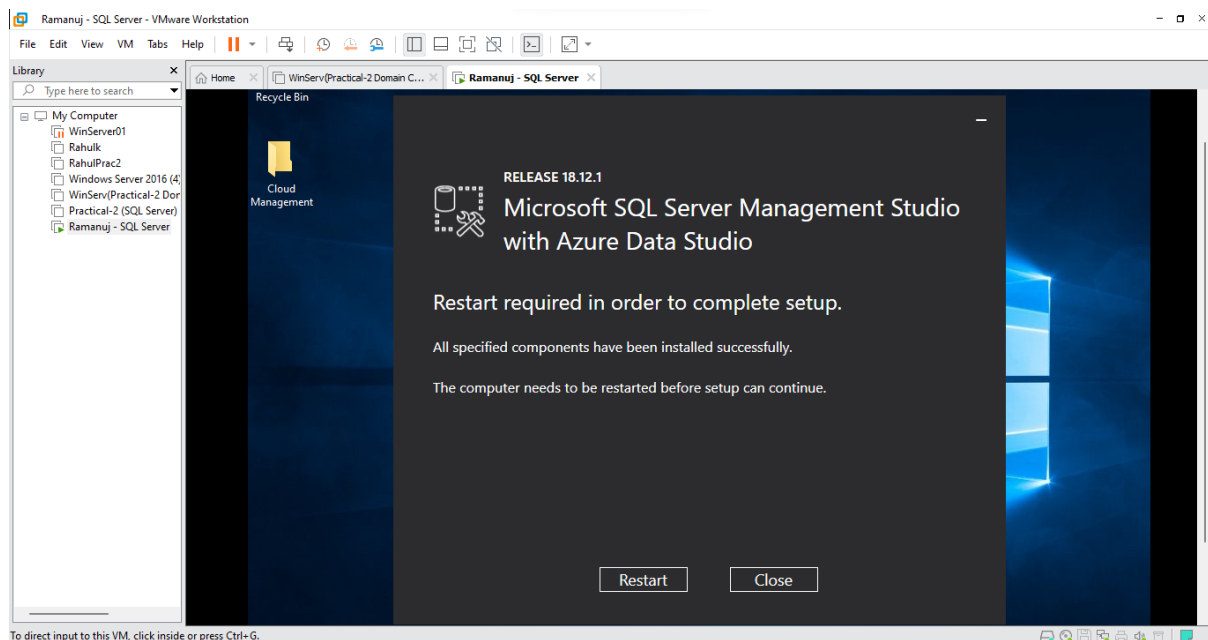


Step 5: Connect SQL Server to SSMS

- Open SSMS

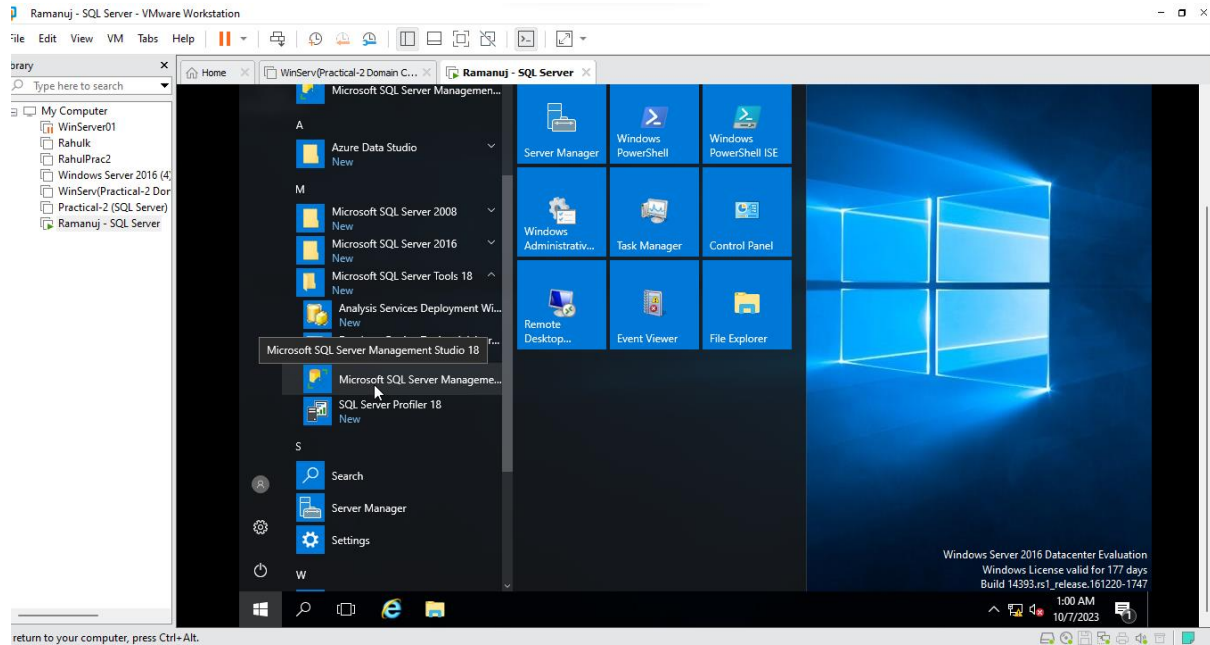


- Click on **Connect**

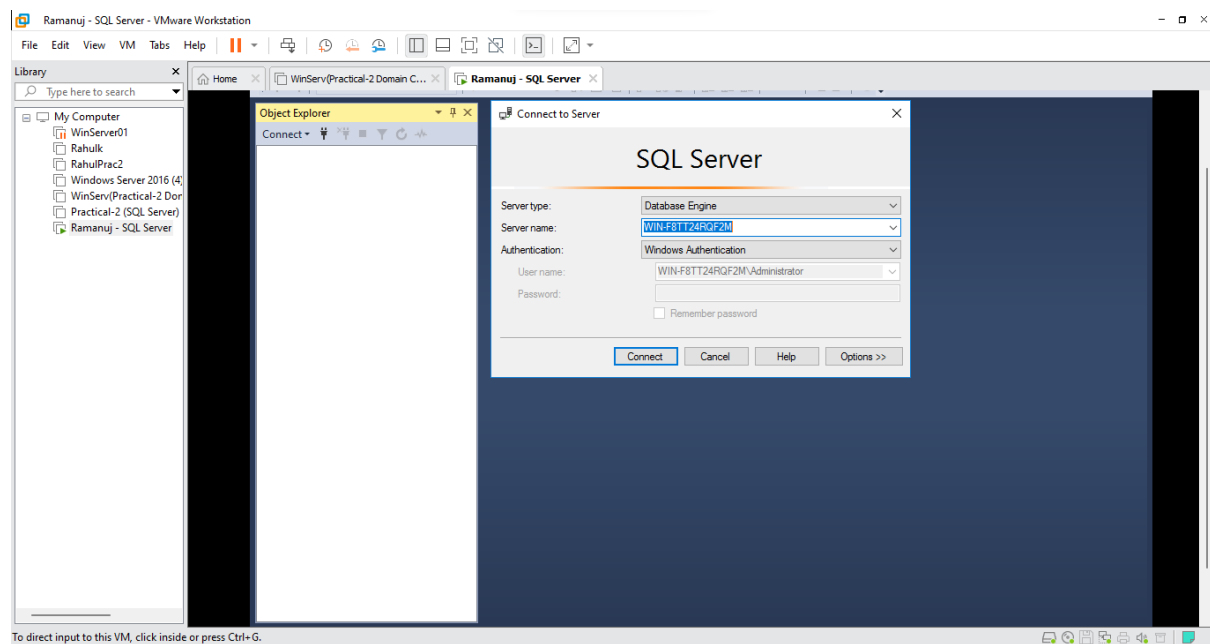


Step 6: Install System Center Service Manager 2019


- Click on the **SCSM_2019** setup

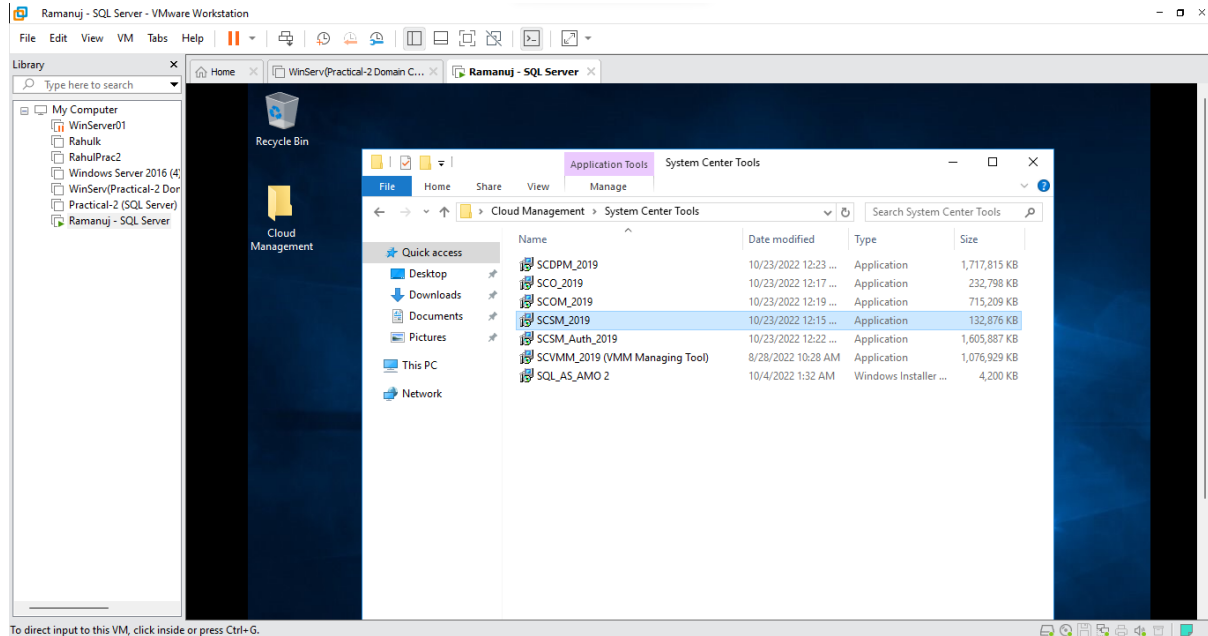


- Click on **Run**

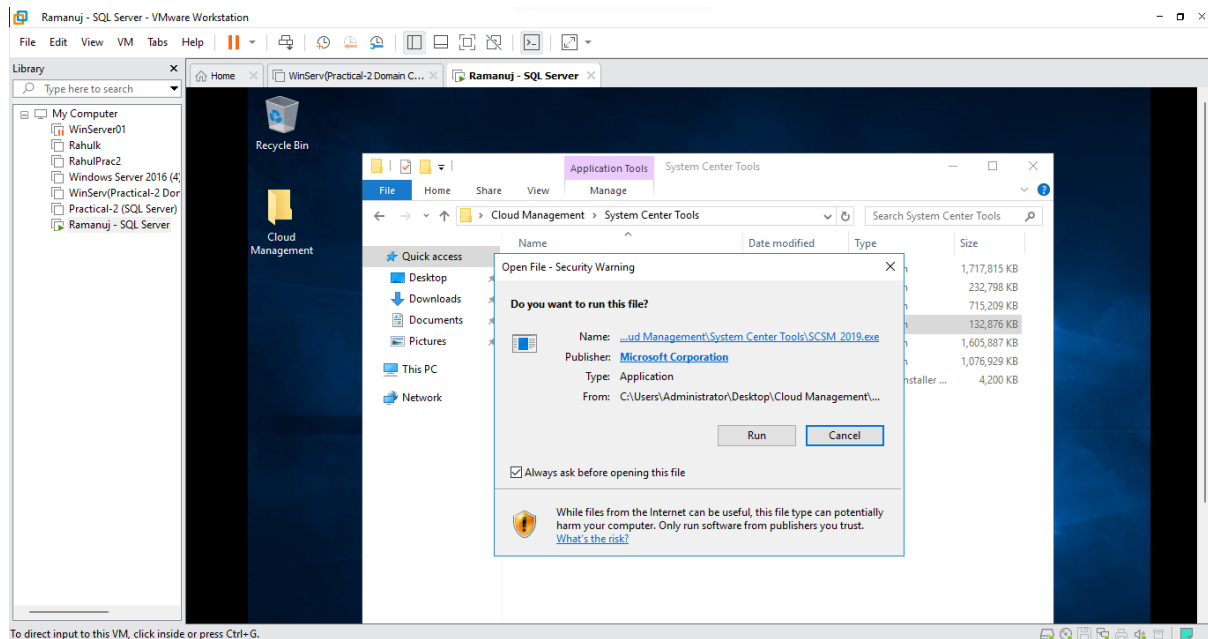


- Click **Next**

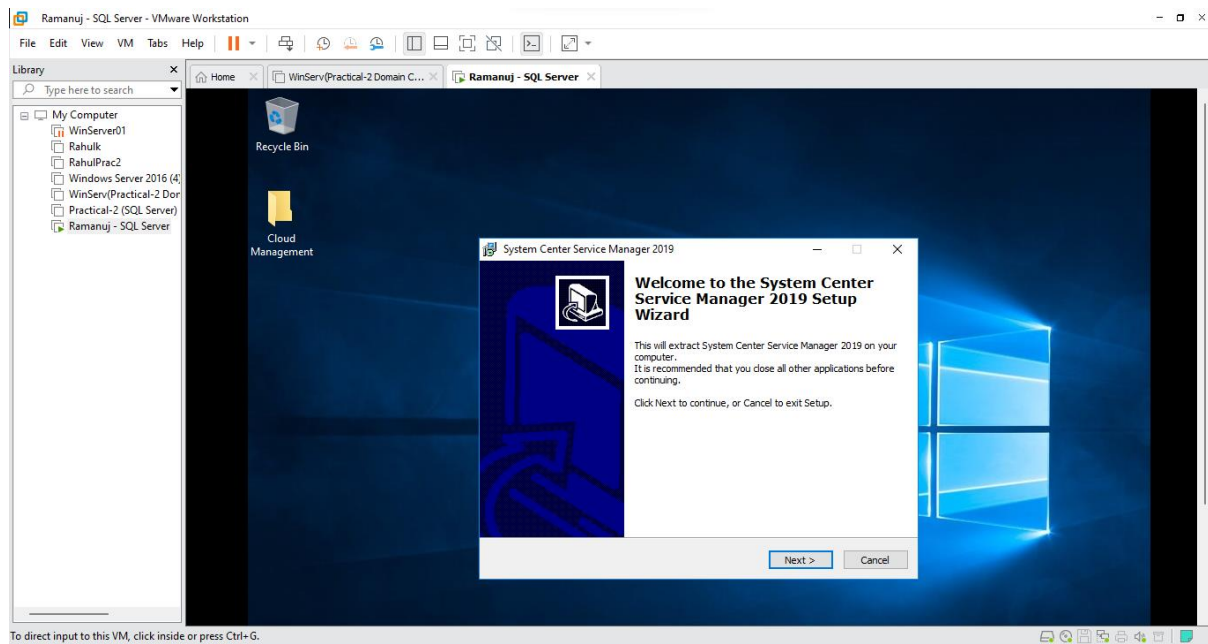


- Select **I accept the agreement** and Click **Next**

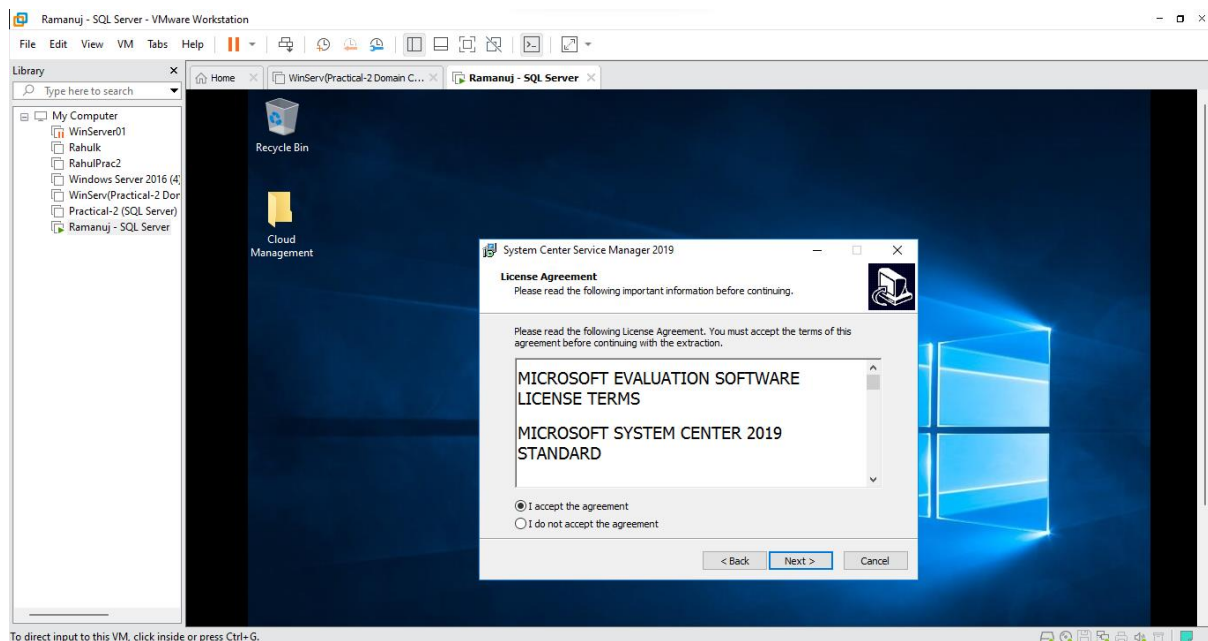


- Keep default path and Click **Next**

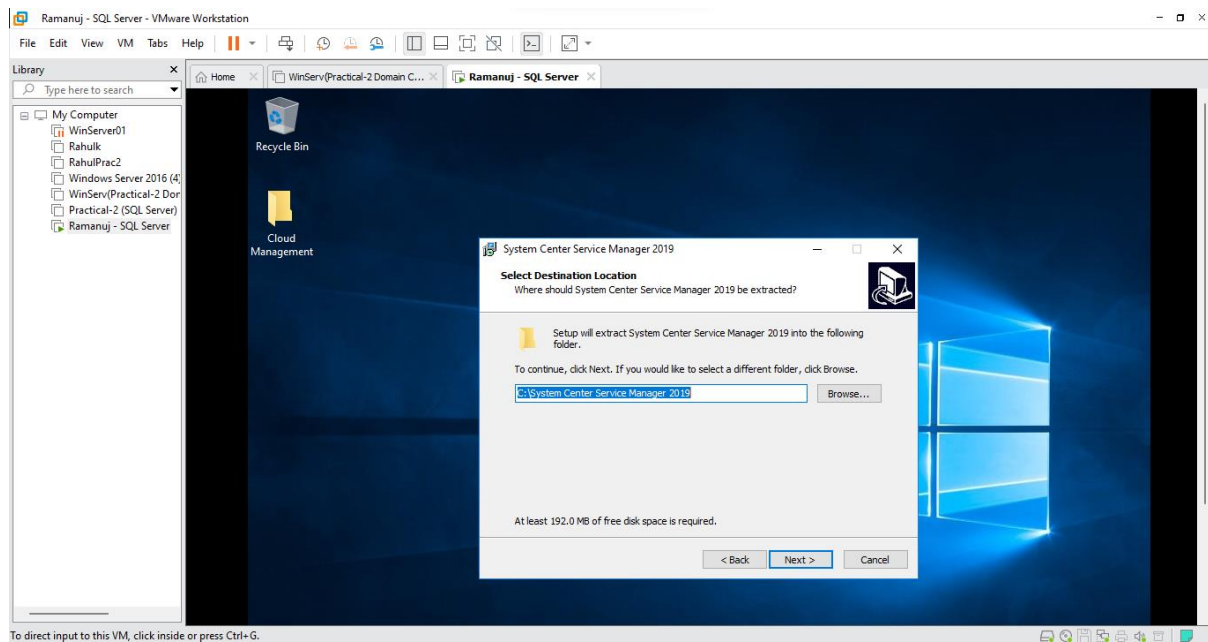


- Click on **Extract**

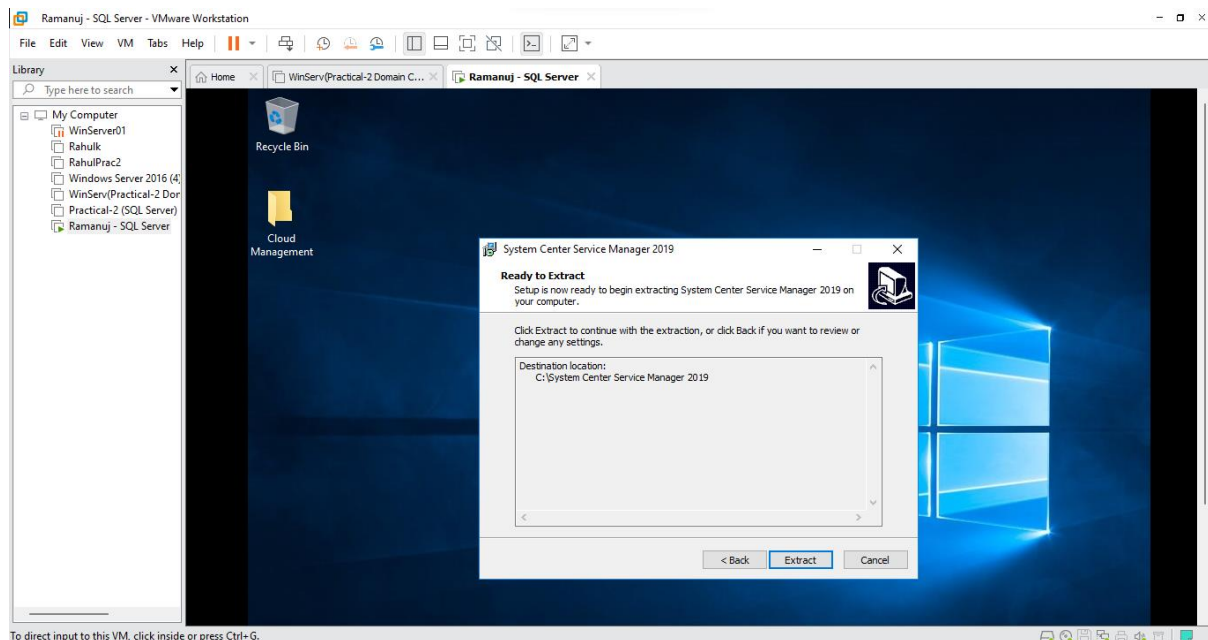


- After extracting open the SCSM 2019 file in your C: Directory and Click on **Setup**

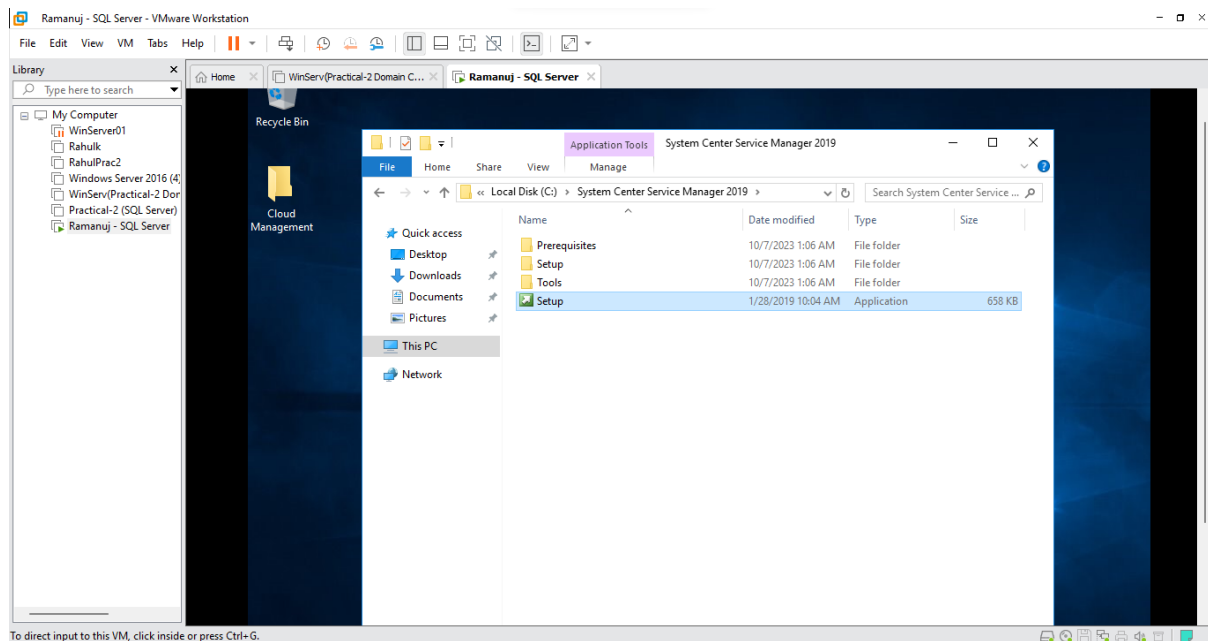


- Click on **Service Manager Management Server**

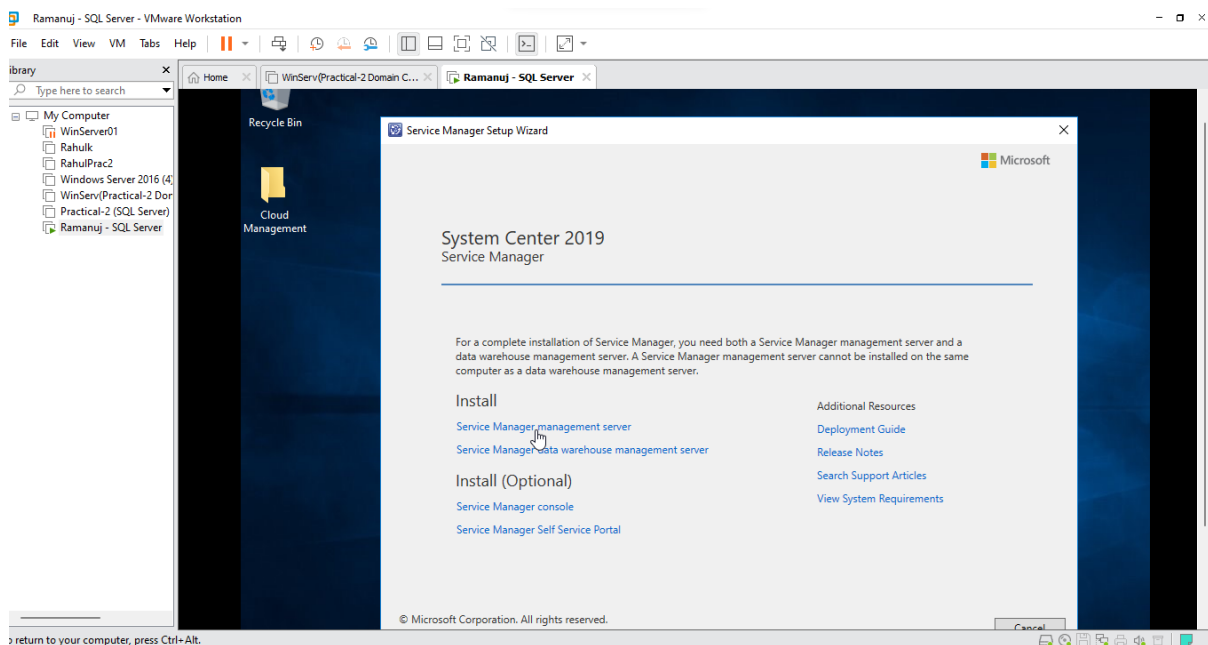


- Select **Install as Evaluation Edition** and Select **I have read and understood the above agreement** and Click **Next**

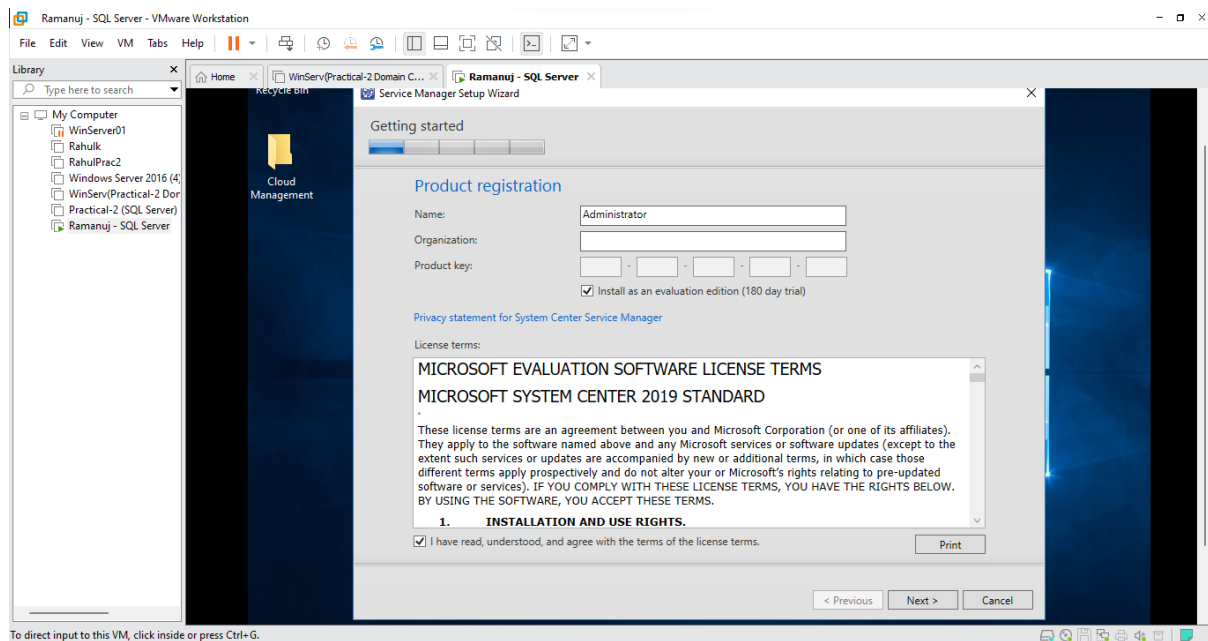


- Keep default values and Click **Next**

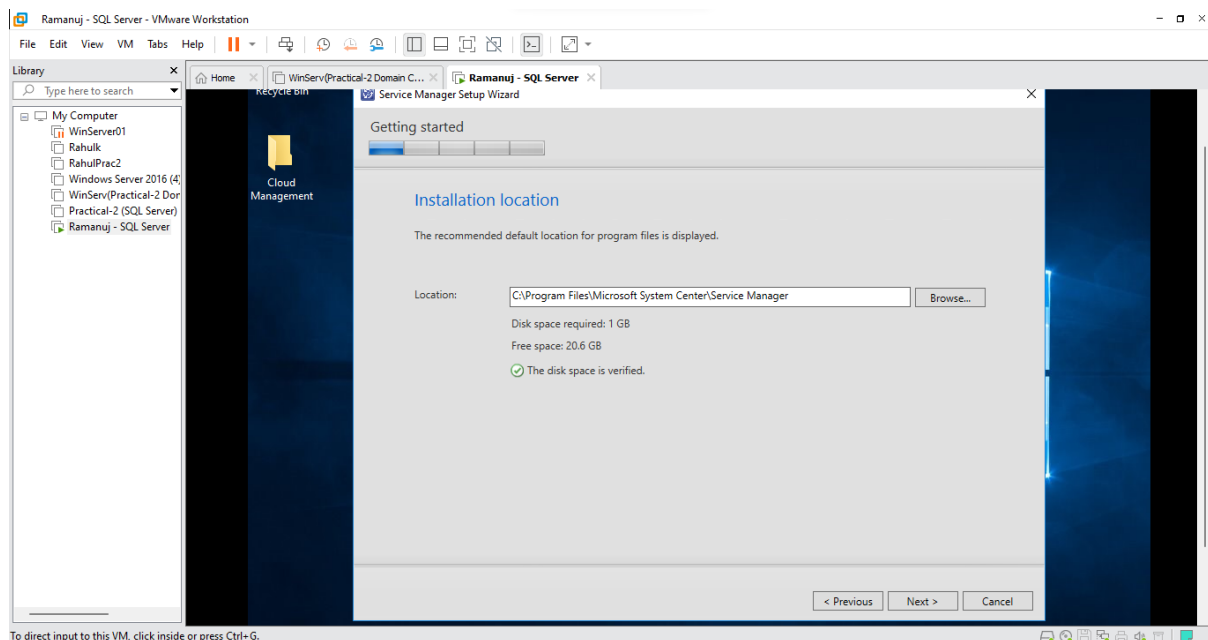


- Now an Error will show, to clear this error we have to install the Analysis Management Objects (AMO) 2014. Click on the **Setup File**

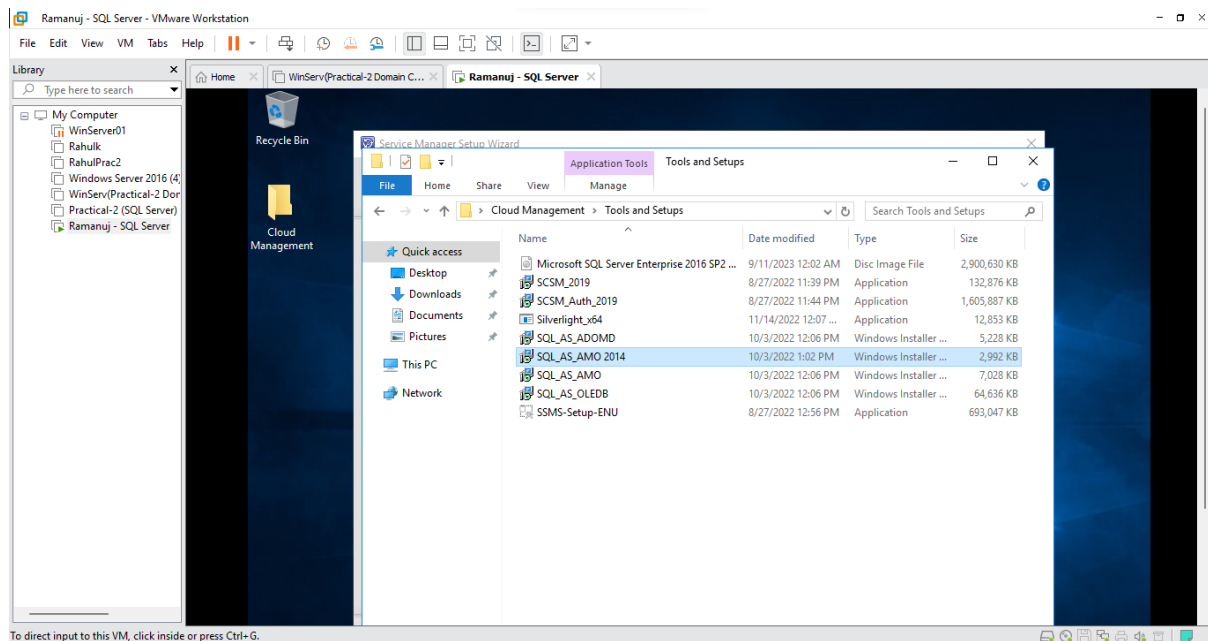


- Click Next

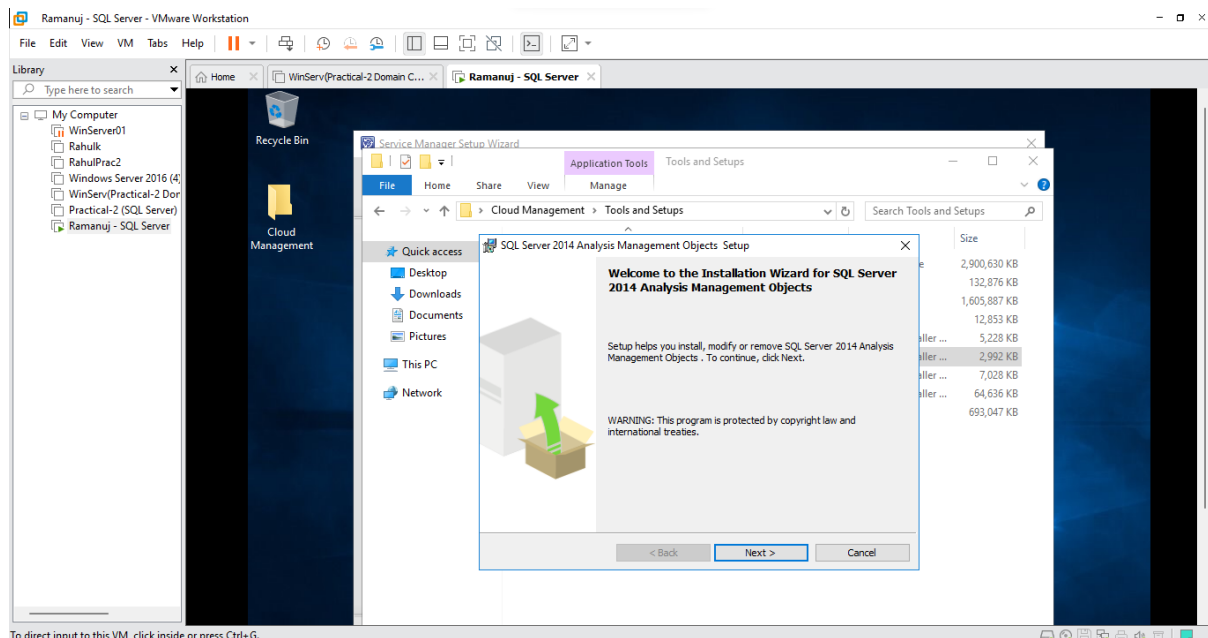


- Select **I accept the terms of this agreement** and Click **Next**

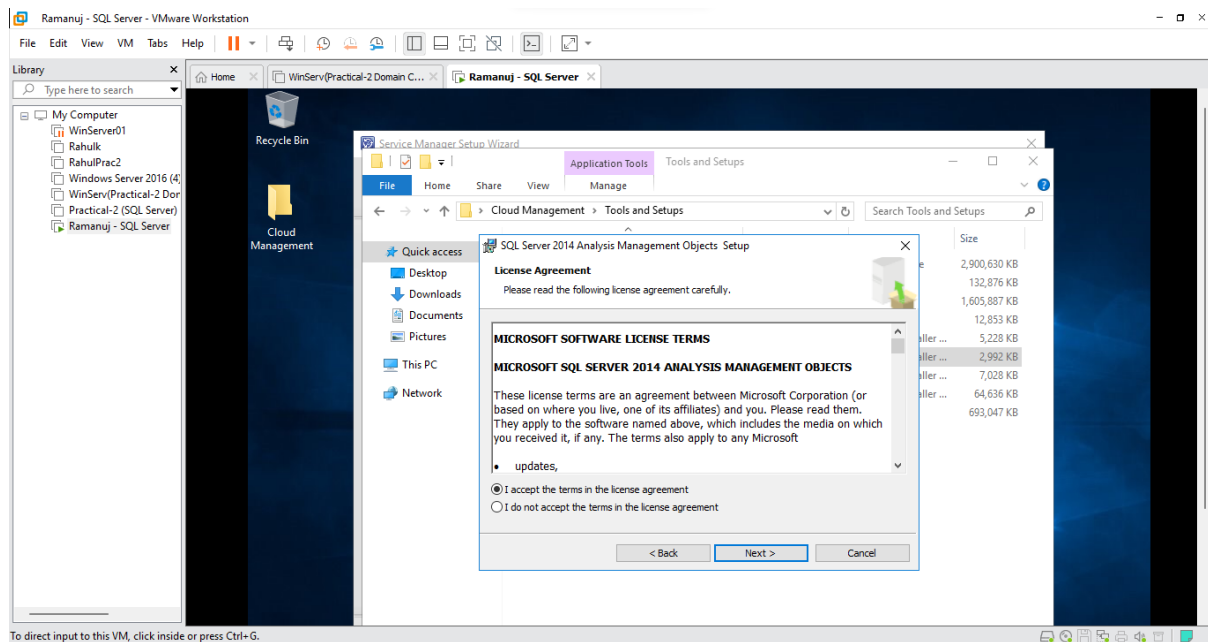


- Click on **Install**

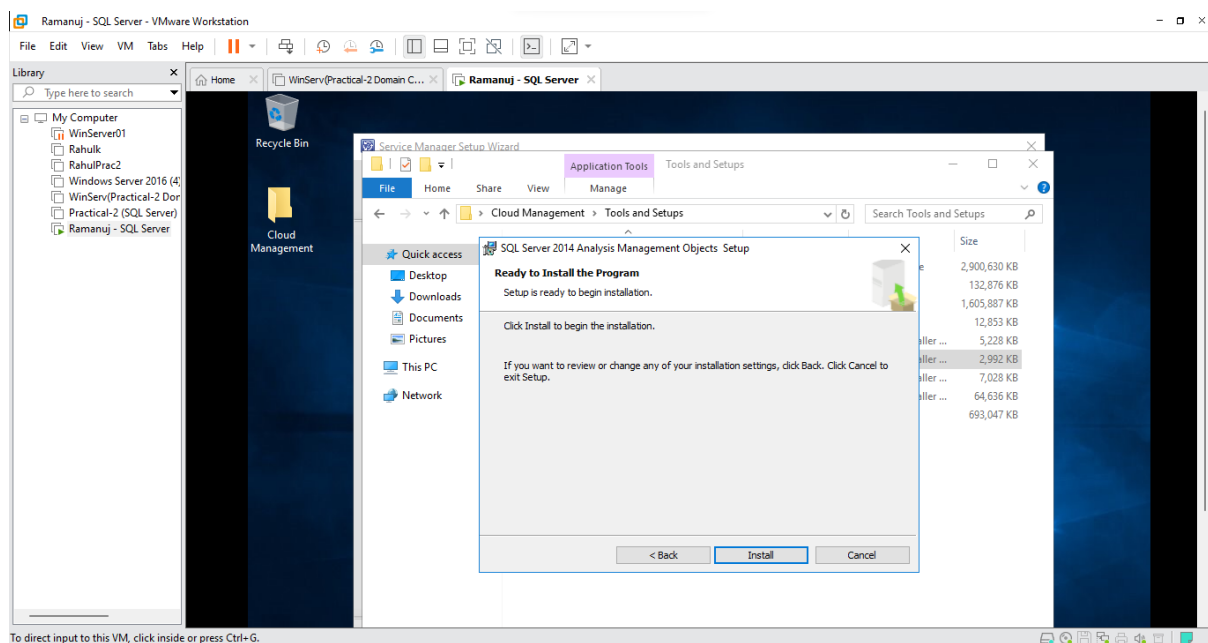


- After installation go back to the **SCSM setup** and Click on **Check pre-requisites again**, the error will be solved and Click **Next**

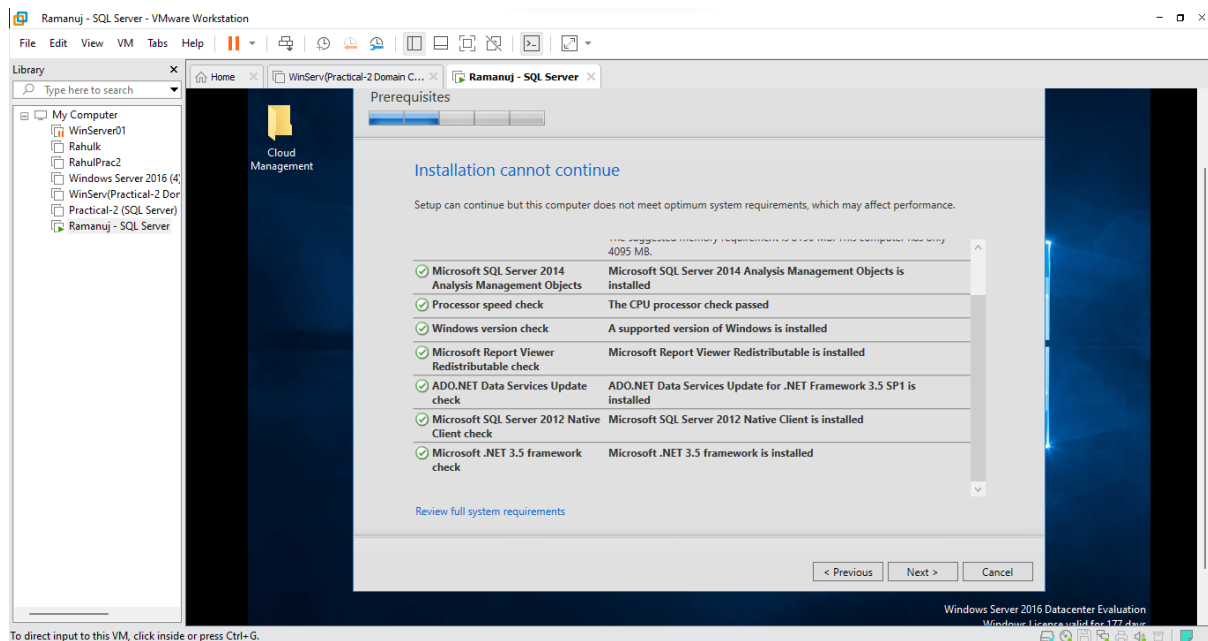


- Enter your SQL Server name (In this case it is WIN-F8TT24RQF2M) and Click **Next**

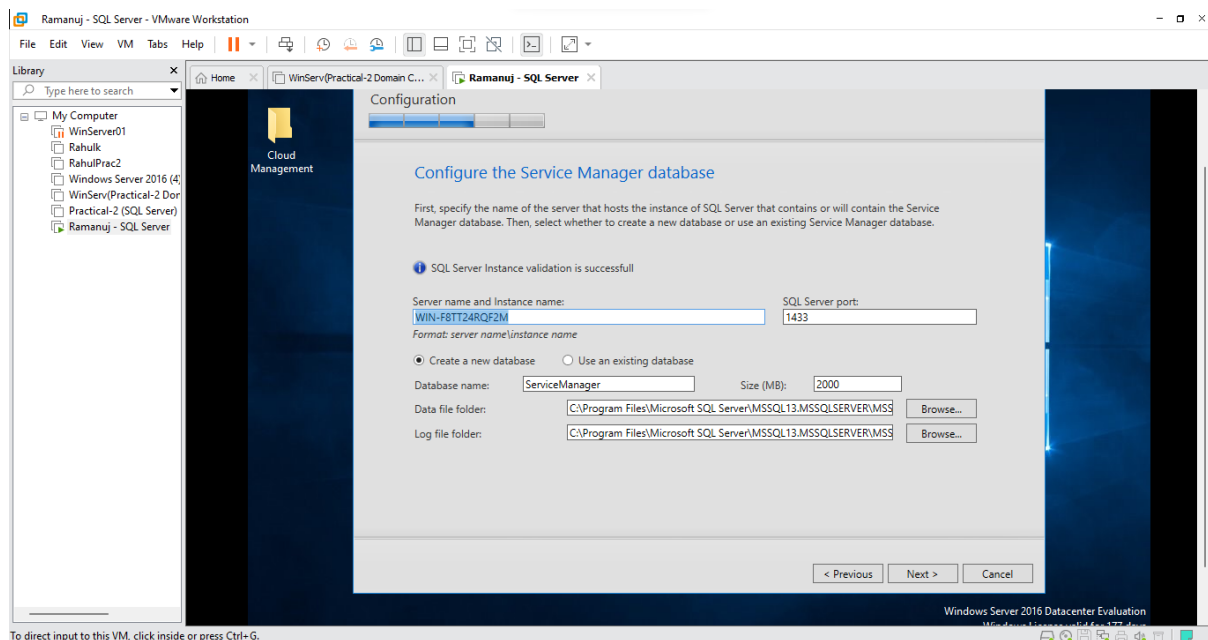


- Enter a management group name (Here it is EDTECH_SERVICE) and Click on **browse** and within the text field type **administrator** and Click **Ok**, Then Click **Next**

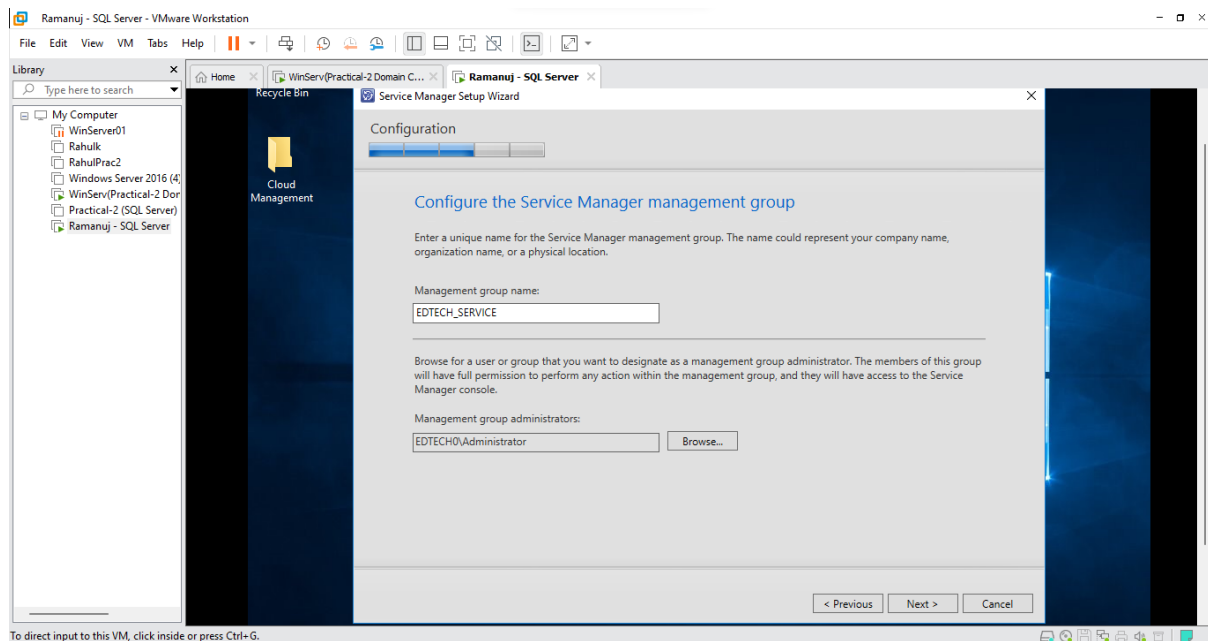


- Select **Domain Account** and Enter the details of the **Domain Controller** and Click **Test Credentials** and Click **Next**

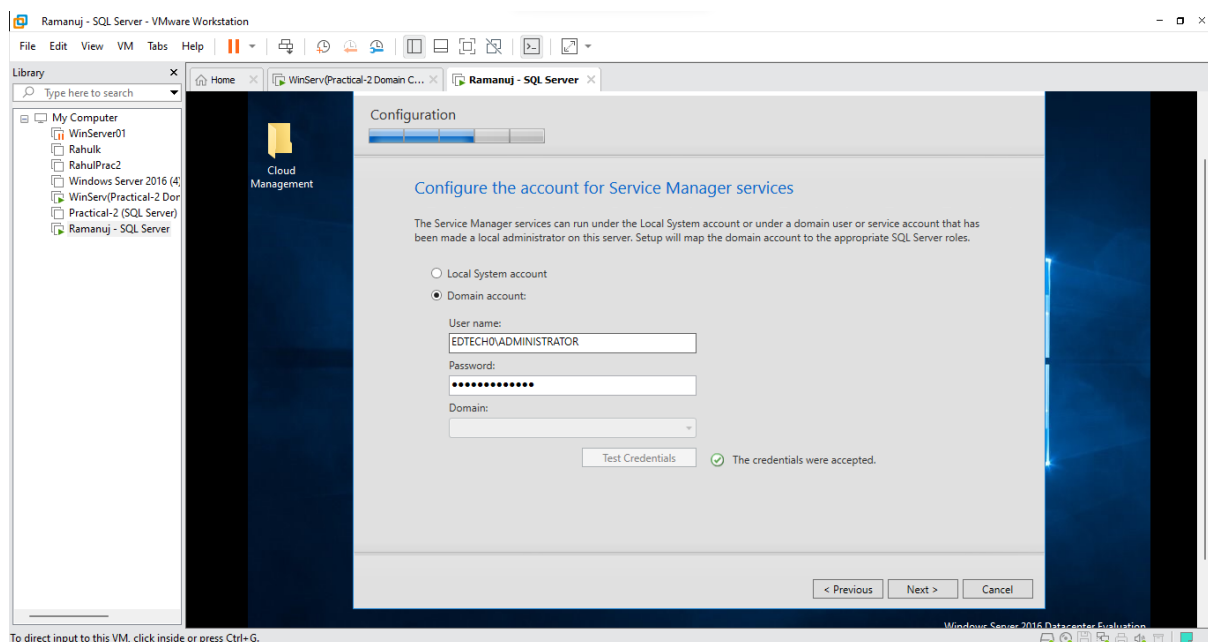


- Click Next

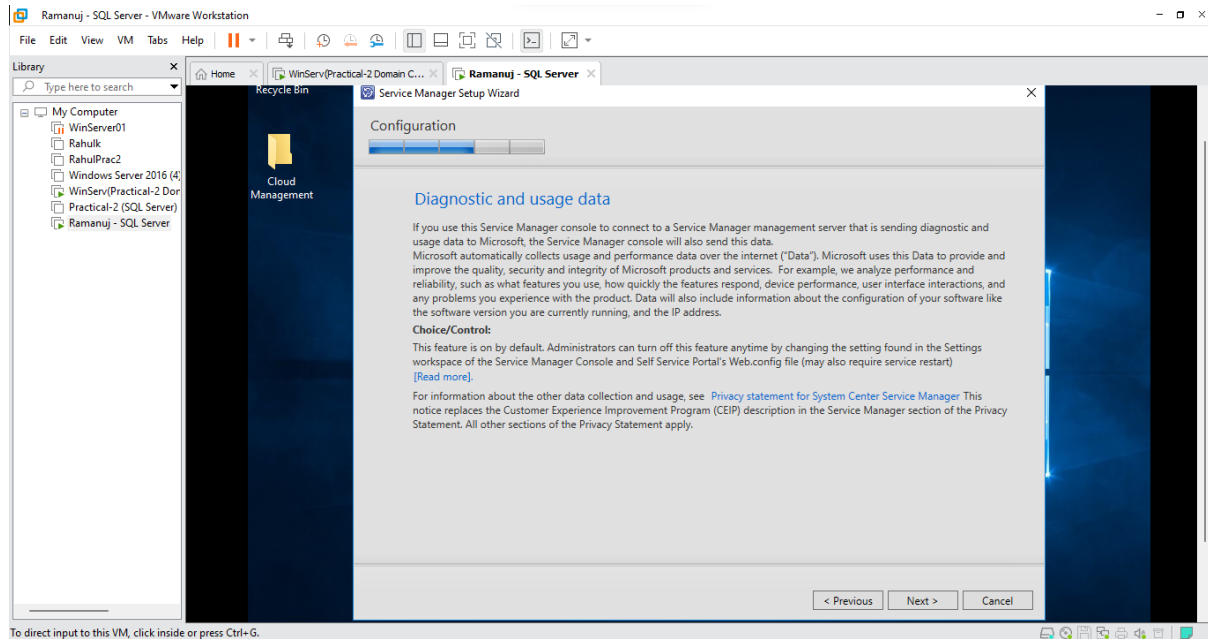


- Select **I do not want Microsoft Updates** and Click Next

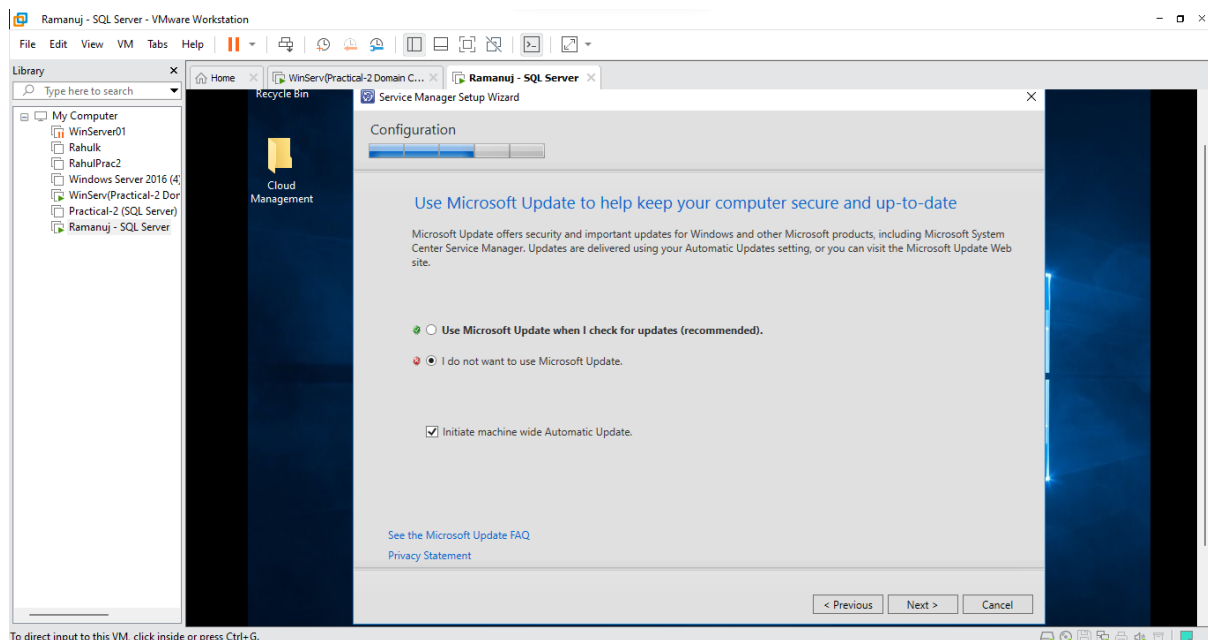


- Click on **Install**

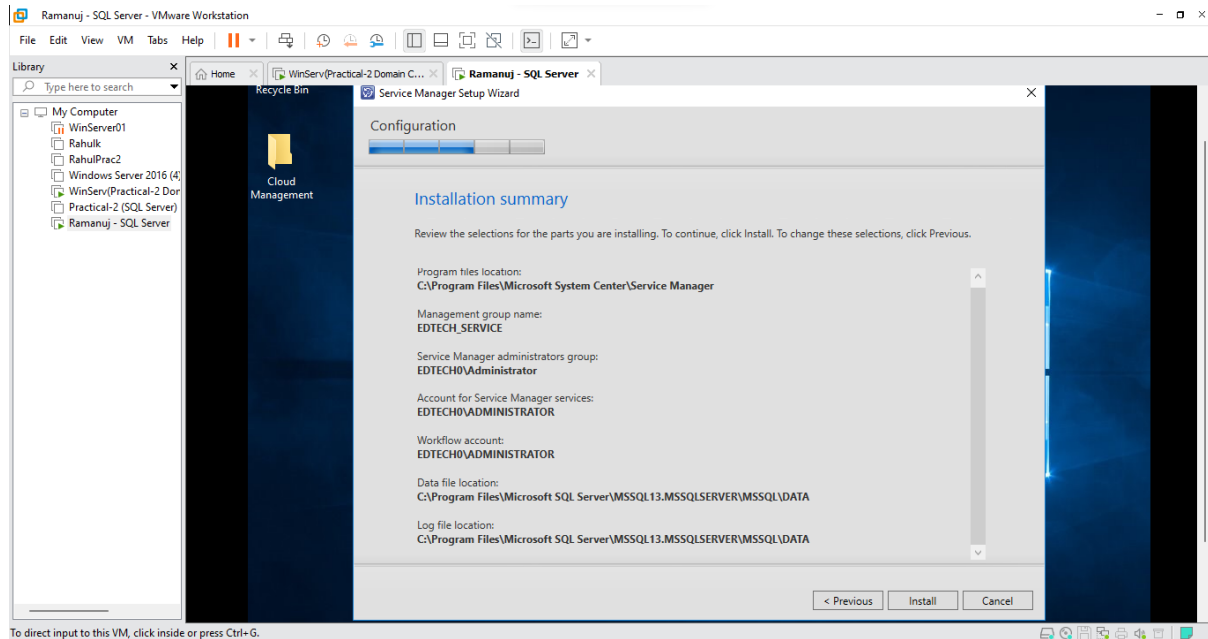

- Service Management Server will start installing

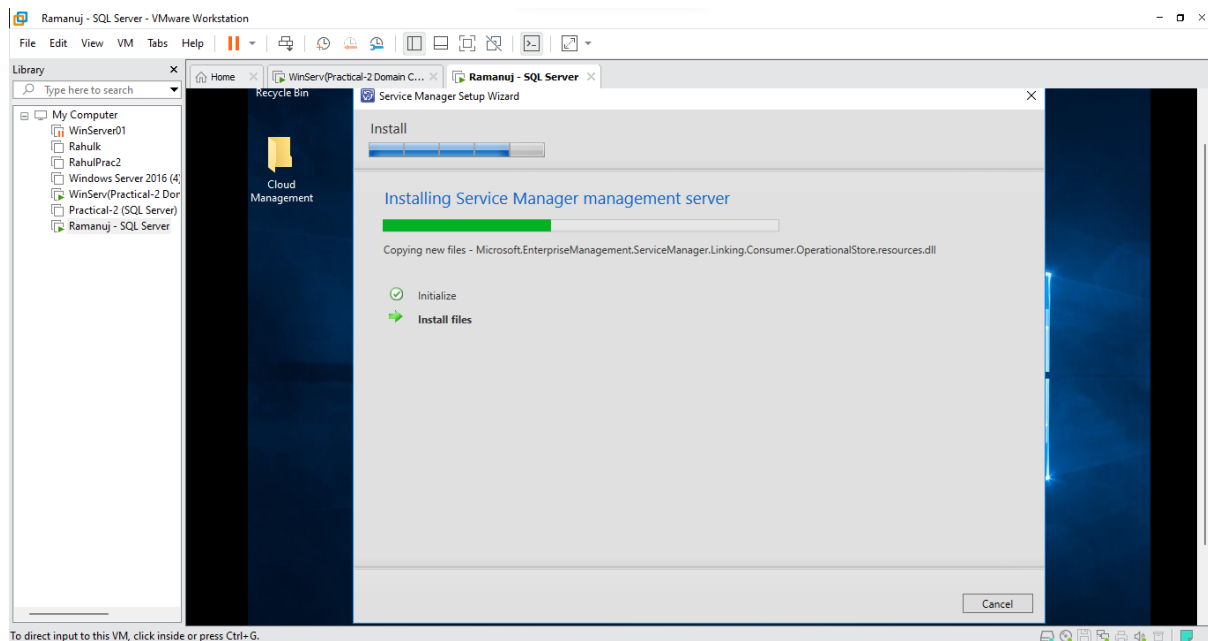


- The service management server is successfully created.

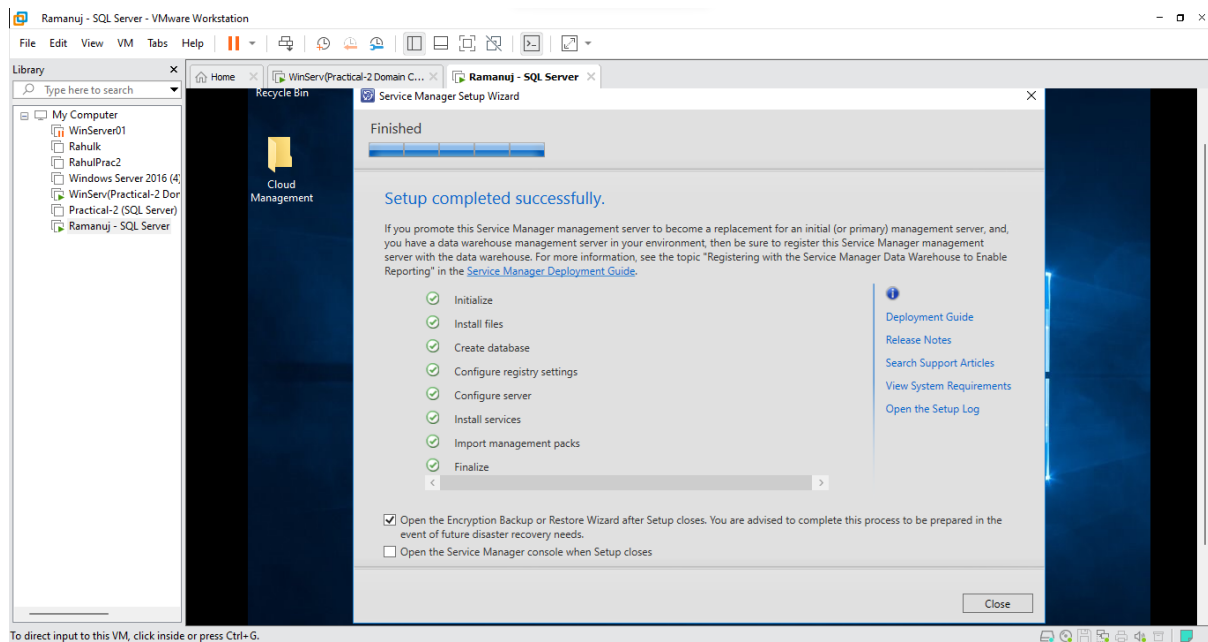


Step 7: Installing SQL Server Reporting Services


- Click on the **SQLSERVERREPORTINGSERVICES** installer

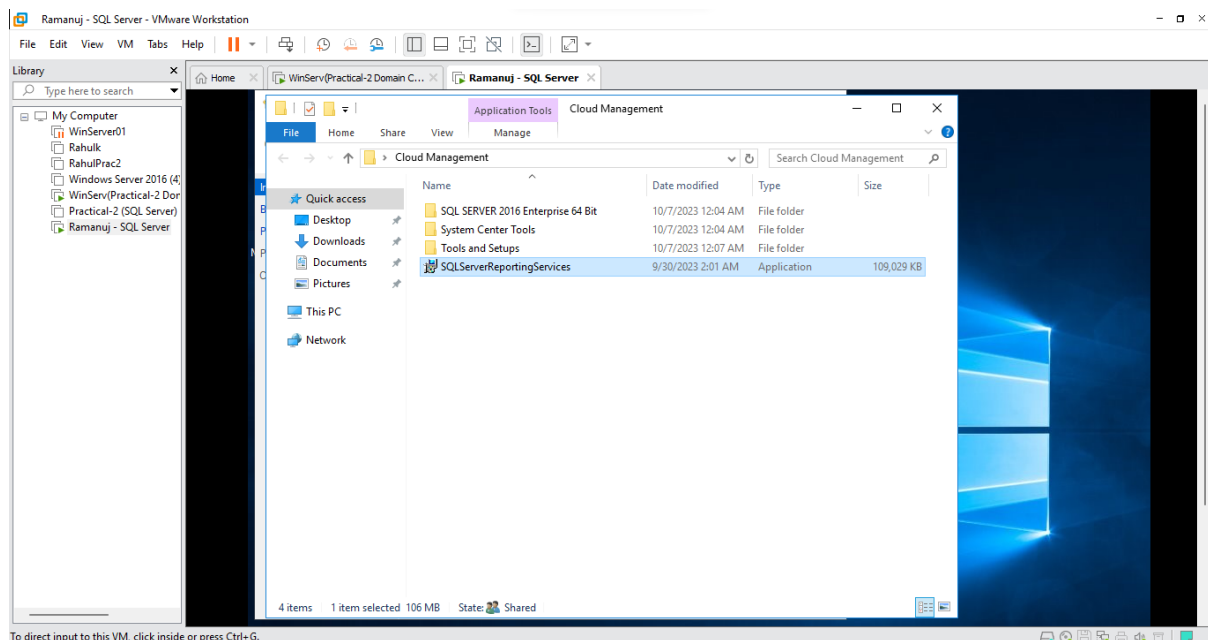


- Click on Install **Reporting Services**

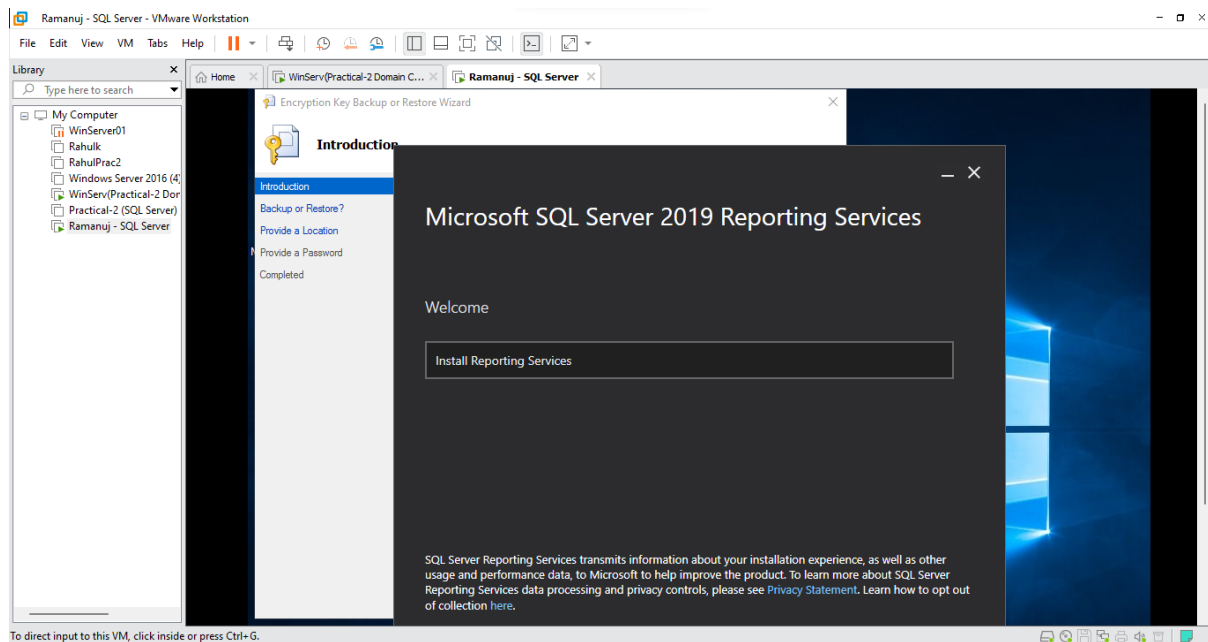


- Keep default values and Click **Next**

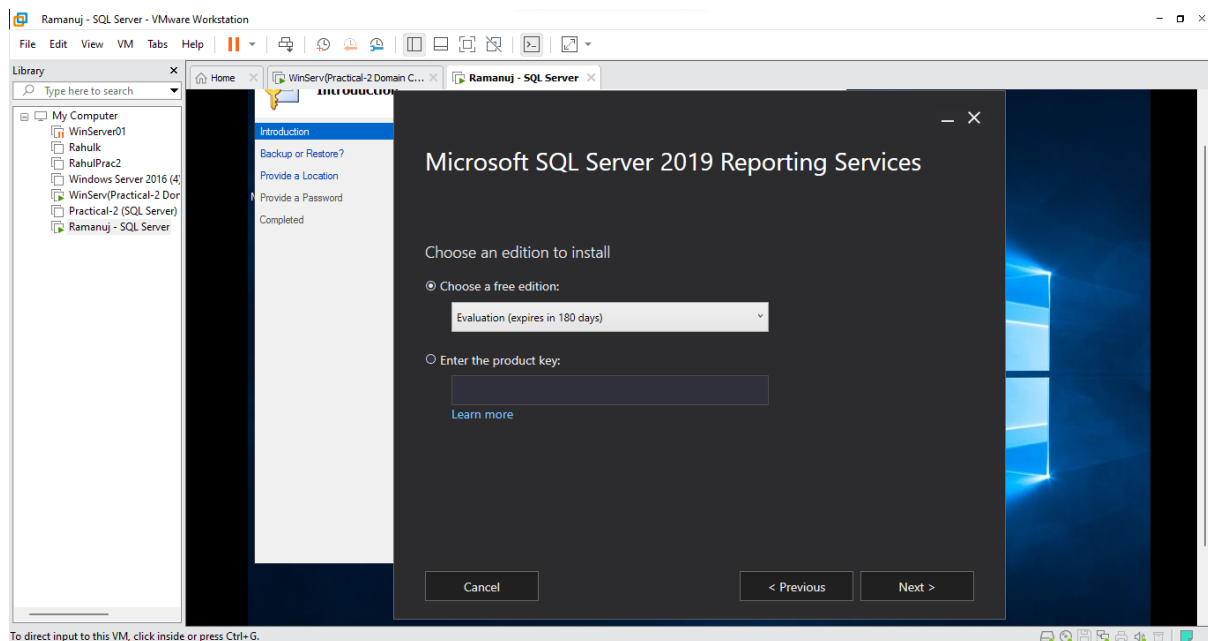


- Select **I accept these license terms** and Click **Next**

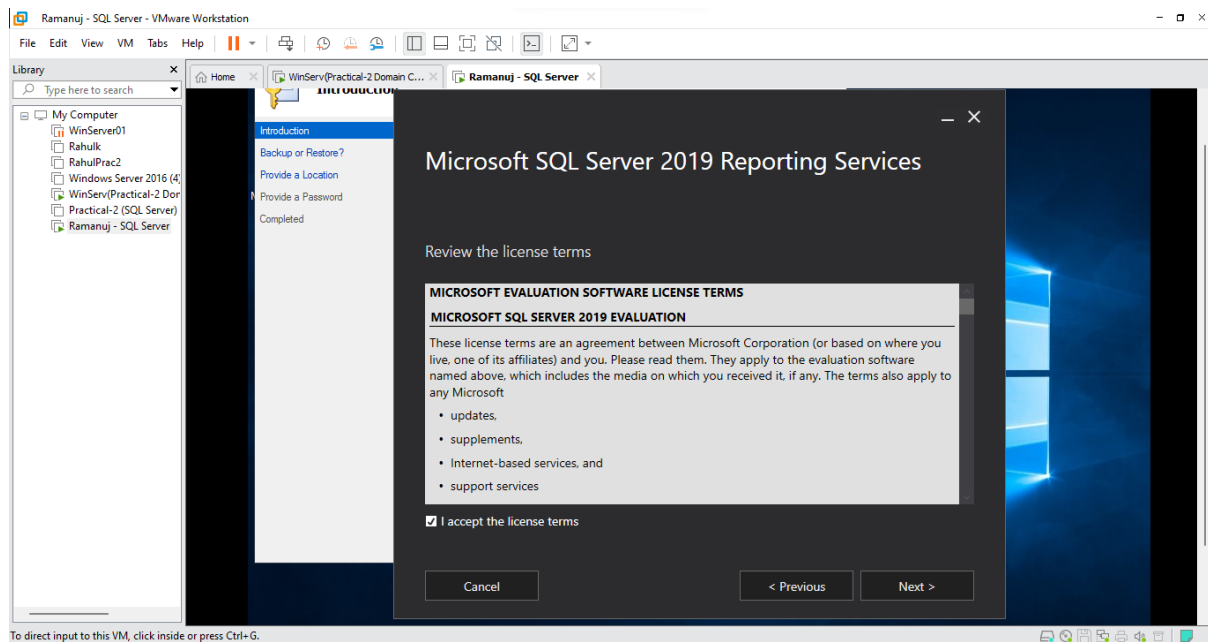


- Click **Next**

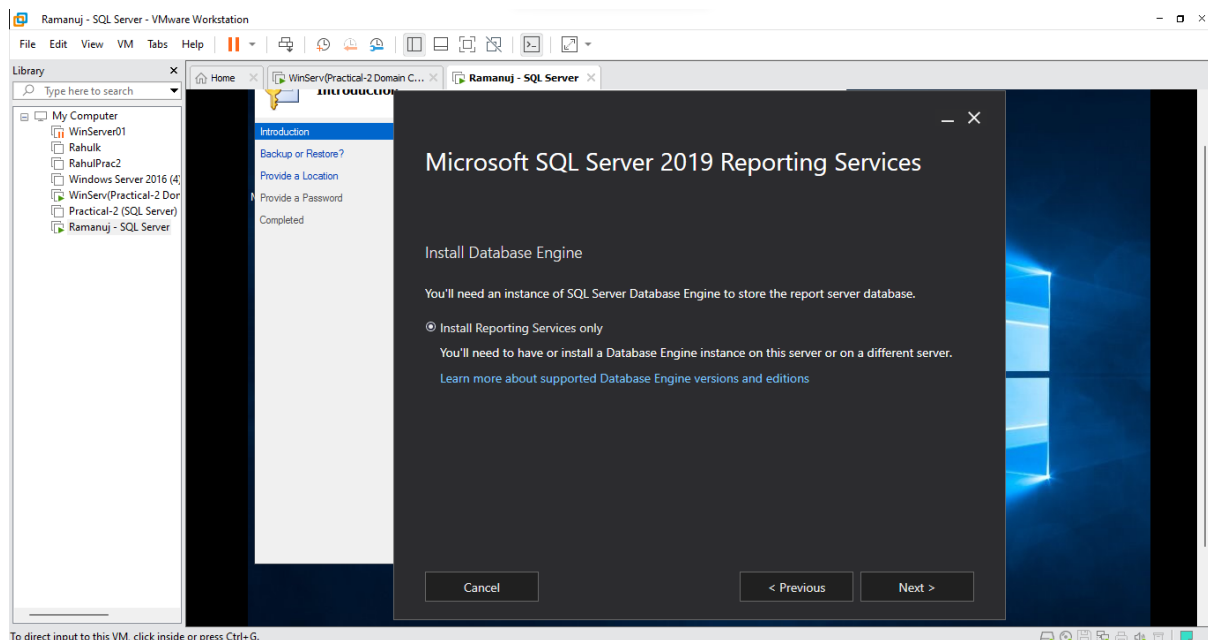


- Keep default path and Click **Install**

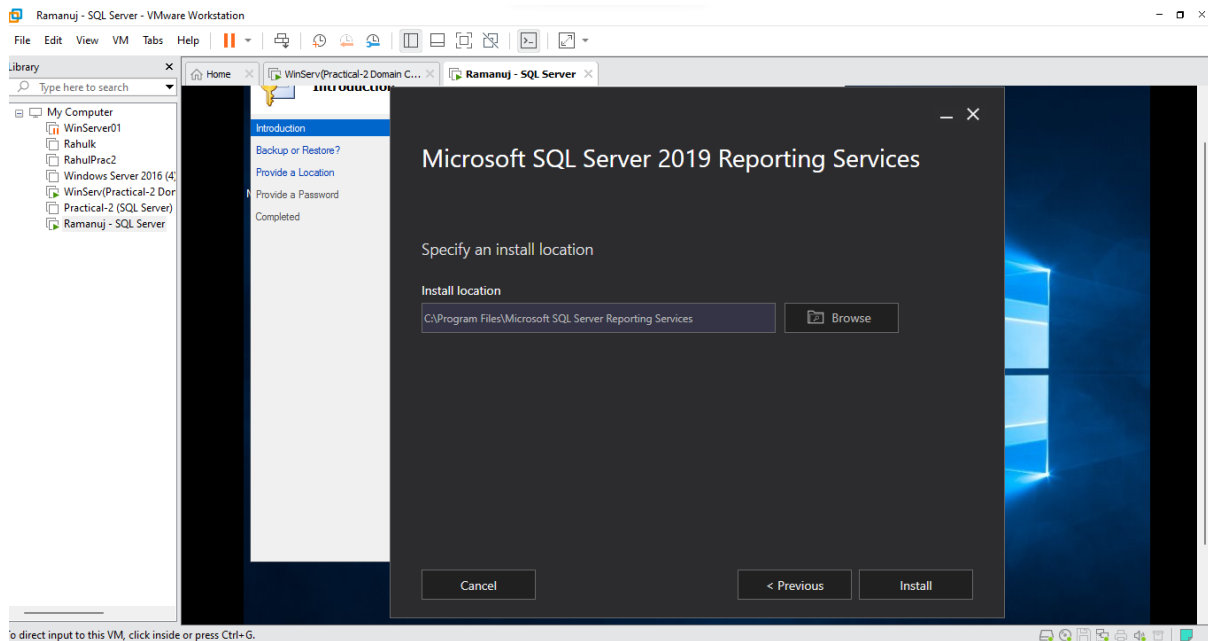


- Reporting Services will start installing

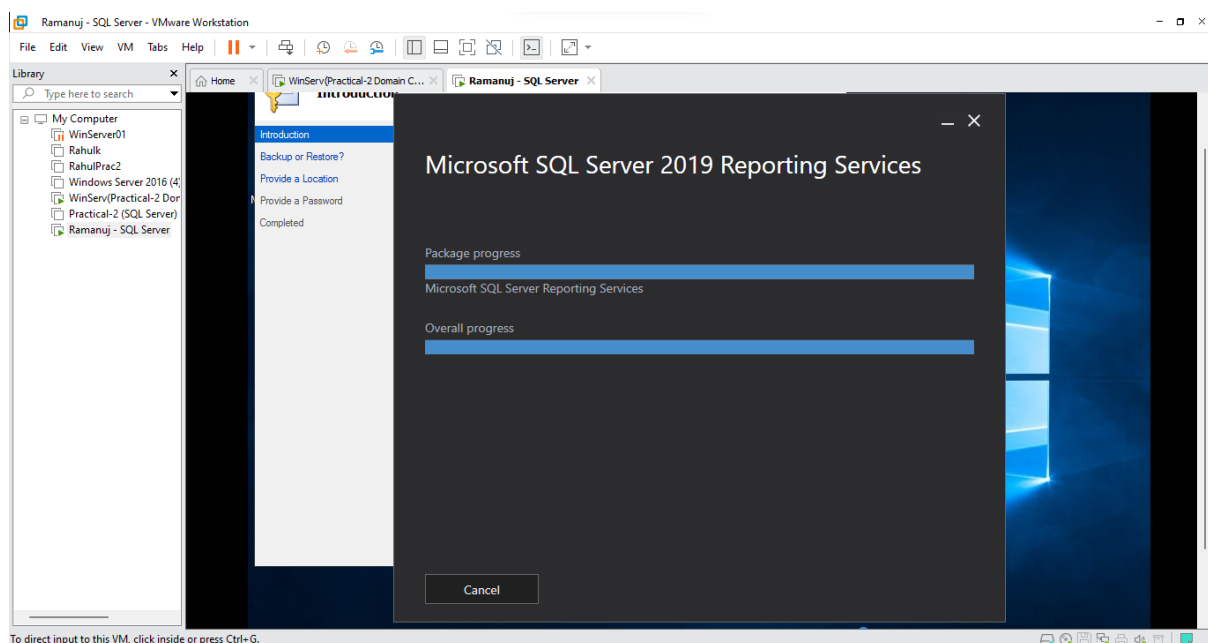


- After completion Click on **Configure Report Server**

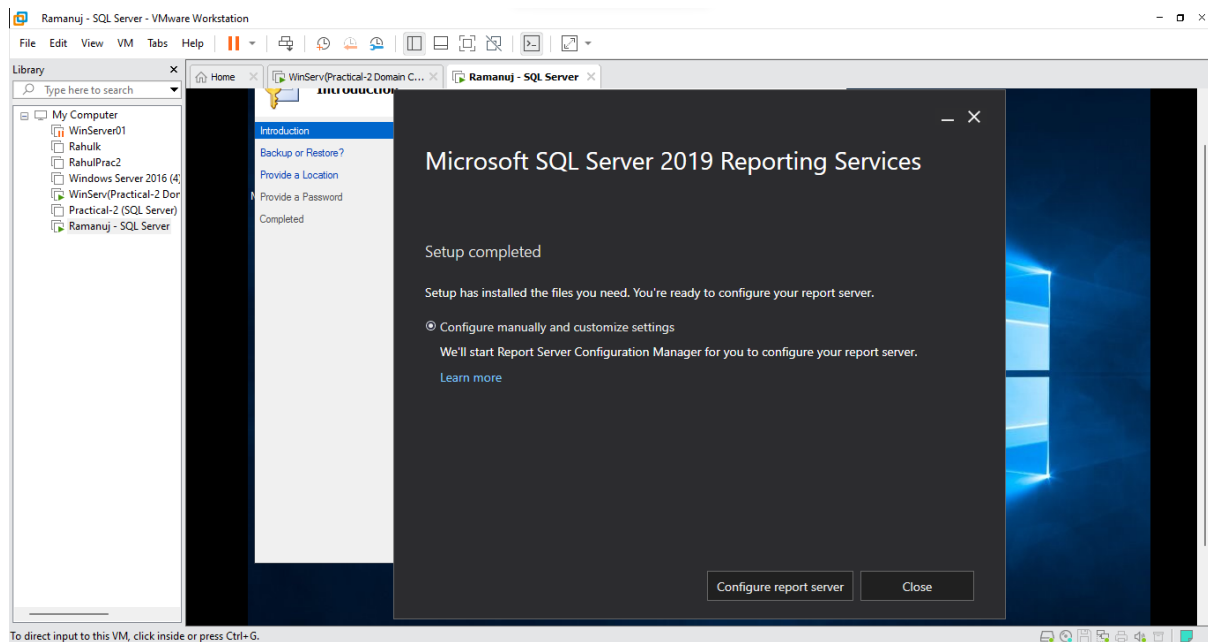


- Keep default values and Click on **Connect**

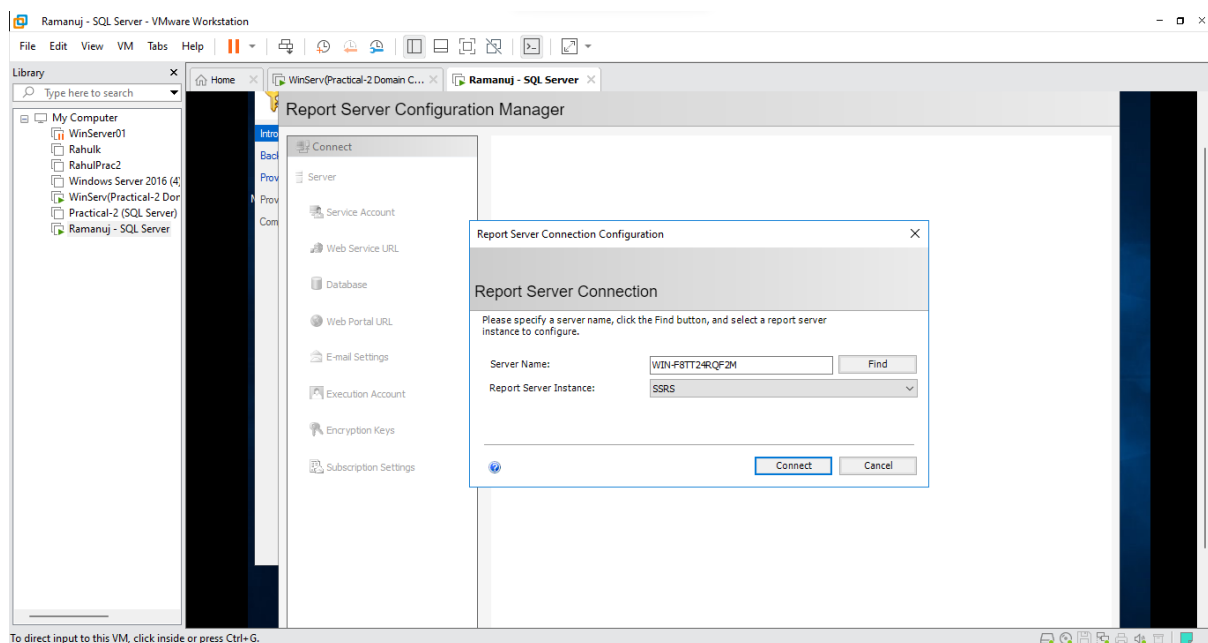


- Select **Service Account**, within service account in **Use built-in account**
Select **Network Service** and Click **Apply**

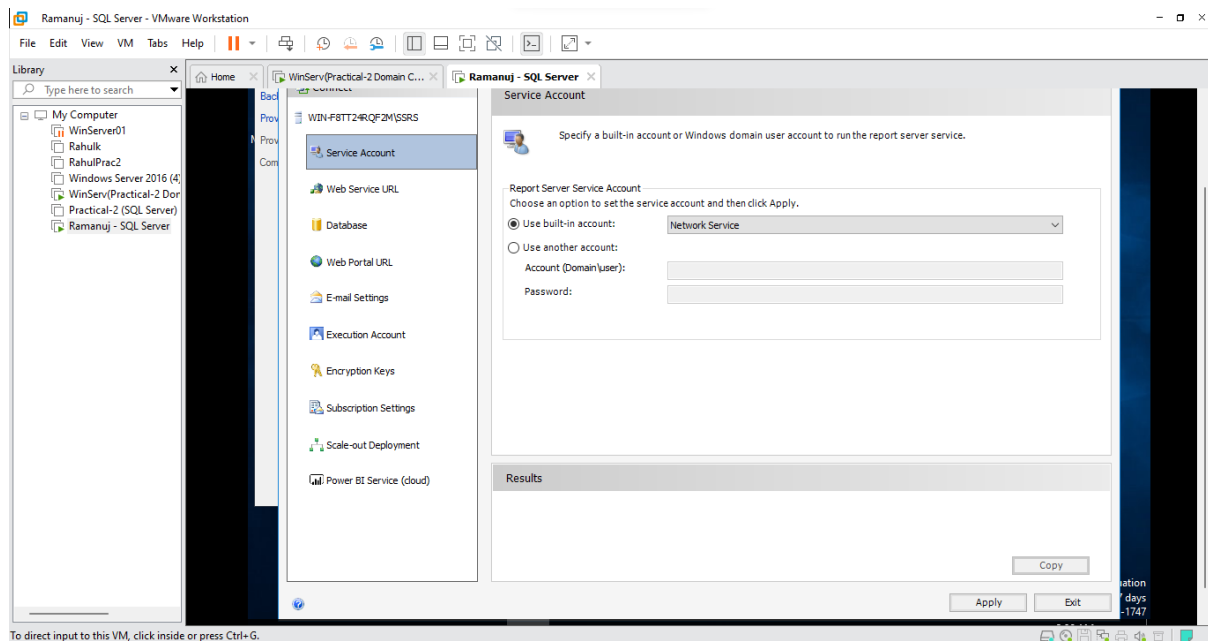


- Select **Web Service URL**, Change the Virtual Directory Value to **ReportServer1** and Click **Apply**

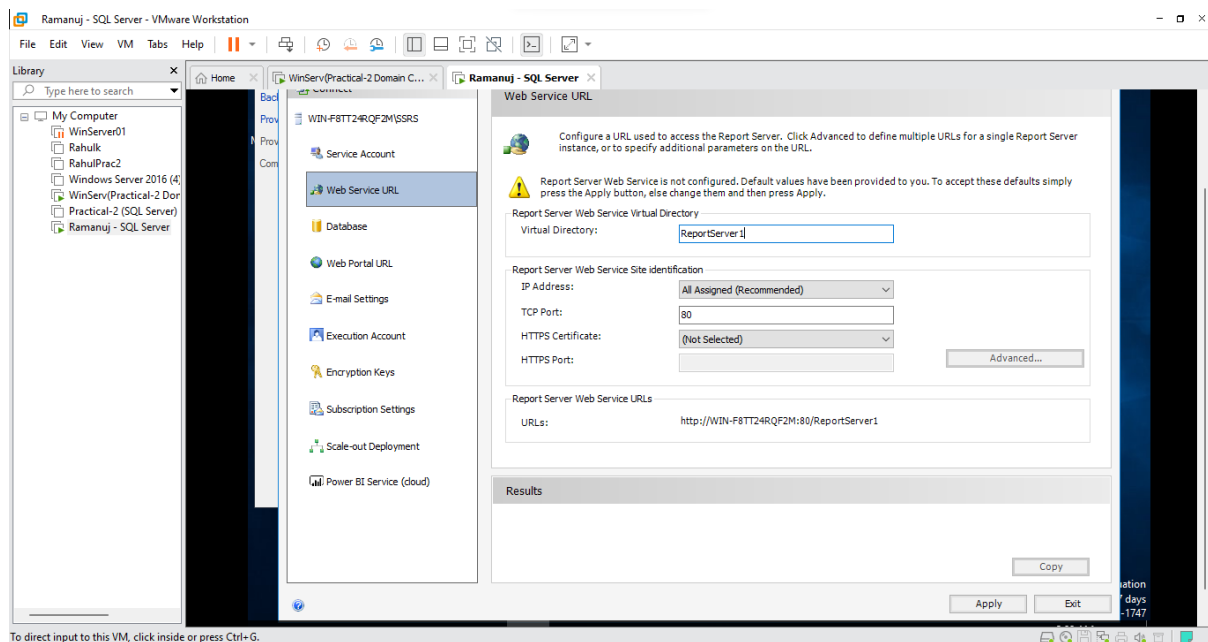


- Select **Database** and Click on **Change Database**

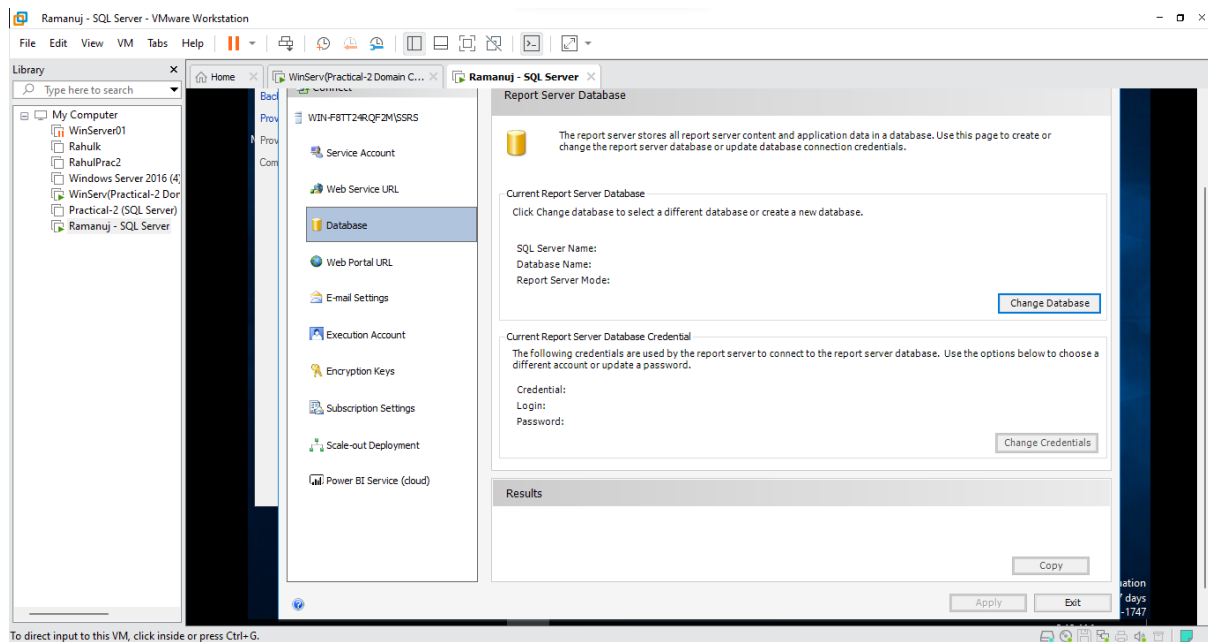


- Keep default values and Click **Next**

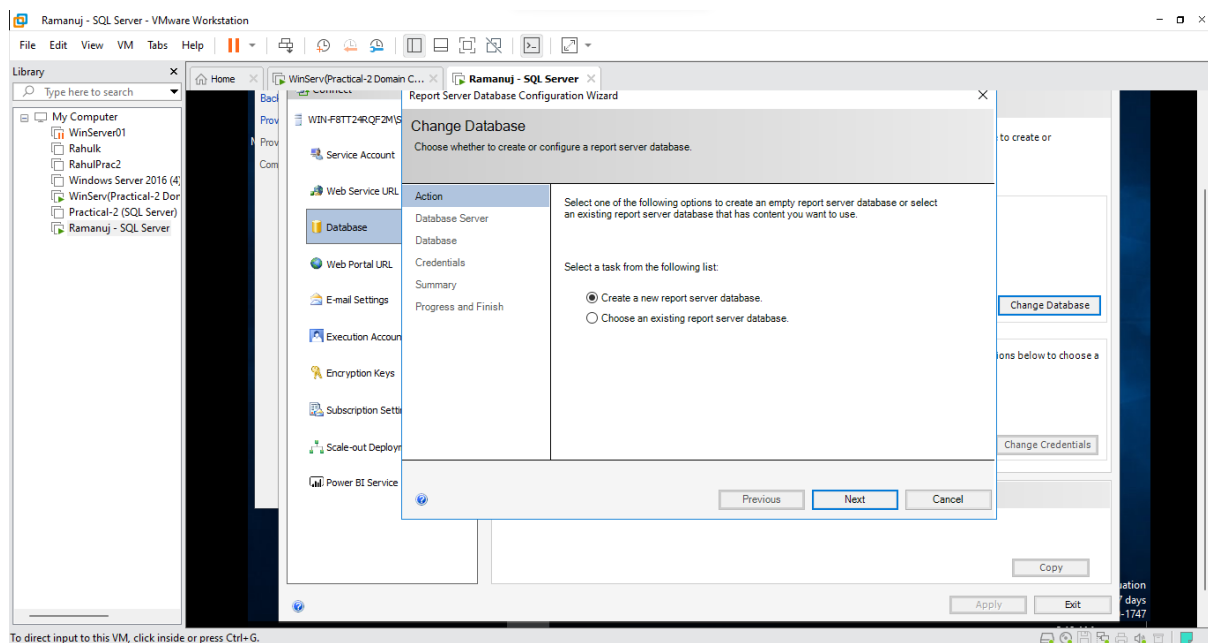


- Keep default values, Click on **Test Connection** when successful Click on **Next**

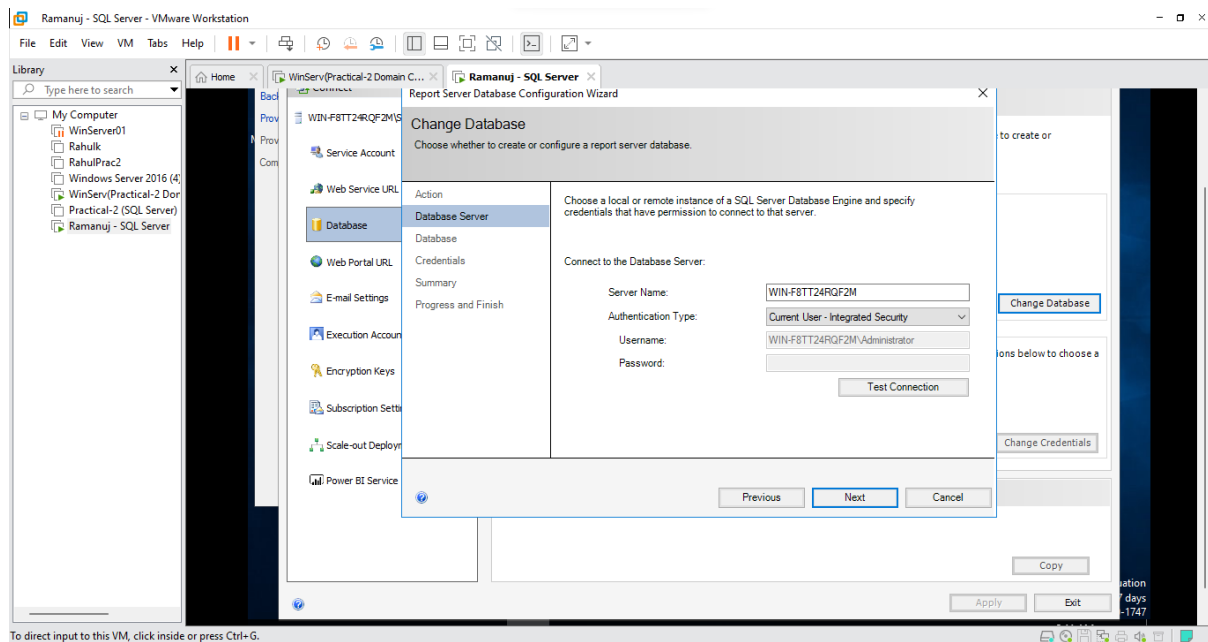


- Change Database name to **ReportServer1** and Click **Next**

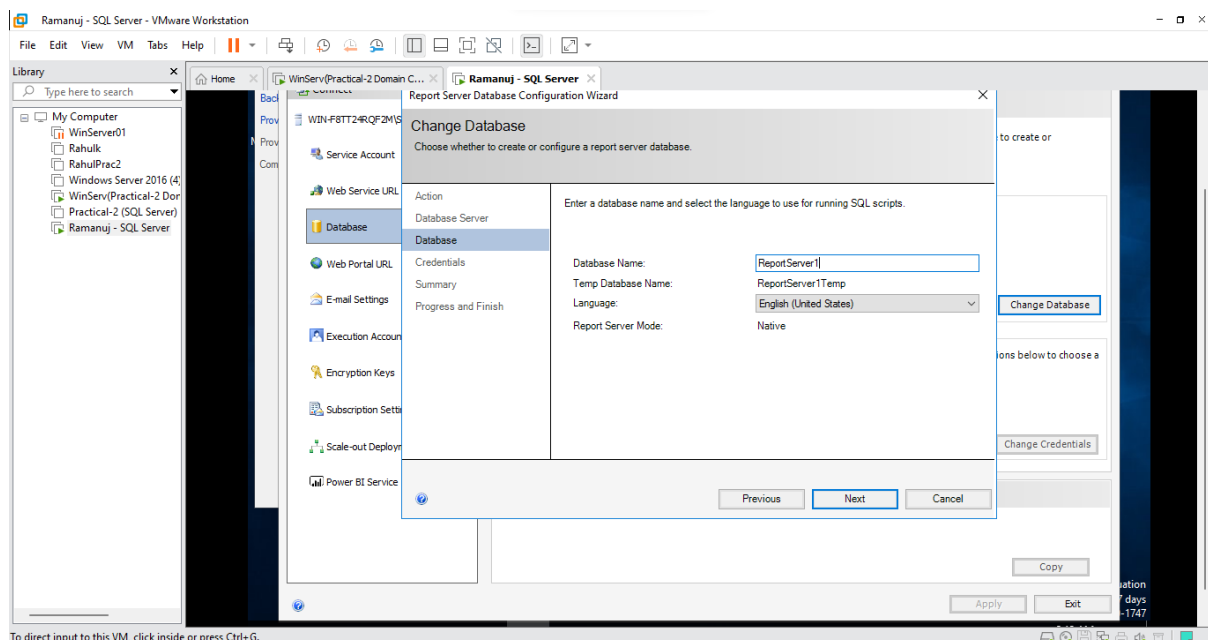


- Keep default values and Click **Next**

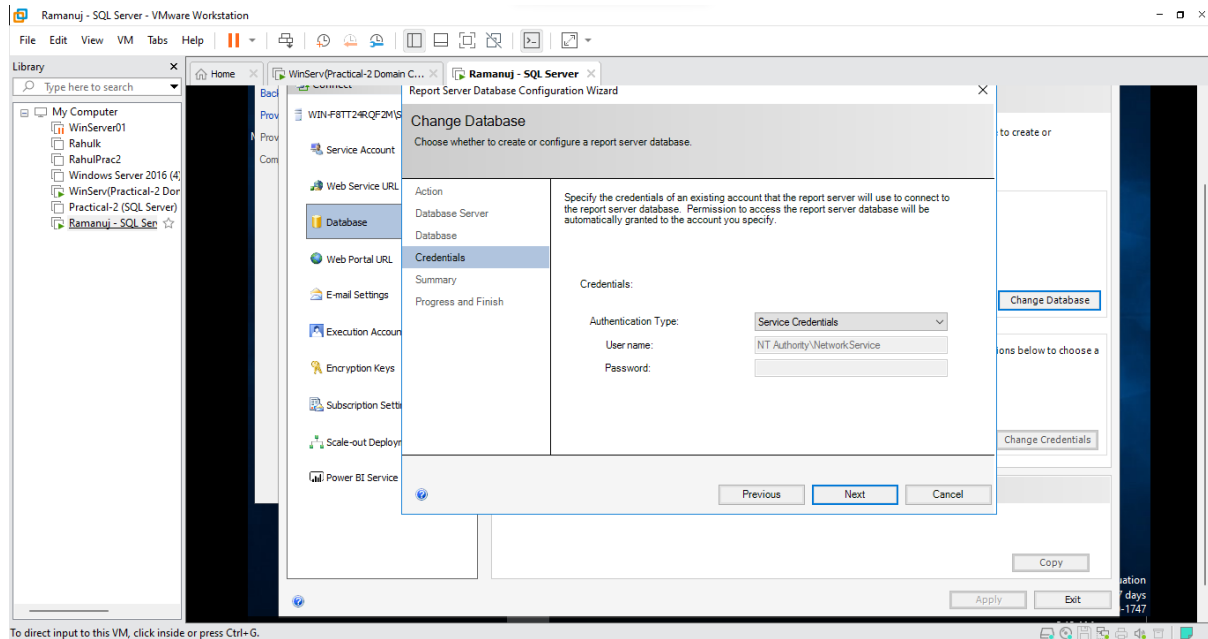


- Click **Next**

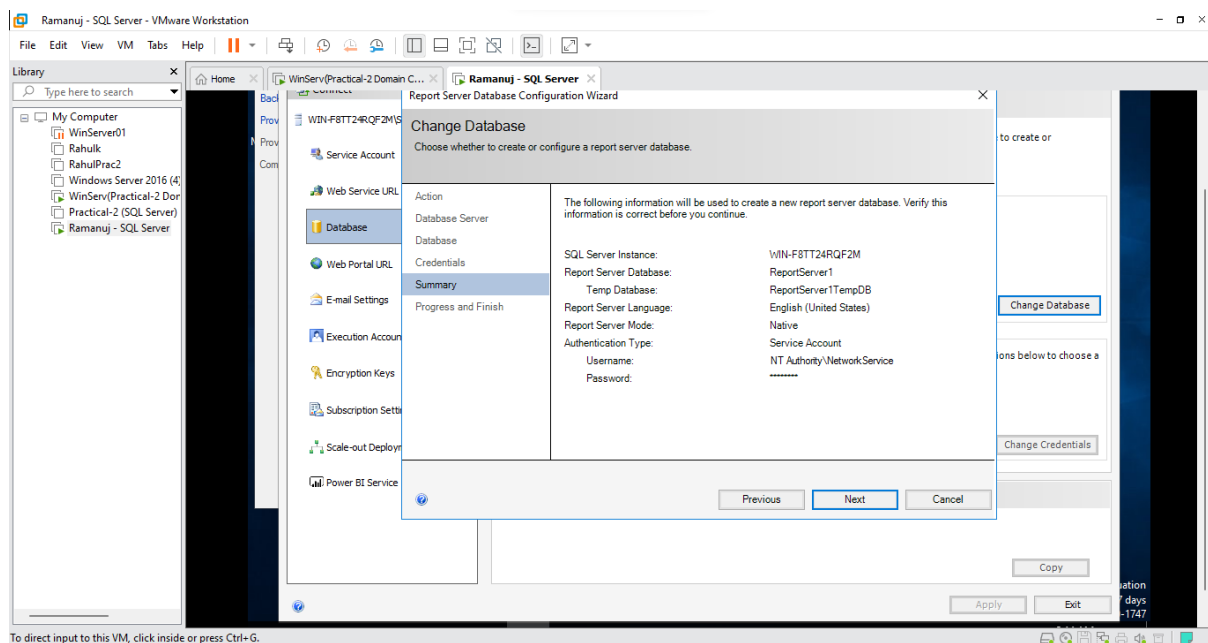


- Database configuration will install, after installation Click on **Finish**

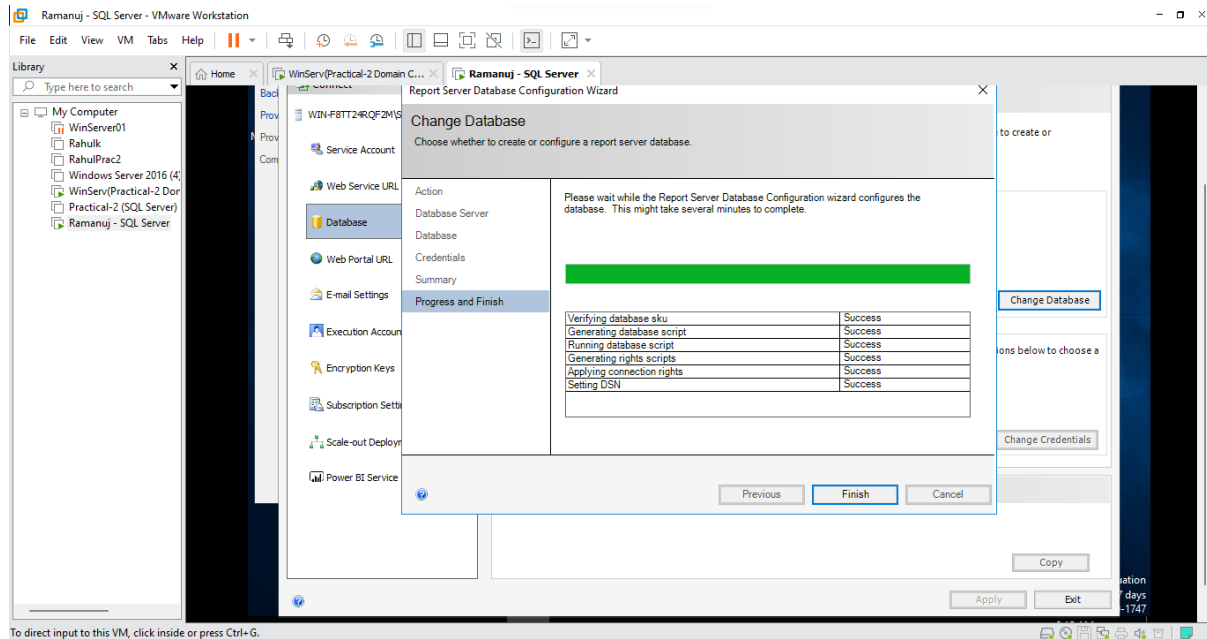


- Select **Web Portal URL** and keep a copy of the **url** on which your reports will be shown.

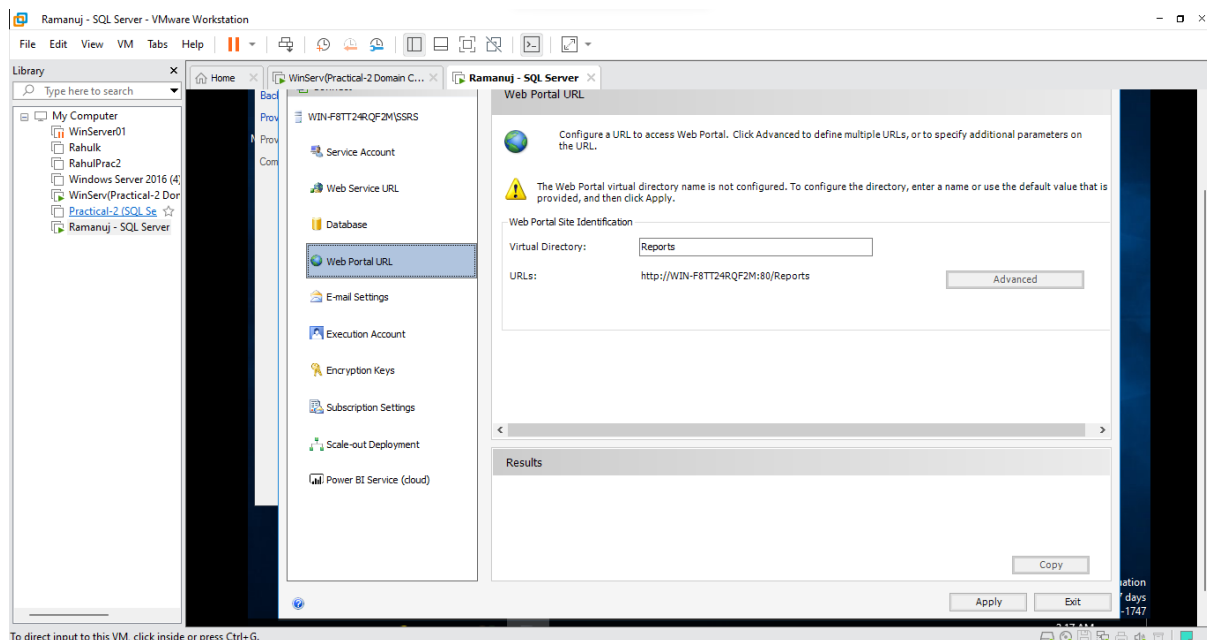


- Within your VM's Directory create a new folder named **Backup**
- Select **Encryption Keys** and Click on **Backup**

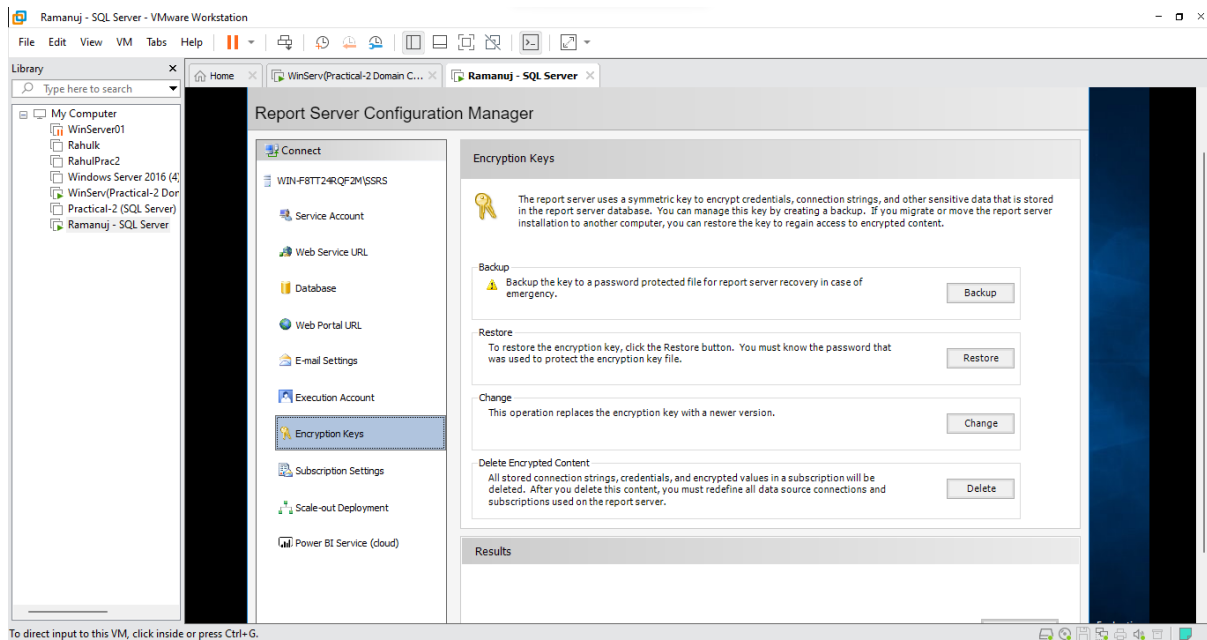


- Browse the folder that you just created and save a new file under any name (Here it is ReportServer1) and give it a password and Click **Ok**

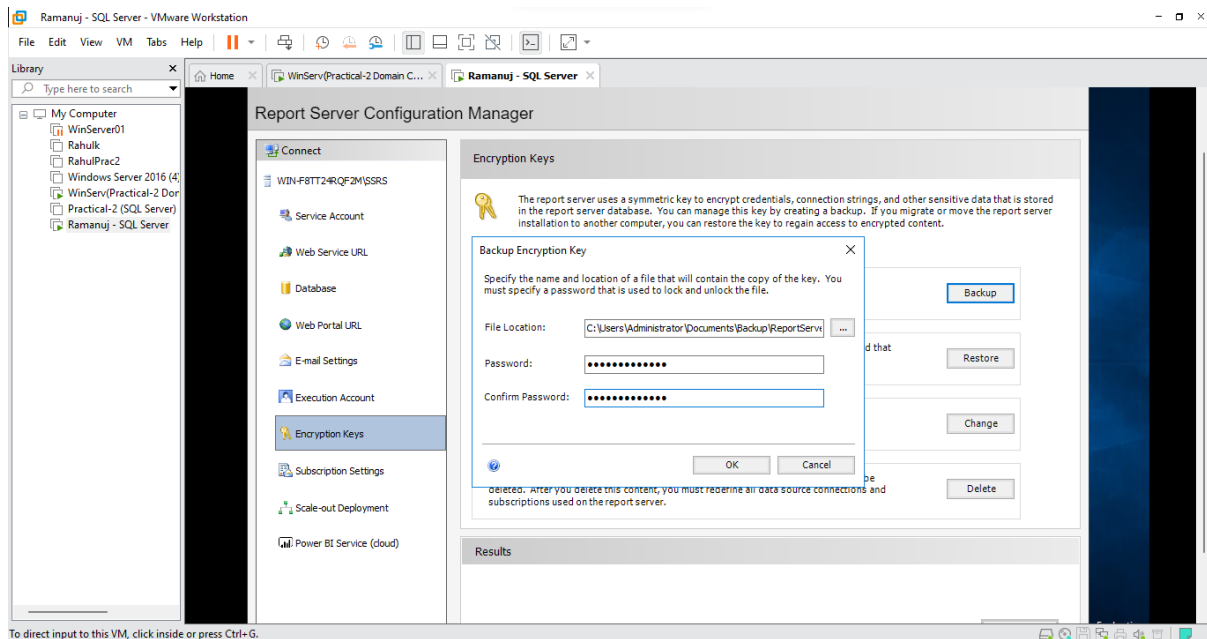


- Now go back to the SCSM setup and continue from Encryption Key Backup, Click **Next**

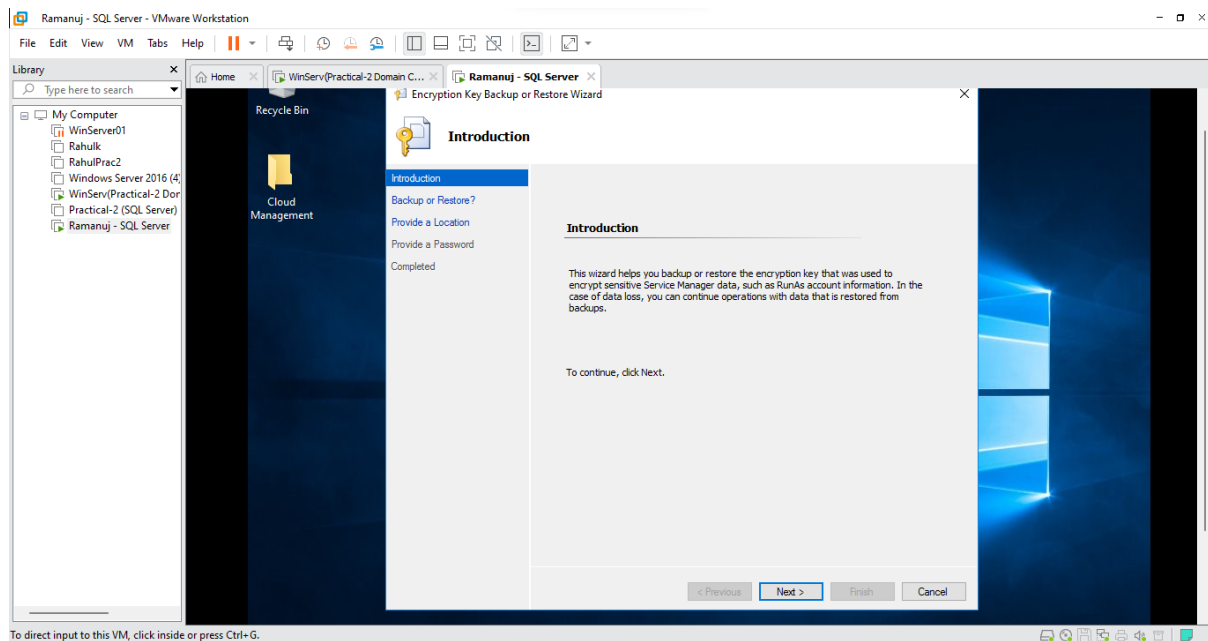


- Keep default values and Click **Next**

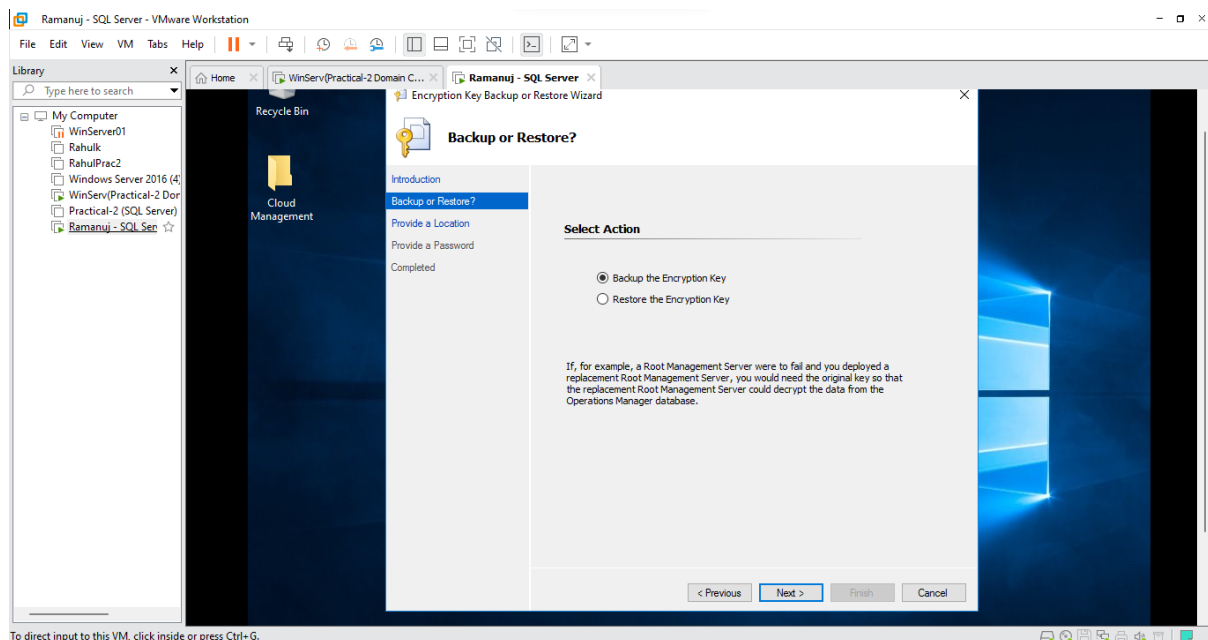


- Click on **Browse** and Select the Backup that created a few steps back (Here it is ReportServer1) and Click **Next**

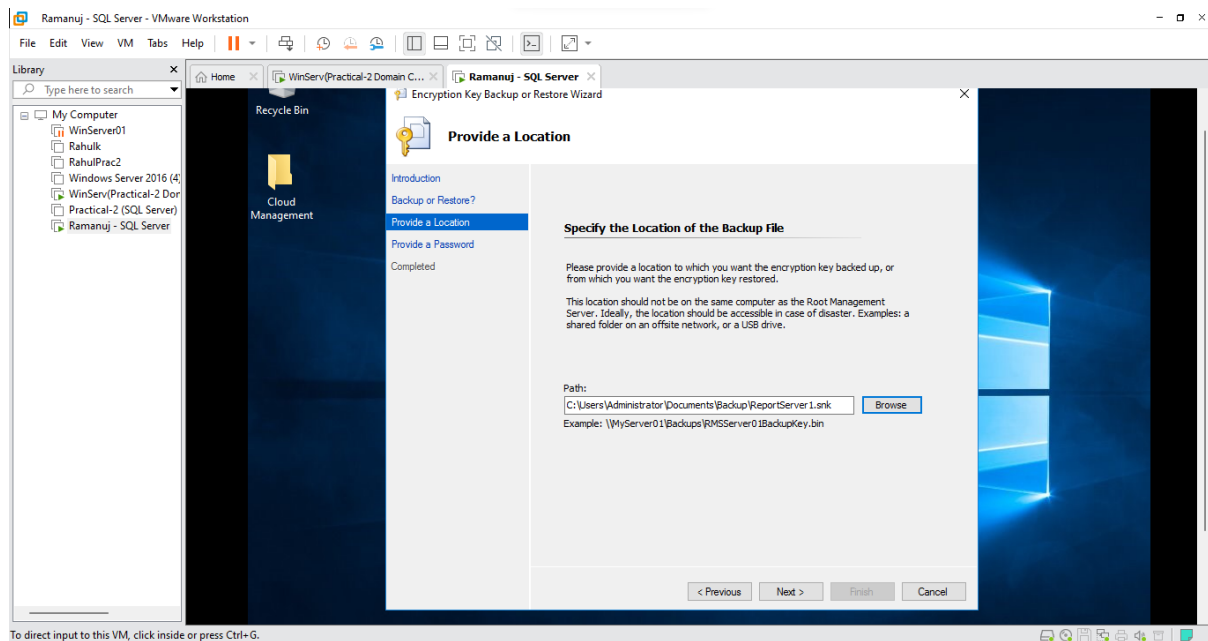

- Enter the password and Click **Next**

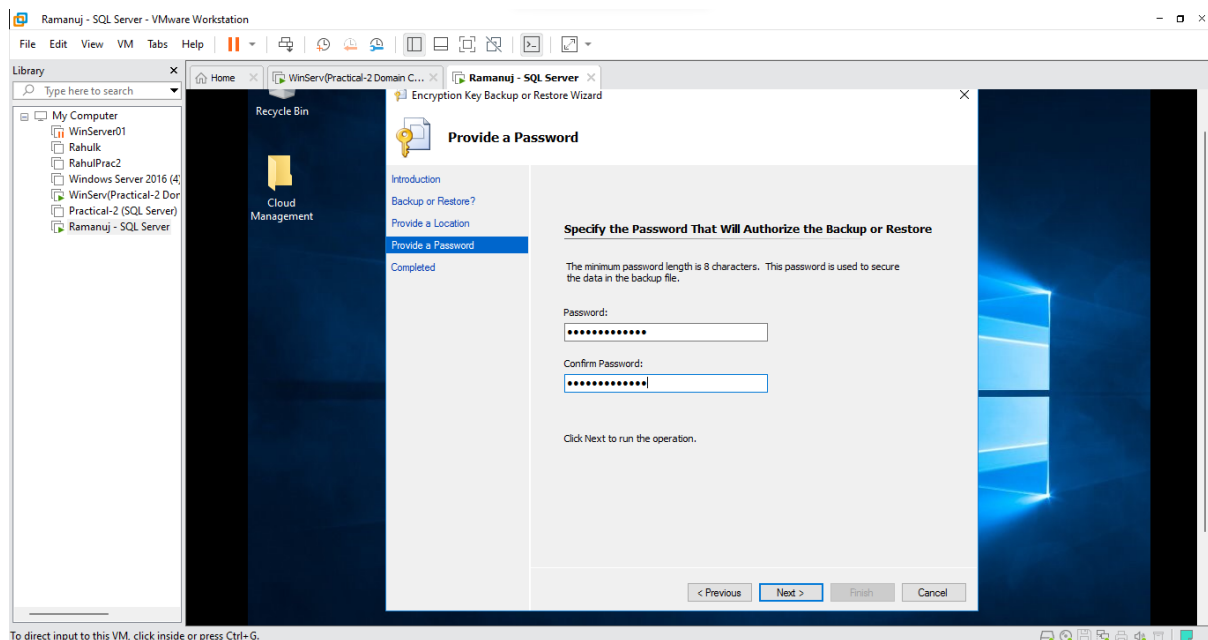

- Click on **Finish**

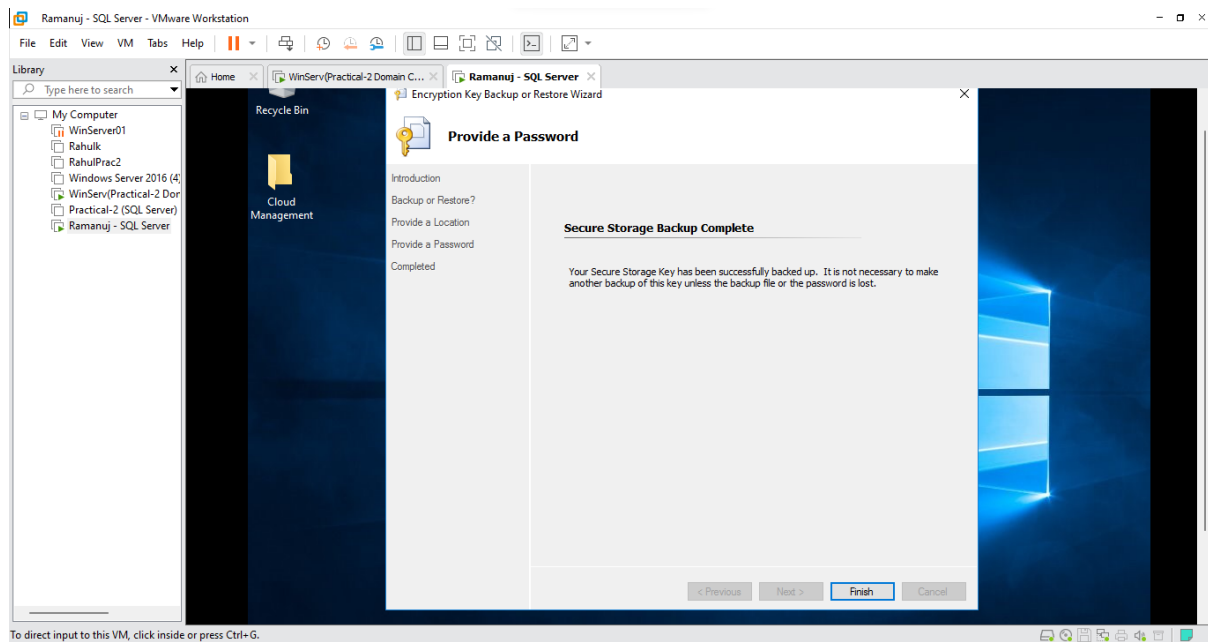

- Now within your SSMS you can see the new database that has been created

